

ASME B30.5-2007
(Revision of ASME B30.5-2004)

Mobile and Locomotive Cranes

**Safety Standard for Cableways, Cranes, Derricks, Hoists,
Hooks, Jacks, and Slings**

AN AMERICAN NATIONAL STANDARD



**The American Society of
Mechanical Engineers**

ASME B30.5-2007
(Revision of ASME B30.5-2004)

Mobile and Locomotive Cranes

**Safety Standard for Cableways, Cranes, Derricks, Hoists,
Hooks, Jacks, and Slings**

AN AMERICAN NATIONAL STANDARD



**The American Society of
Mechanical Engineers**

Three Park Avenue • New York, NY 10016

Date of Issuance: March 7, 2008

The next edition of this Standard is scheduled for publication in 2010. There will be no addenda issued to this edition.

ASME issues written replies to inquiries concerning interpretations of technical aspects of this Standard. Interpretations are published on the ASME Web site under the Committee Pages at <http://cstools.asme.org/> as they are issued, and will also be published within the next edition of the Standard.

ASME is the registered trademark of The American Society of Mechanical Engineers.

This code or standard was developed under procedures accredited as meeting the criteria for American National Standards. The Standards Committee that approved the code or standard was balanced to assure that individuals from competent and concerned interests have had an opportunity to participate. The proposed code or standard was made available for public review and comment that provides an opportunity for additional public input from industry, academia, regulatory agencies, and the public-at-large.

ASME does not “approve,” “rate,” or “endorse” any item, construction, proprietary device, or activity.

ASME does not take any position with respect to the validity of any patent rights asserted in connection with any items mentioned in this document, and does not undertake to insure anyone utilizing a standard against liability for infringement of any applicable letters patent, nor assume any such liability. Users of a code or standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, is entirely their own responsibility.

Participation by federal agency representative(s) or person(s) affiliated with industry is not to be interpreted as government or industry endorsement of this code or standard.

ASME accepts responsibility for only those interpretations of this document issued in accordance with the established ASME procedures and policies, which precludes the issuance of interpretations by individuals.

No part of this document may be reproduced in any form,
in an electronic retrieval system or otherwise,
without the prior written permission of the publisher.

The American Society of Mechanical Engineers
Three Park Avenue, New York, NY 10016-5990

Copyright © 2008 by
THE AMERICAN SOCIETY OF MECHANICAL ENGINEERS
All rights reserved
Printed in U.S.A.

CONTENTS

Foreword	v
Committee Roster	vii
B30 Standard Introduction	ix
Summary of Changes	xii
Chapter 5-0 Scope, Definitions, and References	1
Section 5-0.1 Scope of B30.5	1
Section 5-0.2 Definitions	1
Section 5-0.3 References	7
Chapter 5-1 Construction and Characteristics	8
Section 5-1.1 Load Ratings	8
Section 5-1.2 Stability (Backward and Forward)	9
Section 5-1.3 Boom Hoist, Load Hoist, and Telescoping Boom Mechanisms	14
Section 5-1.4 Swing Mechanism	15
Section 5-1.5 Crane Travel	15
Section 5-1.6 Controls	15
Section 5-1.7 Ropes and Reeving Accessories	18
Section 5-1.8 Cabs	19
Section 5-1.9 General Requirements	20
Section 5-1.10 Structural Performance	21
Section 5-1.11 Cranes Used for Other Than Lifting Service	22
Chapter 5-2 Inspection, Testing, and Maintenance	23
Section 5-2.1 Inspection — General	23
Section 5-2.2 Testing	24
Section 5-2.3 Maintenance	25
Section 5-2.4 Rope Inspection, Replacement, and Maintenance	25
Chapter 5-3 Operation	28
Section 5-3.1 Qualifications and Responsibilities	28
Section 5-3.2 Operating Practices	32
Section 5-3.3 Signals	35
Section 5-3.4 Miscellaneous	35
Figures	
1 Commercial Truck-Mounted Crane — Telescoping Boom	1
2 Commercial Truck-Mounted Crane — Nontelelescoping Boom	2
3 Crawler Crane	2
4 Crawler Crane — Telescoping Boom	2
5 Locomotive Crane	3
6 Wheel-Mounted Crane (Multiple Control Stations)	3
7 Wheel-Mounted Crane — Telescoping Boom (Multiple Control Stations)	4
8 Wheel-Mounted Crane (Single Control Station)	4
9 Wheel-Mounted Crane — Telescoping Boom (Single Control Station, Rotating)	4
10 Wheel-Mounted Crane — Telescoping Boom (Single Control Station, Fixed)	5
11 Work Areas	10
12 Telescopic Boom Crane Control Diagram	16
13 Nontelelescopic Boom Crane Control Diagram	17

14	Dead Ending Rope in a Socket	19
15	Core Failure in 19 × 7 Rotation-Resistant Rope	26
16	Examples of Typical Unequal Outrigger Extension Positions	34
17	Standard Hand Signals for Controlling Crane Operations	36
18	Danger Zone for Cranes and Lifted Loads Operating Near Electrical Transmission Lines	39
Tables		
1	Crane Load Ratings	8
2	Required Clearance for Normal Voltage in Operation Near High-Voltage Power Lines and Operation in Transit With No Load and Boom or Mast Lowered	41

FOREWORD

This American National Standard, Safety Standard for Cableways, Cranes, Derricks, Hoists, Hooks, Jacks, and Slings, has been developed under the procedures accredited by the American National Standards Institute (formerly the United States of America Standards Institute). This Standard had its beginning in December 1916 when an eight-page Code of Safety Standards for Cranes, prepared by an ASME Committee on the Protection of Industrial Workers, was presented to the annual meeting of the ASME.

Meetings and discussions regarding safety on cranes, derricks, and hoists were held from 1920 to 1925, involving the ASME Safety Code Correlating Committee, the Association of Iron and Steel Electrical Engineers, the American Museum of Safety, the American Engineering Standards Committee (later changed to American Standards Association and subsequently to the USA Standards Institute), Department of Labor — State of New Jersey, Department of Labor and Industry — State of Pennsylvania, and the Locomotive Crane Manufacturers Association. On June 11, 1925, the American Engineering Standards Committee approved the ASME Safety Code Correlating Committee's recommendation and authorized the project with the U.S. Department of the Navy, Bureau of Yards and Docks, and ASME as sponsors.

In March 1926, invitations were issued to 50 organizations to appoint representatives to a Sectional Committee. The call for organization of this Sectional Committee was sent out October 2, 1926, and the committee organized November 4, 1926, with 57 members representing 29 national organizations. The Safety Code for Cranes, Derricks, and Hoists, ASA B30.2-1943, was created from the eight-page document referred to in the first paragraph. This document was reaffirmed in 1952 and widely accepted as a safety standard.

Due to changes in design, advancement in techniques, and general interest of labor and industry in safety, the Sectional Committee, under the joint sponsorship of ASME and the Naval Facilities Engineering Command, U.S. Department of the Navy, was reorganized as an American National Standards Committee on January 31, 1962, with 39 members representing 27 national organizations.

The format of the previous code was changed so that separate volumes (each complete as to construction and installation; inspection, testing, and maintenance; and operation) would cover the different types of equipment included in the scope of B30.

In 1982, the Committee was reorganized as an Accredited Organization Committee, operating under procedures developed by ASME and accredited by the American National Standards Institute.

This Standard presents a coordinated set of rules that may serve as a guide to government and other regulatory bodies and municipal authorities responsible for the guarding and inspection of the equipment falling within its scope. The suggestions leading to accident prevention are given both as mandatory and advisory provisions; compliance with both types may be required by employers of their employees.

In case of practical difficulties, new developments, or unnecessary hardship, the administrative or regulatory authority may grant variances from the literal requirements or permit the use of other devices or methods, but only when it is clearly evident that an equivalent degree of protection is thereby secured. To secure uniform application and interpretation of this Standard, administrative or regulatory authorities are urged to consult the B30 Committee, in accordance with the format described in Section III of the Introduction, before rendering decisions on disputed points.

Safety codes and standards are intended to enhance public safety. Revisions result from committee consideration of factors such as technological advances, new data, and changing environmental and industry needs. Revisions do not imply that previous editions were inadequate.

Suggestions for the improvement of this volume of the Standard are welcome. They should be addressed to The American Society of Mechanical Engineers; Secretary, B30 Main Committee; Three Park Avenue; New York, NY 10016-5990.

This volume of the Standard, which was approved by the B30 Committee and by ASME, was approved by ANSI and designated as an American National Standard on November 20, 2007.

ASME B30 COMMITTEE

Safety Standards for Cableways, Cranes, Derricks, Hoists, Hooks, Jacks, and Slings

(The following is the roster of the Committee at the time of approval of this Standard.)

STANDARDS COMMITTEE OFFICERS

P. S. Zorich, *Chair*
B. D. Closson, *Vice Chair*
J. D. Wendler, *Secretary*

STANDARDS COMMITTEE PERSONNEL

N. E. Andrew , Northrop Grumman Ship Systems	C. E. Lucas , The Crosby Group
W. T. Hargrove , <i>Alternate</i> , ManTech International Corp.	P. A. Boeckman , <i>Alternate</i> , The Crosby Group
R. E. Bluff IV , Gantry Constructors, Inc.	E. K. Marburg , Columbus McKinnon Corp.
R. J. Bolen , Consultant	R. J. Burkey , <i>Alternate</i> , Columbus McKinnon Corp.
G. B. Hetherston , <i>Alternate</i> , E. I. du Pont de Nemours & Co., Inc.	L. D. Means , Means Engineering and Consulting/Wire Rope Technical Board
A. D. Brown , A. D. Brown Co.	D. M. Sleightholm , <i>Alternate</i> , Bridon America Corp.
W. J. Smith, Jr. , <i>Alternate</i> , Nations Builders Insurance Services	K. J. Miller , Jacobs Engineering Group
M. E. Brunet , Manitowoc Crane Group	D. W. Smith , <i>Alternate</i> , Chicago Bridge and Iron Co.
E. D. Fidler , <i>Alternate</i> , Grove Worldwide, Manitowoc Crane Group	G. L. Owens , Granite Construction Co.
T. A. Christensen , Liberty Mutual Insurance/Alliance of American Insurers	R. M. Parnell , Wire Rope Rigging Consultants/Industrial Training International
M. W. Mills , <i>Alternate</i> , Liberty Mutual Group	P. D. Sweeney , <i>Alternate</i> , General Dynamics, Electric Boat
B. D. Closson , Craft Forensic Services	J. T. Perkins , Ingersoll-Rand
T. L. Blanton , <i>Alternate</i> , NACB Group, Inc.	H. G. Leidich , <i>Alternate</i> , Leidich Consulting Services
J. P. Colletti , John P. Colletti & Associates, Inc.	D. W. Ritchie , St. Paul Companies
R. A. Dahlin , Walker Magnetics Group, Inc.	D. Daul , <i>Alternate</i> , Travelers Insurance
J. W. Downs, Jr. , <i>Alternate</i> , Downs Crane & Hoist Co., Inc.	W. P. Rollins , Consultant
L. D. DeMark , International Union of Operating Engineers	J. W. Rowland III , Consultant
A. J. Lusi , <i>Alternate</i> , International Union of Operating Engineers	J. C. Ryan , BOH Bros. Construction Co.
D. W. Eckstine , Eckstine & Associates	A. Ruud , <i>Alternate</i> , Atkinson Construction
R. J. Edwards , Schwing America, Inc.	D. Sayenga , The Cardon Management Group
D. R. Remus , <i>Alternate</i> , Reed Manufacturing Union of Operating Engineers	J. A. Gilbert , <i>Alternate</i> , Associated Wire Rope Fabricators
J. L. Gordon , Acco Chain and Lifting Products	G. W. Shields , Caterpillar, Inc.
N. C. Hargreaves , Power Crane and Shovel Association/Terex Corp.	R. G. Strain , Advanced Automation Technologies, Inc.
C. E. Imerman , <i>Alternate</i> , Link-Belt Construction Equipment	J. B. Hamill , <i>Alternate</i> , Advanced Automation Associates
J. J. Headley , Crane Institute of America, Inc.	A. R. Toth , Morris Material Handling
C. W. Ireland , National Oilwell	B. E. Weir, Jr. , Norris Brothers Co., Inc./National Erectors Association
A. Egging , <i>Alternate</i> , National Oilwell	J. D. Wendler , The American Society of Mechanical Engineers
L. S. Johnson , Fluor Construction Technology	R. C. Wild , U.S. Army Corps of Engineers
E. P. Vliet , <i>Alternate</i> , Turner Industries	E. B. Stewart , <i>Alternate</i> , U.S. Army Corps of Engineers
P. R. Juhren , Morrow Equipment Co.	D. N. Wolff , National Crane Corp., Manitowoc Crane Group
R. M. Kohner , Landmark Engineering Services	A. L. Calta , <i>Alternate</i> , National Crane Corp., Manitowoc Crane Group
H. I. Shapiro , <i>Alternate</i> , Specialized Carriers and Rigging Association/Howard I. Shapiro & Associates Consulting Engineers	P. S. Zorich , RZP International Ltd.
	H. W. Fair , <i>Alternate</i> , H. Fair Associates

HONORARY MEMBERS

J. L. Franks, Consultant
J. M. Klibert, Lift-All Co., Inc.
R. W. Parry, Consultant

B30.5 SUBCOMMITTEE PERSONNEL

J. C. Ryan , <i>Chair</i> , BOH Bros. Construction Co.	E. P. Vliet , <i>Alternate</i> , Turner Industries
R. J. Bolen , Consultant	R. M. Kohner , Landmark Engineering Services
M. E. Brunet , Manitowoc Crane Group	D. L. Morgan , <i>Alternate</i> , Fluor Hanford
L. D. DeMark , International Union of Operating Engineers	G. L. Owens , Granite Construction
A. J. Lusi , <i>Alternate</i> , International Union of Operating Engineers	W. P. Rollins , <i>Alternate</i> , Consultant
D. W. Eckstine , Eckstine & Associates	D. W. Ritchie , St. Paul Companies
W. J. Smith, Jr. , <i>Alternate</i> , Nations Builders Insurance Services	J. W. Rowland , Consultant
E. D. Fidler , Grove Worldwide, Manitowoc Crane Group	R. S. Stemp , Lampson International
N. C. Hargreaves , <i>Alternate</i> , Terex Corp./Power Crane and Shovel Association	R. C. Wild , U.S. Army Corps of Engineers
L. S. Johnson , Fluor Construction Technology Group	D. N. Wolff , National Crane, Manitowoc Crane Group
	A. L. Calta , <i>Alternate</i> , National Crane, Manitowoc Crane Group

SAFETY STANDARD FOR CABLEWAYS, CRANES, DERRICKS, HOISTS, HOOKS, JACKS, AND SLINGS

B30 STANDARD INTRODUCTION

(07)

SECTION I: SCOPE

The ASME B30 Standard contains provisions that apply to the construction, installation, operation, inspection, testing, maintenance, and use of cranes and other lifting and material-handling related equipment. For the convenience of the reader, the Standard has been divided into separate volumes. Each volume has been written under the direction of the ASME B30 Standards Committee and has successfully completed a consensus approval process under the general auspices of the American National Standards Institute (ANSI).

As of the date of issuance of this Volume, the B30 Standard comprises the following volumes:

- | | | | |
|--------|---|--------|---|
| B30.1 | Jacks | B30.24 | Container Cranes ¹ |
| B30.2 | Overhead and Gantry Cranes (Top Running Bridge, Single or Multiple Girder, Top Running Trolley Hoist) | B30.25 | Scrap and Material Handlers |
| B30.3 | Construction Tower Cranes | B30.26 | Rigging Hardware |
| B30.4 | Portal, Tower, and Pedestal Cranes | B30.27 | Material Placement Systems |
| B30.5 | Mobile and Locomotive Cranes | B30.28 | Balance Lifting Units ¹ |
| B30.6 | Derricks | B30.29 | Self-Erecting Tower Cranes ¹ |
| B30.7 | Base-Mounted Drum Hoists | | |
| B30.8 | Floating Cranes and Floating Derricks | | |
| B30.9 | Slings | | |
| B30.10 | Hooks | | |
| B30.11 | Monorails and Underhung Cranes | | |
| B30.12 | Handling Loads Suspended From Rotorcraft | | |
| B30.13 | Storage/Retrieval (S/R) Machines and Associated Equipment | | |
| B30.14 | Side Boom Tractors | | |
| B30.15 | Mobile Hydraulic Cranes
(withdrawn 1982 — requirements found in latest revision of B30.5) | | |
| B30.16 | Overhead Hoists (Underhung) | | |
| B30.17 | Overhead and Gantry Cranes (Top Running Bridge, Single Girder, Underhung Hoist) | | |
| B30.18 | Stacker Cranes (Top or Under Running Bridge, Multiple Girder With Top or Under Running Trolley Hoist) | | |
| B30.19 | Cableways | | |
| B30.20 | Below-the-Hook Lifting Devices | | |
| B30.21 | Manually Lever-Operated Hoists | | |
| B30.22 | Articulating Boom Cranes | | |
| B30.23 | Personnel Lifting Systems | | |

SECTION II: SCOPE EXCLUSIONS

The B30 Standard does not apply to track and automotive jacks, railway or automobile wrecking cranes, shipboard cranes, shipboard cargo-handling equipment, well-drilling derricks, skip hoists, mine hoists, truck body hoists, car or barge pullers, conveyors, excavating equipment, or equipment covered under the scope of the following standards: A10, A17, A90, A92, A120, B20, B56, and B77.

SECTION III: PURPOSE

The B30 Standard is intended to

- (a) prevent or minimize injury to workers, and otherwise provide for the protection of life, limb, and property by prescribing safety requirements
- (b) provide direction to manufacturers, owners, employers, users, and others concerned with, or responsible for, its application
- (c) guide governments and other regulatory bodies in the development, promulgation, and enforcement of appropriate safety directives

SECTION IV: USE BY REGULATORY AGENCIES

These Volumes may be adopted in whole or in part for governmental or regulatory use. If adopted for governmental use, the references to other national codes and standards in the specific volumes may be changed to refer to the corresponding regulations of the governmental authorities.

SECTION V: EFFECTIVE DATE

- (a) *Effective Date.* The effective date of this Volume of the B30 Standard shall be 1 year after its date of issuance.

¹ These volumes are currently in the development process.

Construction, installation, inspection, testing, maintenance, and operation of equipment manufactured and facilities constructed after the effective date of this Volume shall conform to the mandatory requirements of this Volume.

(b) *Existing Installations.* Equipment manufactured and facilities constructed prior to the effective date of this Volume of the B30 Standard shall be subject to the inspection, testing, maintenance, and operation requirements of this Standard after the effective date.

It is not the intent of this Volume of the B30 Standard to require retrofitting of existing equipment. However, when an item is being modified, its performance requirements shall be reviewed relative to the requirements within the current volume. The need to meet the current requirements shall be evaluated by a qualified person selected by the owner (user). Recommended changes shall be made by the owner (user) within 1 year.

SECTION VI: REQUIREMENTS AND RECOMMENDATIONS

Requirements of this Standard are characterized by use of the word *shall*. Recommendations of this Standard are characterized by the word *should*.

SECTION VII: USE OF MEASUREMENT UNITS

This Standard contains SI (metric) units as well as U.S. Customary units. The values stated in customary units are to be regarded as the standard. The SI units are a direct (soft) conversion from the customary units.

SECTION VIII: REQUESTS FOR REVISION

The B30 Standards Committee will consider requests for revision of any of the volumes within the B30 Standard. Such requests should be directed to

Secretary, B30 Standards Committee
ASME Codes and Standards
Three Park Avenue
New York, NY 10016-5990

Requests should be in the following format:

Volume: Cite the designation and title of the volume.
Edition: Cite the applicable edition of the volume.
Subject: Cite the applicable paragraph number(s) and the relevant heading(s).
Request: Indicate the suggested revision.
Rationale: State the rationale for the suggested revision.

Upon receipt by the Secretary, the request will be forwarded to the relevant B30 Subcommittee for consideration and action. Correspondence will be provided to

the requester defining the actions undertaken by the B30 Standards Committee.

SECTION IX: REQUESTS FOR INTERPRETATION

The B30 Standards Committee will render an interpretation of the provisions of the B30 Standard. Such requests should be directed to

Secretary, B30 Standards Committee
ASME Codes and Standards
Three Park Avenue
New York, NY 10016-5990

Requests should be in the following format:

Volume: Cite the designation and title of the volume.
Edition: Cite the applicable edition of the volume.
Subject: Cite the applicable paragraph number(s) and the relevant heading(s).
Question: Phrase the question as a request for an interpretation of a specific provision suitable for general understanding and use, not as a request for approval of a proprietary design or situation. Plans or drawings that explain the question may be submitted to clarify the question. However, they should not contain any proprietary names or information.

Upon receipt by the Secretary, the request will be forwarded to the relevant B30 Subcommittee for a draft response, which will then be subject to approval by the B30 Standards Committee prior to its formal issuance.

Interpretations to the B30 Standard will be published in the subsequent edition of the respective volume, and will be available online at <http://cstools.asme.org>.

SECTION X: ADDITIONAL GUIDANCE

The equipment covered by the B30 Standard is subject to hazards that cannot be abated by mechanical means, but only by the exercise of intelligence, care, and common sense. It is therefore essential to have personnel involved in the use and operation of equipment who are competent, careful, physically and mentally qualified, and trained in the proper operation of the equipment and the handling of loads. Serious hazards include, but are not limited to, improper or inadequate maintenance, overloading, dropping or slipping of the load, obstructing the free passage of the load, and using equipment for a purpose for which it was not intended or designed.

The B30 Standards Committee fully realizes the importance of proper design factors, minimum or maximum dimensions, and other limiting criteria of wire rope or chain and their fastenings, sheaves, sprockets,

drums, and similar equipment covered by the standard, all of which are closely connected with safety. Sizes, strengths, and similar criteria are dependent on many different factors, often varying with the installation and uses. These factors depend on

- (a) the condition of the equipment or material
- (b) the loads
- (c) the acceleration or speed of the ropes, chains, sheaves, sprockets, or drums

- (d) the type of attachments
- (e) the number, size, and arrangement of sheaves or other parts
- (f) environmental conditions causing corrosion or wear
- (g) many variables that must be considered in each individual case

The requirements and recommendations provided in the volumes must be interpreted accordingly, and judgment used in determining their application.

ASME B30.5-2007

SUMMARY OF CHANGES

Following approval by the ASME B30 Committee and ASME, and after public review, ASME B30.5-2007 was approved by the American National Standards Institute on November 20, 2007.

ASME B30.5-2007 includes editorial changes, revisions, and corrections identified by a margin note, (07).

<i>Page</i>	<i>Location</i>	<i>Change</i>
ix–xi	B30 Standard Introduction	Revised in its entirety
5	5-0.2.2	Definition of <i>ensure</i> added
7	Section 5-0.3	Updated
9	5-1.1.3(a)(6)	Added
24	5-2.2.1(a)	Revised
26, 27	5-2.4.3	Subparagraphs (b)(3), (b)(5), (b)(6), (b)(8), (b)(9), and (d) revised
	5-2.4.4(c)	Revised in its entirety
28	Section 5-3.1	Title revised
	5-3.1.1(a)(1)	Reference to (f) added
	5-3.1.2(b)(5)	Revised
29–32	5-3.1.3	Revised in its entirety
	5-3.2.1.4(a)	Revised
38, 41	5-3.4.5.2	New subpara. (c) added, subsequent subparagraphs redesignated

SPECIAL NOTE:

The interpretations to ASME B30.5 are included in this edition as a separate section for the user's convenience.

MOBILE AND LOCOMOTIVE CRANES

Chapter 5-0 Scope, Definitions, and References

SECTION 5-0.1: SCOPE OF B30.5

Within the general scope defined in Section I, American National Standard B30.5 applies to crawler cranes, locomotive cranes, wheel-mounted cranes, and any variations thereof that retain the same fundamental characteristics. The scope includes only cranes of the above types that are basically powered by internal combustion engines or electric motors. Side boom tractors and cranes designed for railway and automobile wreck clearance, digger derricks, cranes manufactured specifically for, or when used for, energized electrical line service, knuckle boom, trolley boom cranes, and cranes having a maximum rated capacity of one ton or less are excluded.

Special adaptations to the general types of machines covered by this volume, where applicable, fall under this scope.

Some basic machine types within this scope are used alternatively for lifting service and for applications not considered to be lifting service. All of the requirements of this Volume are applicable to such machines when used for lifting service. However, at a minimum, Section 5-1.11, Chapter 5-2, and Section 5-3.1 of this Volume apply to machines when used in other than lifting service.


SECTION 5-0.2: DEFINITIONS

5-0.2.1 Types of Mobile and Locomotive Cranes

commercial truck-mounted crane: a crane consisting of a rotating superstructure (center post or turntable), boom, operating machinery, and one or more operator's stations mounted on a frame attached to a commercial truck chassis, usually retaining a payload hauling capability whose power source usually powers the crane. Its function is to lift, lower, and swing loads at various radii (see Figs. 1 and 2).

crawler crane: a crane consisting of a rotating superstructure with a power plant, operating machinery, and boom, mounted on a base and equipped with crawler treads for travel. Its function is to lift, lower, and swing loads at various radii (see Figs. 3 and 4).

Fig. 1 Commercial Truck-Mounted Crane — Telescoping Boom

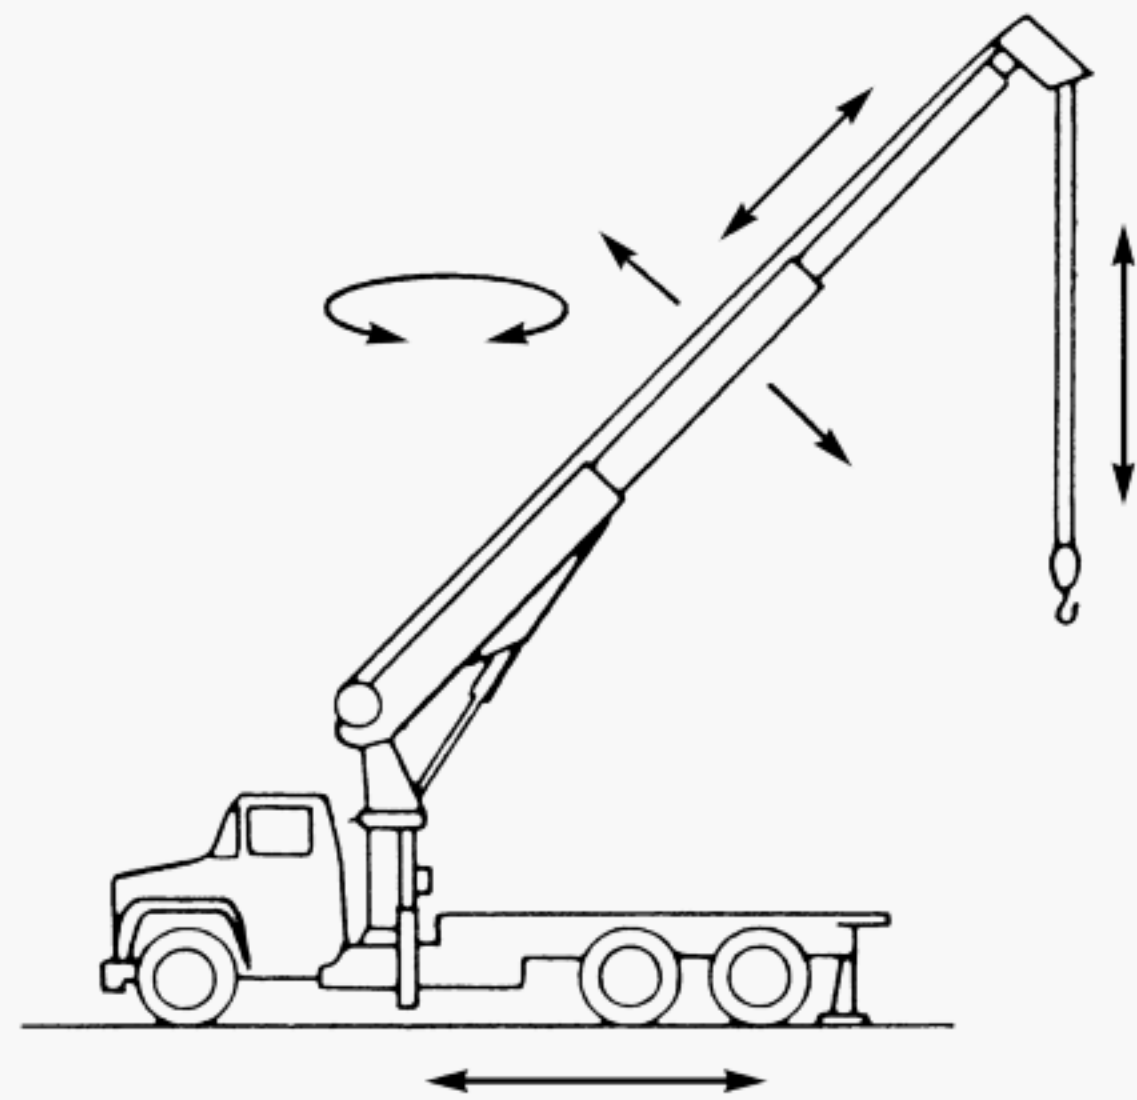


GENERAL NOTE: The boom may have a base boom structure of sections (upper and lower) between or beyond which additional sections may be added to increase its length, or it may consist of a base boom from which one or more boom extensions are telescoped for additional length.

locomotive crane: a crane consisting of a rotating superstructure with a power plant, operating machinery, and boom, mounted on a base or car equipped for travel on a railroad track. It may be self-propelled or propelled by an outside source. Its function is to lift, lower, and swing loads at various radii (see Fig. 5).


wheel-mounted crane (multiple control stations): a crane consisting of a rotating superstructure, operating machinery, and operator's station and boom, mounted on a crane carrier equipped with axles and rubber-tired wheels for travel, a power source(s), and having separate stations for driving and operating. Its function is to lift, lower, and swing loads at various radii (see Figs. 6 and 7).

Fig. 2 Commercial Truck-Mounted Crane — Nontelescoping Boom

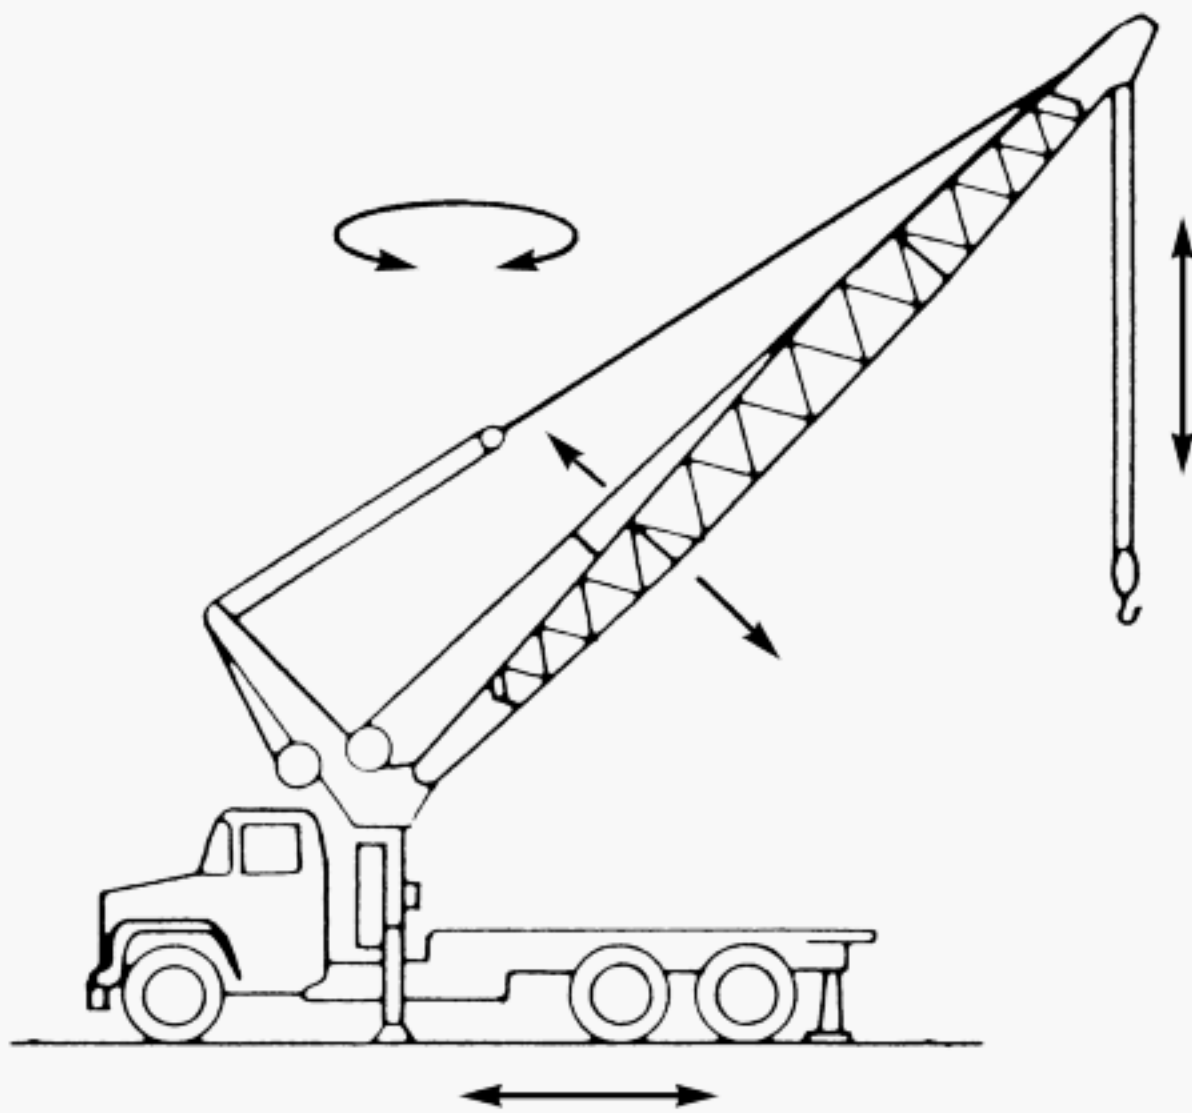


GENERAL NOTE: The boom may have a base boom structure of sections (upper and lower) between or beyond which additional sections may be added to increase its length, or it may consist of a base boom from which one or more boom extensions are telescoped for additional length.

Fig. 3 Crawler Crane

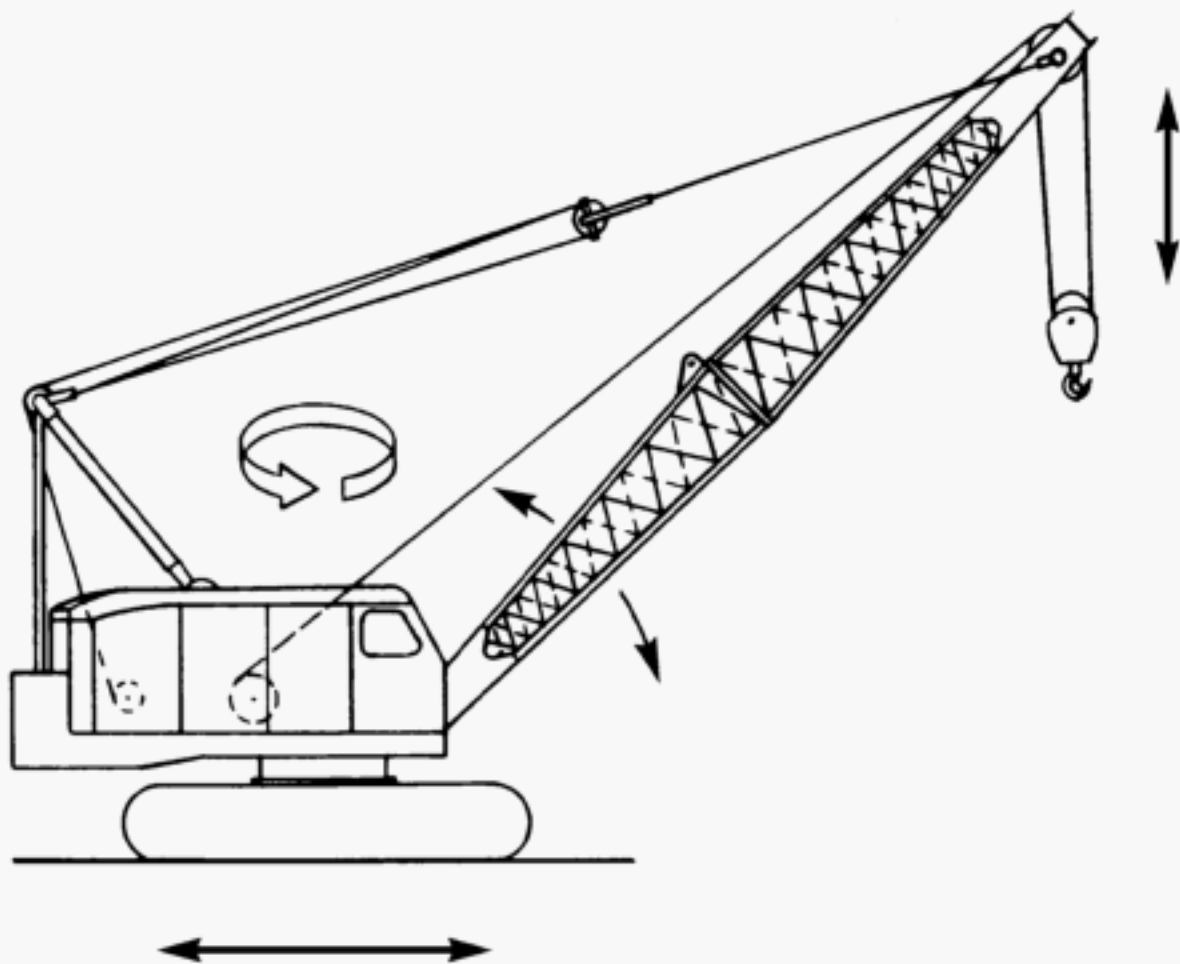

wheel-mounted crane (single control station): a crane consisting of a rotating superstructure, operating machinery, and boom, mounted on a crane carrier equipped with axles and rubber-tired wheels for travel, a power source, and having a single control station for driving and operating. Its function is to lift, lower, and swing loads at various radii (see Figs. 8, 9, and 10).

Fig. 4 Crawler Crane — Telescoping Boom

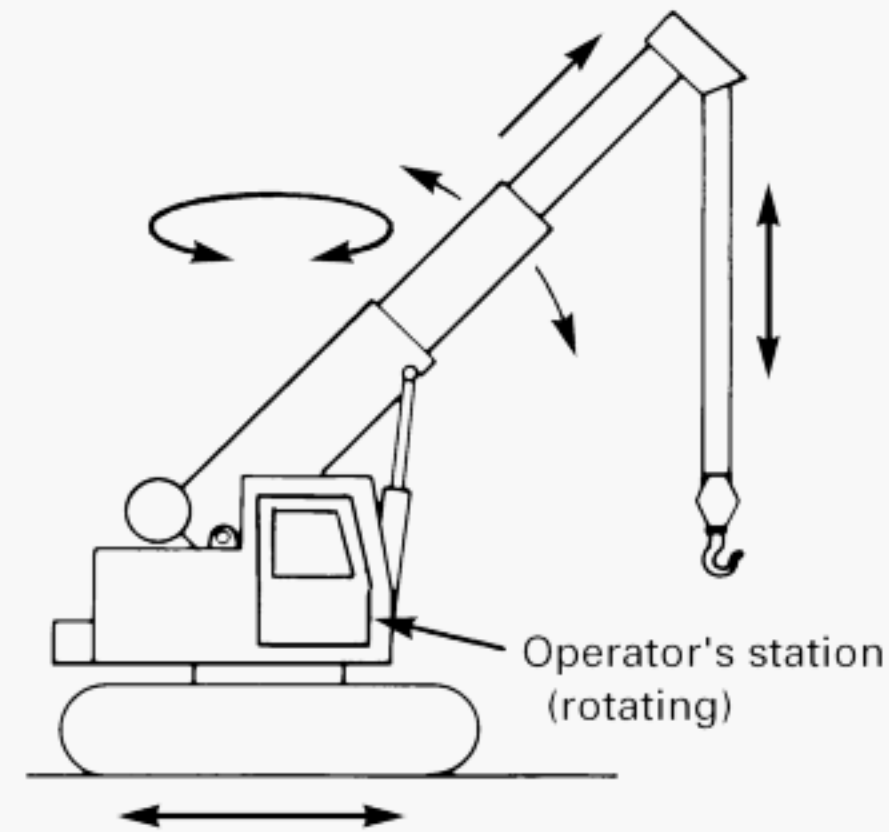

GENERAL NOTE: The boom may have a base boom structure of sections (upper and lower) between or beyond which additional sections may be added to increase its length, or it may consist of a base boom from which one or more boom extensions are telescoped for additional length.

5-0.2.2 General

accessory: a secondary part or assembly of parts that contributes to the overall function and usefulness of a machine.

administrative or regulatory authority: a governmental agency or the employer in the absence of governmental jurisdiction.

angle indicator (boom): an accessory that measures the angle of the boom to the horizontal.

anti-two-block device: a device that, when activated, disengages all crane functions whose movement can cause two-blocking.

appointed: assigned specific responsibilities by the employer or the employer's representative.

authorized: appointed by a duly constituted administrative or regulatory authority.

auxiliary hoist: a secondary hoist rope system used either in conjunction with, or independently of, the main hoist system.

axis of rotation: the vertical axis around which the crane superstructure rotates.

axle: the shaft or spindle with which or about which a wheel rotates. On wheel-mounted cranes it refers to a type of axle assembly including housings, gearing, differential, bearings, and mounting appurtenances.

axle (bogie): two or more axles mounted in tandem in a frame so as to divide the load between the axles and permit vertical oscillation of the wheels.

ballast: weight used to supplement the weight of the machine in providing stability for lifting working loads

Fig. 5 Locomotive Crane

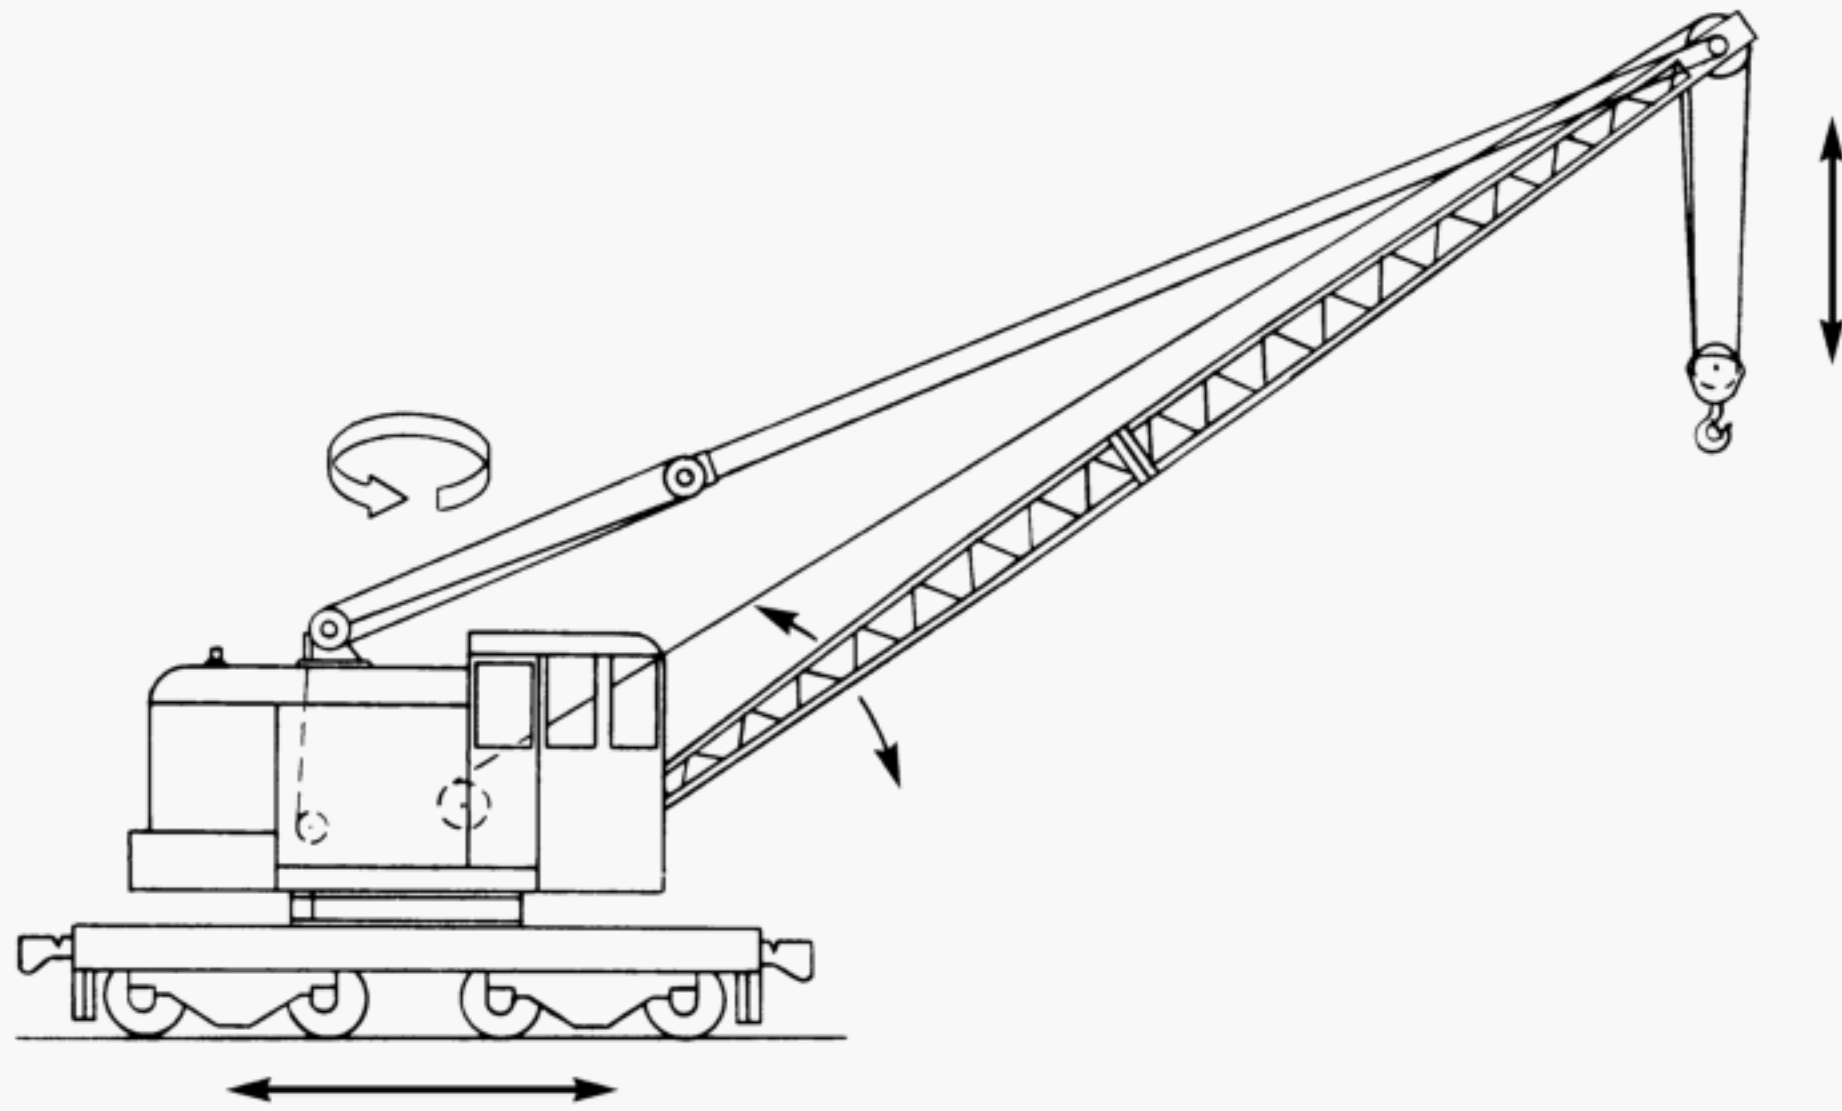


Fig. 6 Wheel-Mounted Crane (Multiple Control Stations)


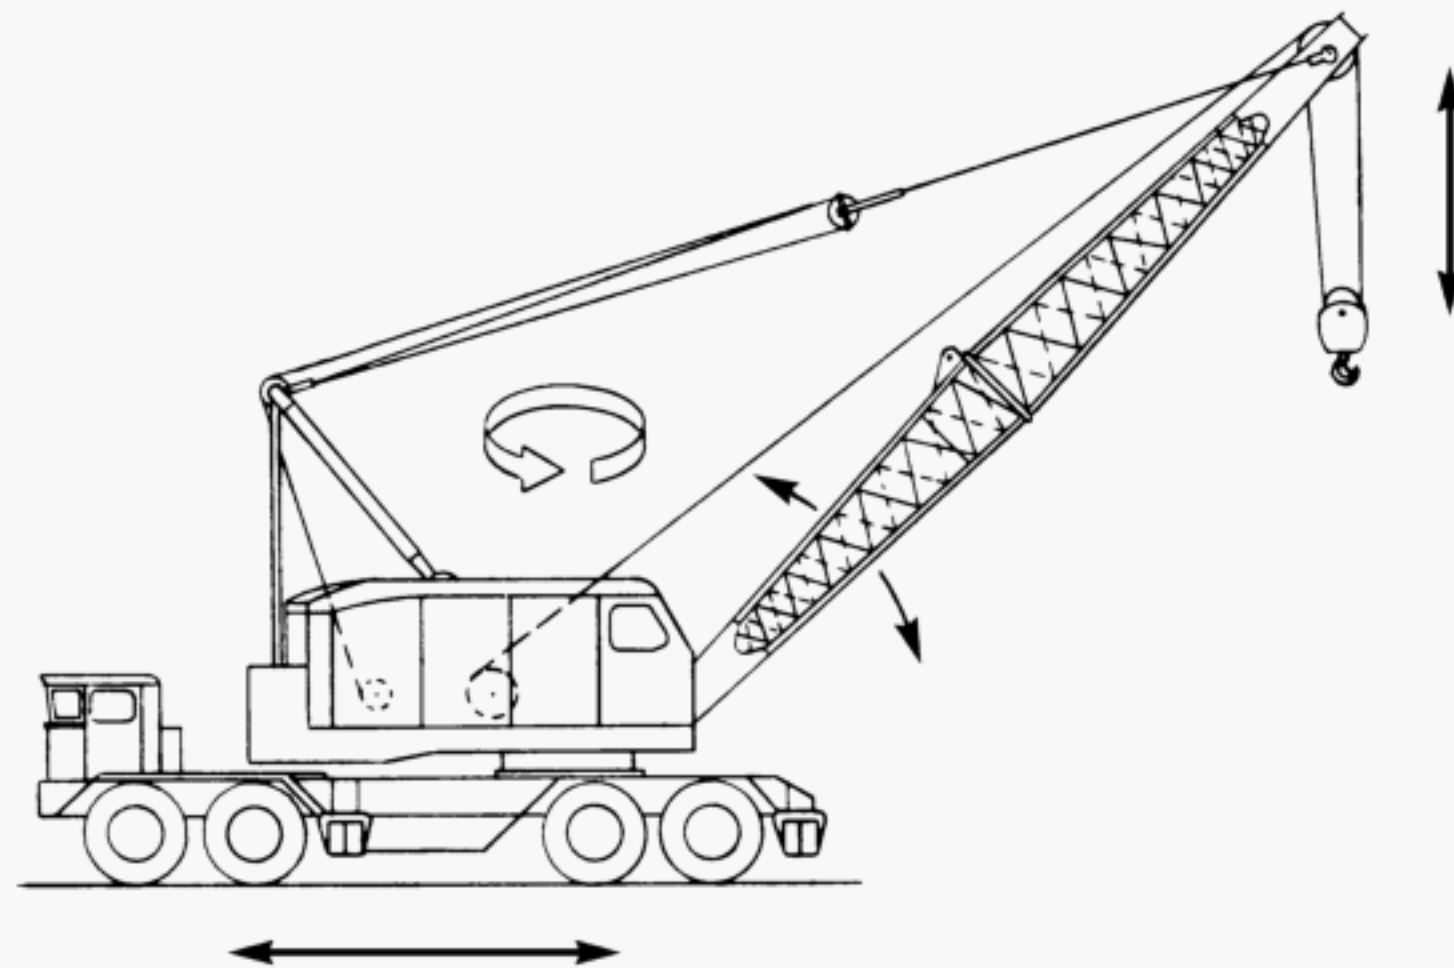


Fig. 7 Wheel-Mounted Crane — Telescoping Boom (Multiple Control Stations)

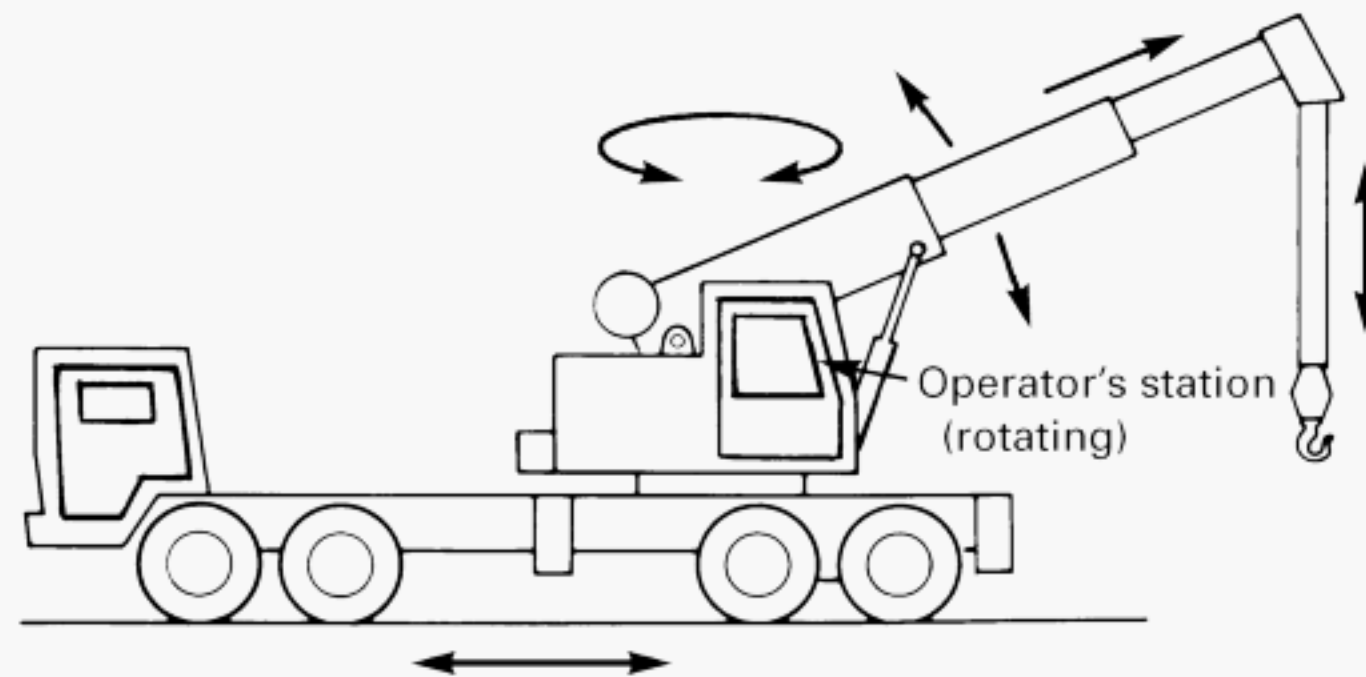

GENERAL NOTE: The boom may have a base boom structure of sections (upper and lower) between or beyond which additional sections may be added to increase its length, or it may consist of a base boom from which one or more boom extensions are telescoped for additional length.

Fig. 8 Wheel-Mounted Crane (Single Control Station)



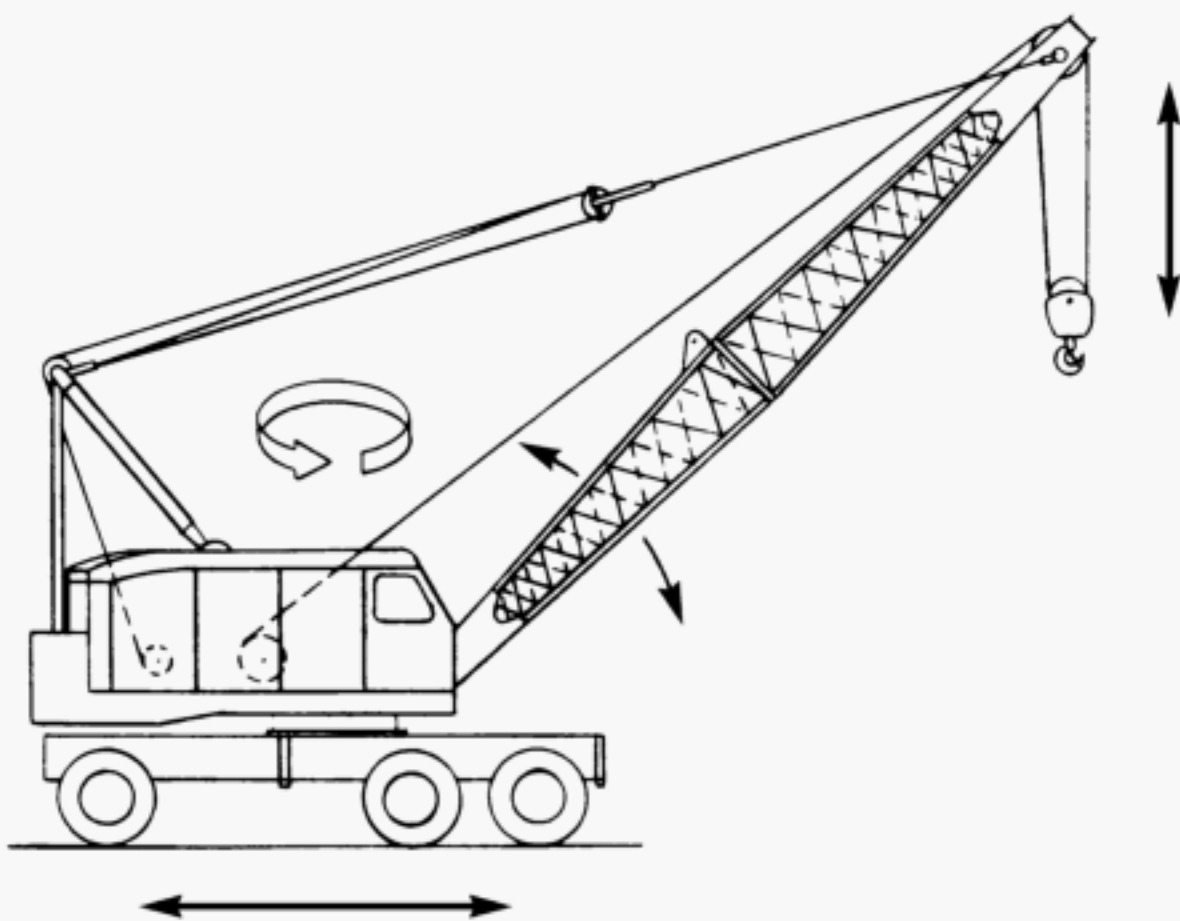


Fig. 9 Wheel-Mounted Crane — Telescoping Boom (Single Control Station, Rotating)

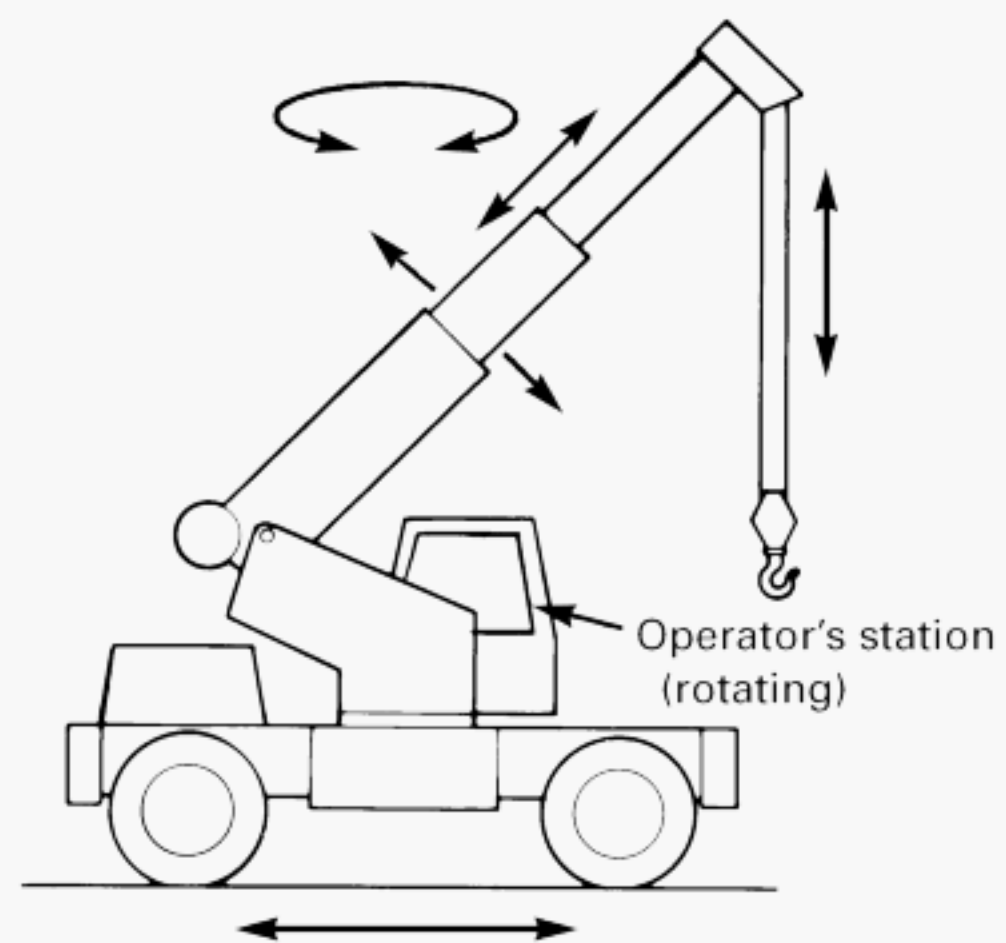

GENERAL NOTE: The boom may have a base boom structure of sections (upper and lower) between or beyond which additional sections may be added to increase its length, or it may consist of a base boom from which one or more boom extensions are telescoped for additional length.

Fig. 10 Wheel-Mounted Crane — Telescoping Boom (Single Control Station, Fixed)

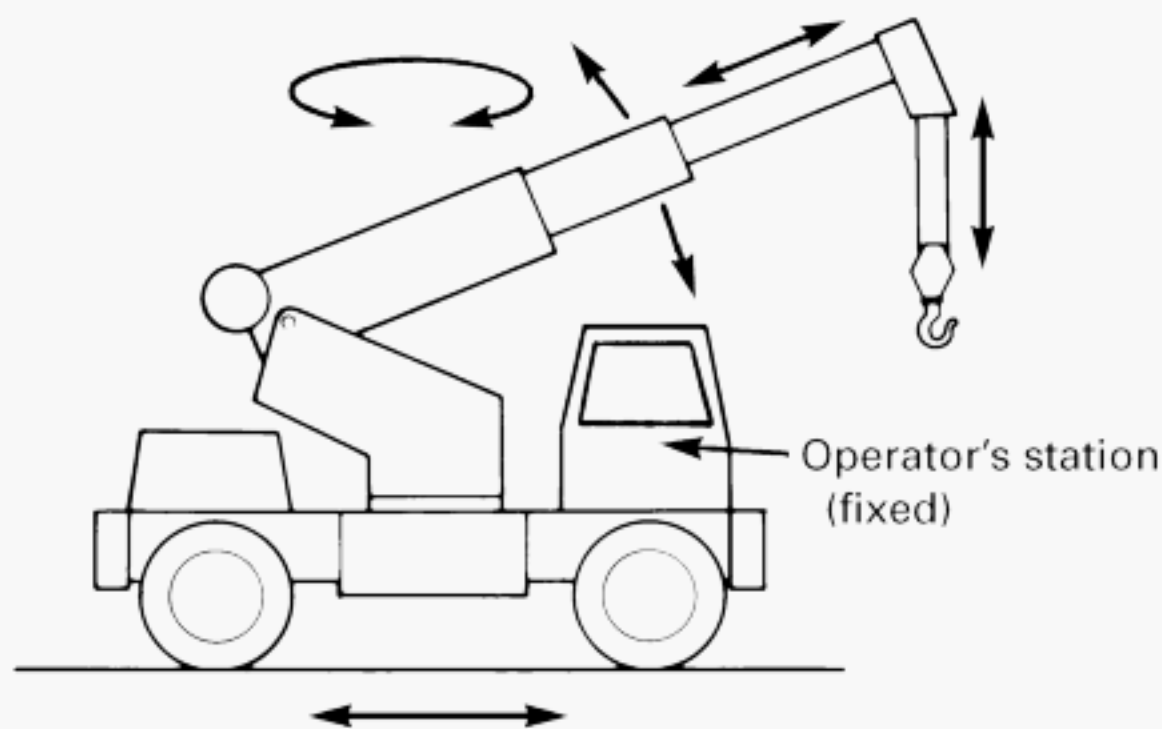

GENERAL NOTE: The boom may have a base boom structure of sections (upper and lower) between or beyond which additional sections may be added to increase its length, or it may consist of a base boom from which one or more boom extensions are telescoped for additional length.

(the term *ballast* is normally associated with locomotive cranes).

base (mounting): the traveling base on which the rotating superstructure of a locomotive or crawler crane is mounted.

boom (crane): a member hinged to the rotating superstructure and used for supporting the hoisting tackle.

boom angle: the angle above or below horizontal of the longitudinal axis of the base boom section.

boom hoist mechanism: means for supporting the boom and controlling the boom angle.

boom point: the outer extremity of the crane boom, containing the hoist sheave assembly.

boom point sheave assembly: an assembly of sheaves and pin built as an integral part of the boom point.

boom stop: a device used to limit the angle of the boom at the highest recommended position.

brake: a device used for retarding or stopping motion.

cab: a housing that covers the rotating superstructure machinery or the operator's or driver's station.

clutch: a means for engagement or disengagement of power.

commercial truck vehicle: a commercial motor vehicle designed primarily for the transportation of property in connection with business and industry.

counterweight: weight used to supplement the weight of the machine in providing stability for lifting working loads.

crane carrier: the undercarriage of a wheel-mounted crane specifically designed for transporting the rotating

crane superstructure. It may or may not provide its own travel mechanism. It is distinguished from a commercial truck vehicle in that it is not designed to transport personnel, materials, or equipment other than the crane-rotating superstructure.

cross-over points: in multiple layer spooling of rope on a drum, those points of rope contact where the rope crosses the preceding rope layer.

designated person: a person selected or assigned by the employer or the employer's representative as being competent to perform specific duties.

drum: the cylindrical member around which a rope is wound for lifting and lowering the load or boom.

dynamic (loading): loads introduced into the machine or its components due to accelerating or decelerating forces.

ensure: term used when the meaning "take steps to see that" or "make sure" is intended. (07)

flange point: a point of contact between rope and drum flange where the rope changes layers.

gantry (A-frame): a structural frame, extending above the superstructure, to which the boom support ropes are reeved.

hoist mechanism: a hoist drum and rope reeving system used for lifting and lowering loads.

jib: an extension attached to the boom point to provide added boom length for lifting specified loads. The jib may be in line with the boom or offset to various angles in the vertical plane of the boom.

jib backstop: a device that will restrain the jib from turning over backward.

jobsite: work area defined by the construction contract.

load (working): the external load in pounds (kilograms) applied to the crane, including the weight of load-attaching equipment such as lower load block, shackles, and slings.

load block, lower: the assembly of hook or shackle, swivel, sheaves, pins, and frame suspended by the hoisting ropes.

load block, upper: the assembly of shackle, swivel, sheaves, pins, and frame suspended from the boom point.

load indicator: a device that measures the weight of the load.

load ratings: crane ratings in pounds (kilograms) established by the manufacturer in accordance with Section 5-1.1.

luffing attachment: a front end attachment for a mobile crane that uses an upper working boom or jib, which is capable of changing angle during operation and is

mounted on top of a lower main boom. This is distinguished from a fixed jib where the operating angle cannot be changed during operation. Typically, the lower boom operating angle can also be changed.

mast (boom): a frame hinged at or near the boom hinge for use in connection with supporting a boom. The head of the mast is usually supported and raised or lowered by the boom hoist ropes.

mast (jib): a frame hinged at or near the boom point for use in connection with supporting a jib.

normal operating conditions

cab- or station-operated cranes: conditions during which a crane is performing functions within the manufacturer's operating recommendations. Under these conditions, the operator is at the operating control devices on the crane; no other persons, except those appointed, are to be on the crane.

ground- or floor-operated cranes: conditions during which a crane is performing functions within the manufacturer's operating recommendations. Under these conditions, the operator is at the operating control devices that are mounted to the crane but operated with the operator off the crane; no other persons, except those appointed, are to be on the crane.

remote-operated cranes: conditions during which a crane is performing functions within the manufacturer's operating recommendations. Under these conditions, the operator is at the operating control devices that are not mounted to any part of the crane; no other persons, except those appointed, are to be on the crane.

operational aid: an accessory that provides information to facilitate operation of a crane or that takes control of particular functions without action of the operator when a limiting condition is sensed. Examples of such devices include, but are not limited to, the following: anti-two-block device, rated capacity indicator, rated capacity (load) limiter, boom angle or radius indicator, lattice boom hoist disconnect device, boom length indicator, crane level indicator, drum rotation indicator, load indicator, and wind speed indicator.

outriggers: extendable or fixed members attached to the mounting base, which rest on supports at the outer ends used to support the crane.

pawl (dog): a device for positively holding a member against motion in one or more directions.

payload: that load or loads being transported by the commercial truck chassis from place to place.

pendant: a rope or strand of specified length with fixed end connections.

power-controlled lowering: a system or device in the power train, other than the load hoist brake, that can control the lowering rate of speed of the load hoist mechanism.

qualified operator: an operator who has met the requirements of paras. 5-3.1.2(a) through (c).

qualified person: a person who, by possession of a recognized degree in an applicable field or certificate of professional standing, or who, by extensive knowledge, training, and experience, has successfully demonstrated the ability to solve or resolve problems relating to the subject matter and work.

rail clamp: a tong-like metal device mounted on a locomotive crane car, which can be connected to the track.

rated capacity indicator: a device that automatically monitors radius, load weight, and load rating and warns the crane operator of an overload condition.

rated capacity (load) limiter: a device that automatically monitors radius, load weight, and load rating and prevents movements of the crane, which would result in an overload condition.

reeving: a rope system in which the rope travels around drums and sheaves.

repetitive pickup point: when operating on a short cycle operation, the rope being used on a single layer and being spooled repetitively over a short portion of the drum.

rope: refers to wire rope unless otherwise specified.

rotation-resistant rope: a wire rope consisting of an inner layer of strand laid in one direction covered by a layer of strand laid in the opposite direction. This has the effect of counteracting torque by reducing the tendency of the finished rope to rotate.

running rope: a rope that travels around sheaves or drums.

shall: term used to indicate that a rule is mandatory and must be followed.

should: term used to indicate that a rule is a recommendation, the advisability of which depends on the facts in each situation.

side loading: a load applied to an angle to the vertical plane of the boom.

stabilizer: stabilizers are extendable or fixed members attached to the mounting base to increase the stability of the crane, but that may not have the capability of relieving all of the weight from wheels or tracks.

standby crane: a crane that is not in regular service but that is used occasionally or intermittently as required.

standing (guy) rope: a supporting rope that maintains a constant distance between the points of attachment to the two components connected by the rope.

structural competence: the ability of the machine and its components to withstand the stresses imposed by applied loads.

superstructure: the rotating upper frame structure of the machine and the operating machinery mounted thereon.

swing: rotation of the superstructure for movement of loads in a horizontal direction about the axis of rotation.

swing mechanism: the machinery involved in providing rotation of the superstructure.

swivel: a load-carrying member with thrust bearings to permit rotation under load in a plane perpendicular to the direction of the load.

swiveling: the rotation of the load attachment portion (hook or shackle) of a load block (lower) or hook assembly about its axis of suspension in relation to the load line(s).

tackle: an assembly of ropes and sheaves arranged for lifting, lowering, or pulling.

telescoping boom: consists of a base boom from which one or more boom sections are telescoped for additional length.

transit: the moving or transporting of a crane from one jobsite to another.

travel: the function of the machine moving under its own power from one location to another on a jobsite.

two-block damage prevention feature: a system that will stall when two-blocking occurs without causing damage to the hoist rope or crane machinery components.

two-block warning feature: a warning device to alert the operator of an impending two-blocking condition.

two-blocking: the condition in which the lower load block or hook assembly comes in contact with the upper load block or boom point sheave assembly.

wheel base: the distance between centers of front and rear axles. For a multiple axle assembly the axle center for wheel base measurement is taken as the midpoint of the assembly.

whipline (runner or auxiliary): a secondary rope system usually of lighter load capacity than that provided by the main rope system.

winch head: a power-driven spool for handling loads by means of friction between fiber or wire rope and the spool.

SECTION 5-0.3: REFERENCES

(07)

The following is a list of publications referenced in this Standard.

ANSI Z26.1-1996, Safety Code for Glazing Materials for Glazing Motor Vehicles Operating on Land Highways
Publisher: American National Standards Institute (ANSI), 25 West 43rd Street, New York, NY 10036

ANSI/AWS D14.3-1982(R1991), Welding Specifications for Earth Moving and Construction Equipment

Publisher: American Welding Society (AWS), 550 NW LeJeune Road, Miami, FL 33135

ANSI/SAE J185-MAY03, Access Systems for Off-Road Machines

ANSI/SAE J765-OCT90, Crane Load Stability Test Code
ANSI/SAE J987-JUN03, Crane Structures — Method of Test

ANSI/SAE J1028-OCT98, Mobile Crane Working Area Definitions

ANSI/SAE J1063-NOV93, Cantilevered Boom Crane Structures — Method of Test

Publisher: Society of Automotive Engineers (SAE), 400 Commonwealth Drive, Warrendale, PA 15096

ASME B30.8-2004, Floating Cranes and Floating Derricks

ASME B30.10-1999, Hooks

ASME B30.23-1998, Personnel Lifting Systems

Publisher: The American Society of Mechanical Engineers (ASME), Three Park Avenue, New York, NY 10016-5990; Order Department: 22 Law Drive, Box 2300, Fairfield, NJ 07007-2300

U.S. DOT Safety Appliance Standards and Power Brakes Requirements (January 1973, Revised September 1977), DOT Standards, Federal Railroad Administration, United States Department of Transportation (DOT)

Publisher: Superintendent of Documents, U.S. Government Printing Office, Washington, DC 20401

Chapter 5-1

Construction and Characteristics

SECTION 5-1.1: LOAD RATINGS

5-1.1.1 Load Ratings — Where Stability Governs Lifting Performance

(a) The margin of stability for determination of load ratings, with booms of stipulated lengths at stipulated working radii for the various types of crane mountings, is established by taking a percentage of the loads that will produce a condition of tipping or balance with the boom in the least stable direction relative to the mounting. With the indicated types of mounting under conditions stipulated in paras. 5-1.1.1(b) and (c), the load ratings shall not exceed the percentages for cranes given in Table 1.

(b) The following stipulations shall govern the application of the values in para. 5-1.1.1(a) for locomotive cranes:

(1) The crane shall be standing on a track that is level within 1% grade.

(2) The radius of the load is the horizontal distance from a projection of the axis of rotation to the rail support surface, before loading, to the center of the vertical hoist line or tackle with load applied.

(3) Tipping loads from which ratings are determined shall be applied under static conditions only, i.e., without the dynamic effect of lifting, lowering, swinging, or booming.

(4) The weight of all auxiliary handling devices such as lower load block, hooks, and slings shall be considered as part of the load.

(c) Stipulations governing the application of the values in para. 5-1.1.1(a) shall be in accordance with ANSI/SAE J765.

(d) The effectiveness of these preceding stability factors will be influenced by such additional factors as freely suspended loads, track, wind, or ground conditions, condition and inflation of rubber tires, boom lengths, proper operating speeds for existing conditions, and, in general, careful and competent operation. Any standard attachments to the boom such as jibs and auxiliary or whip lines shall be considered as affecting stability and a deduction shall be made from load ratings in accordance with the manufacturer's instructions. The effect of lights, pile lead adaptors, or other nonstandard attachments shall also be deducted from load ratings. All of these shall be taken into account.

(e) When cranes included in the scope of B30.5 are mounted on barges or pontoons, factors in addition to

Table 1 Crane Load Ratings

Type of Crane Mounting	Maximum Load Ratings, %
Locomotive, without outrigger (stabilizer) support [Note (1)]	
Booms 60 ft (18 m) or less	85
Booms over 60 ft (18 m)	85 [Note (2)]
Locomotive, using outriggers (stabilizers) fully extended and set	80
Crawler, without outrigger support	75
Crawler, using outriggers fully extended and set	85
Wheel mounted, without outrigger support	75
Wheel mounted, using outriggers fully extended and set, with tires off supporting surface	85
Wheel mounted, using outrigger beams partially extended and set, with tires off supporting surface	Notes (3) and (4)
Commercial truck vehicle mounted, with stabilizers extended and set	85
Commercial truck mounted, using stabilizers partially extended and set	Notes (3) and (4)

NOTES:

- (1) As a precaution while testing for free ratings, outriggers should be loosely applied; rail clamps should not be used.
- (2) The difference between the backward stability moment and the forward moment resulting from the load should not be less than 30,000 lb-ft (40 675 N·m) with the backward stability moment being the greater.
- (3) The following equation shall be used for less than full extension of all outrigger beams to find the rated capacity:

$$P \leq (T - 0.1F)/1.25$$

where

F = load applied at boom tip that gives the same moment effect as boom mass

P = rated capacity in the lifting direction specified

T = tipping load

- (4) If crane operation with outriggers in positions other than fully extended is permitted by the crane manufacturer, specified procedures, ratings, and limitations for any configurations that are permitted shall be provided.

those stipulated in paras. 5-1.1.1 and 5-1.1.2 will influence the stability and structural competence. The load rating for a crane on a barge or pontoon shall be modified as recommended by the manufacturer or a qualified person (refer to ASME B30.8).

5-1.1.2 Load Ratings — Where Structural Competence Governs Lifting Performance

(a) Load ratings for some radii are limited by the stability of the crane. However, in some of the operating ranges the rating may be limited by factors other than stability, such as the conditions described below.

(1) The loads that will produce a condition of tipping increase rapidly and reach extreme values as the minimum operating radius and tipping fulcrum of the machine are approached. At some radii, these loads are of such magnitude that they cannot be fully taken into account in the crane structure design without excessive weight, which would severely limit performance and ratings at the longer radii where most work is done. Hence, load ratings at some radii may be based on structural competence of the machine rather than stability.

(2) A nonsymmetrical mounting requires a higher loading to produce a condition of tipping in a direction other than that of least stability on which the load ratings are established. Therefore, if the crane specification includes additional ratings for directions other than the least stable, such ratings may also be governed by structural competence rather than stability. For such specified additional ratings, the work area shall be indicated; for those ratings that might be governed by tipping loads, the applicable percentage factors in para. 5-1.1.1(a) shall not be exceeded.

(b) For all operational applications, the crane load ratings established by the manufacturer shall not be exceeded (refer to para. 5-3.2.1).

5-1.1.3 Load Rating Chart

(a) A durable rating chart(s) with legible letters and figures shall be provided with each crane and attached in a location accessible to the operator while at the controls. The data and information to be provided on these charts shall include, but not be limited to, the following:

(1) A full and complete range of manufacturer's crane load ratings at all stated operating radii, boom angles, work areas, boom lengths and configurations, jib lengths and angles (or offset), as well as alternate ratings for use and nonuse of optional equipment on the crane, such as outriggers and extra counterweights, which affect ratings.

(2) A work area chart for which capacities are listed in the load rating chart (see Fig. 11).¹

(3) Where ratings are limited by structural, hydraulic, or factors other than stability, the limitations shall be shown and emphasized on the rating charts.

(4) In areas where no load is to be handled, the work area figure and load rating chart shall so state.

(5) Recommended reeving for the hoist lines shall be shown.

¹ Illustrations (a) through (d) of Fig. 11 are reproduced from ANSI/SAE J1028, Recommended Practice, by permission of the Society of Automotive Engineers, Inc.

(6) If the weight of any portion of the hoist rope is required to be considered as part of the crane's lifted load, the method for determining such rope weight shall be provided. (07)

(b) In addition to the data required on the load rating chart, the following information shall be shown either on the rating chart or in the operating manual:

(1) recommended parts of hoist reeving, size, and type of rope for various crane loads

(2) recommended boom hoist reeving diagram, where applicable; size, type, and length of rope

(3) tire pressure, where applicable

(4) cautionary or warning notes relative to limitations on equipment and operating procedures, including indication of the least stable direction

(5) position of the gantry and requirements for intermediate boom suspension, where applicable

(6) instructions for boom erection and conditions under which the boom, or boom and jib combinations, may be raised or lowered

(7) whether the hoist holding mechanism is automatically controlled, manually controlled, whether free-fall is available, or any combination thereof

(8) the maximum telescopic travel length of each boom telescopic section

(9) whether sections are telescoped with power or manually

(10) the sequence and procedure for extending and retracting the telescopic boom section

(11) maximum loads permitted during the actual boom extending operation, and any limiting conditions or cautions

(12) hydraulic relief valve settings specified by the manufacturer

SECTION 5-1.2: STABILITY (BACKWARD AND FORWARD)

5-1.2.1 Backward Stability

The backward stability of a crane is its ability to resist overturning in the direction opposite the boom point while in the unloaded condition. The resistance to backward overturning is reflected in the margin of backward stability.

5-1.2.2 General Conditions

The general conditions for determination of the backward stability margin, applicable to all cranes within the scope of this chapter, are as follows:


(a) crane to be equipped for crane operation with shortest recommended boom

(b) boom positioned at maximum recommended boom angle


(c) crane to be unloaded (lower load block on support)

(d) outriggers free of the bearing surface when the crane is counterweighted for "on tires or on wheels"

Fig. 11 Work Areas

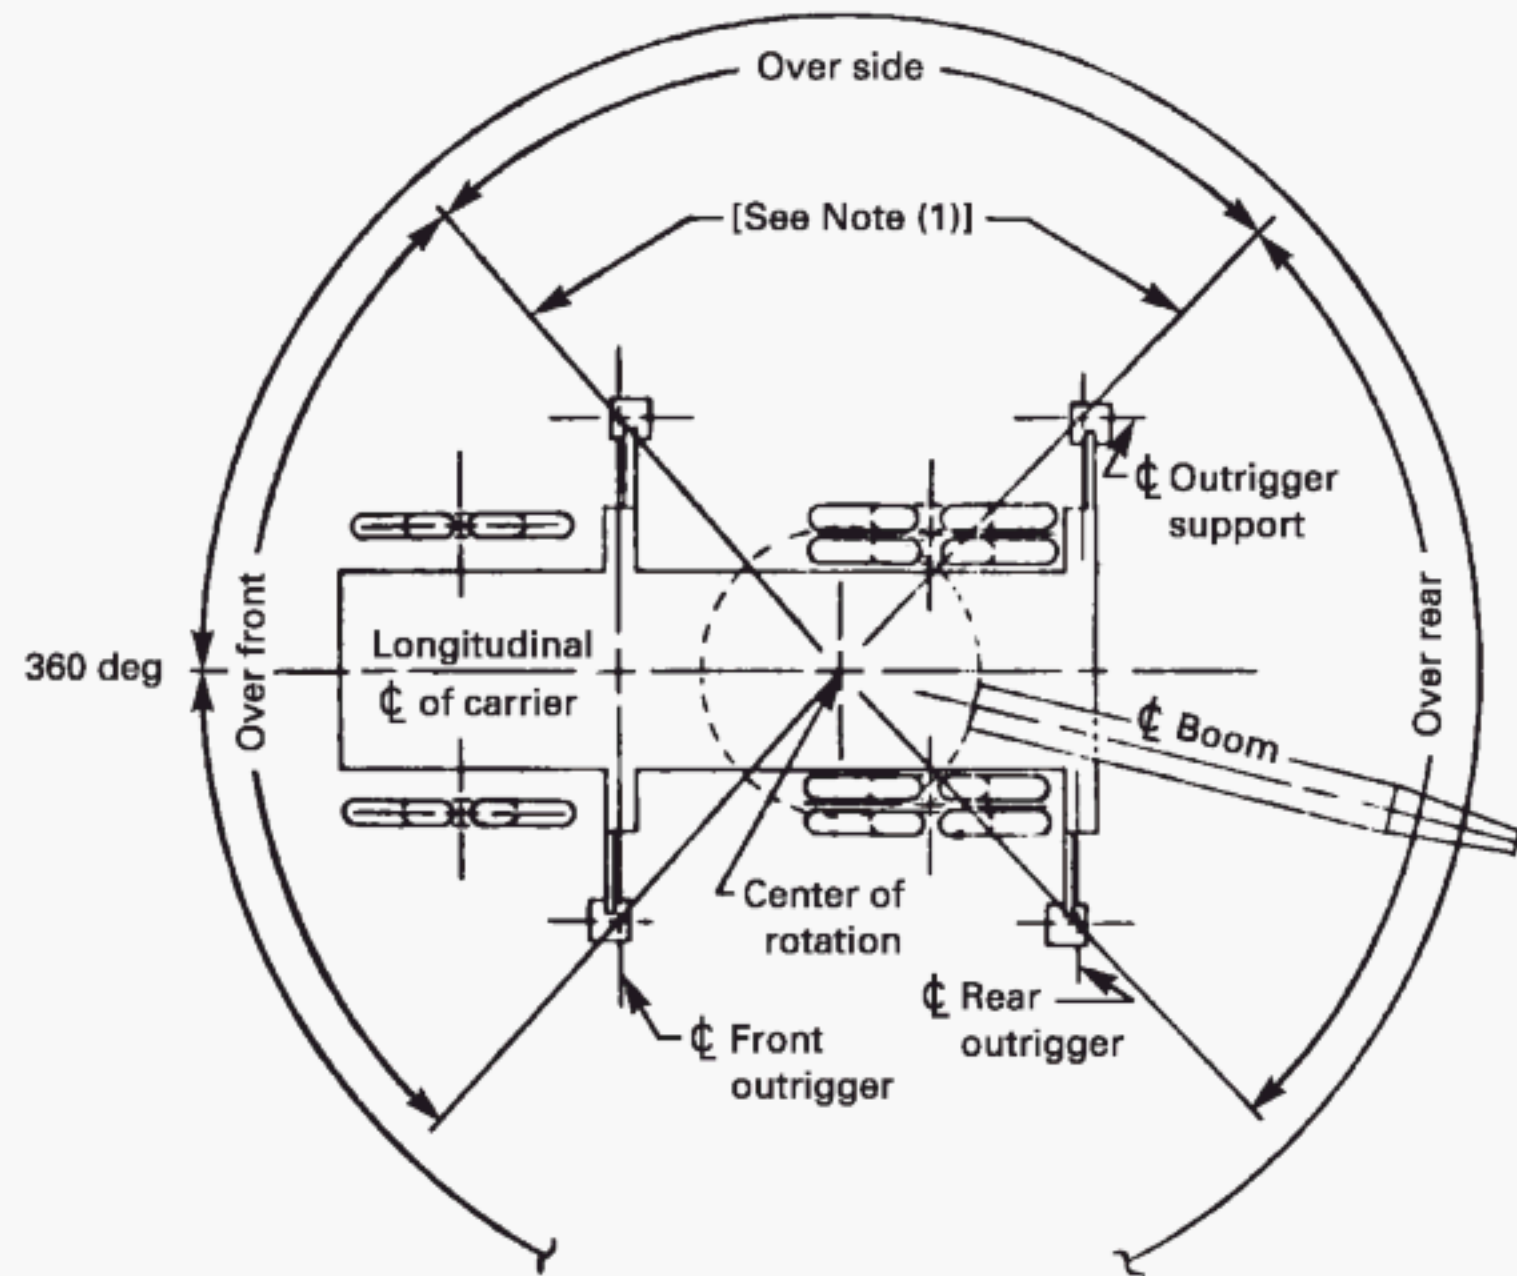


(a) Carrier on Outriggers — Front Outrigger Behind of Front Wheels [Note (2)]

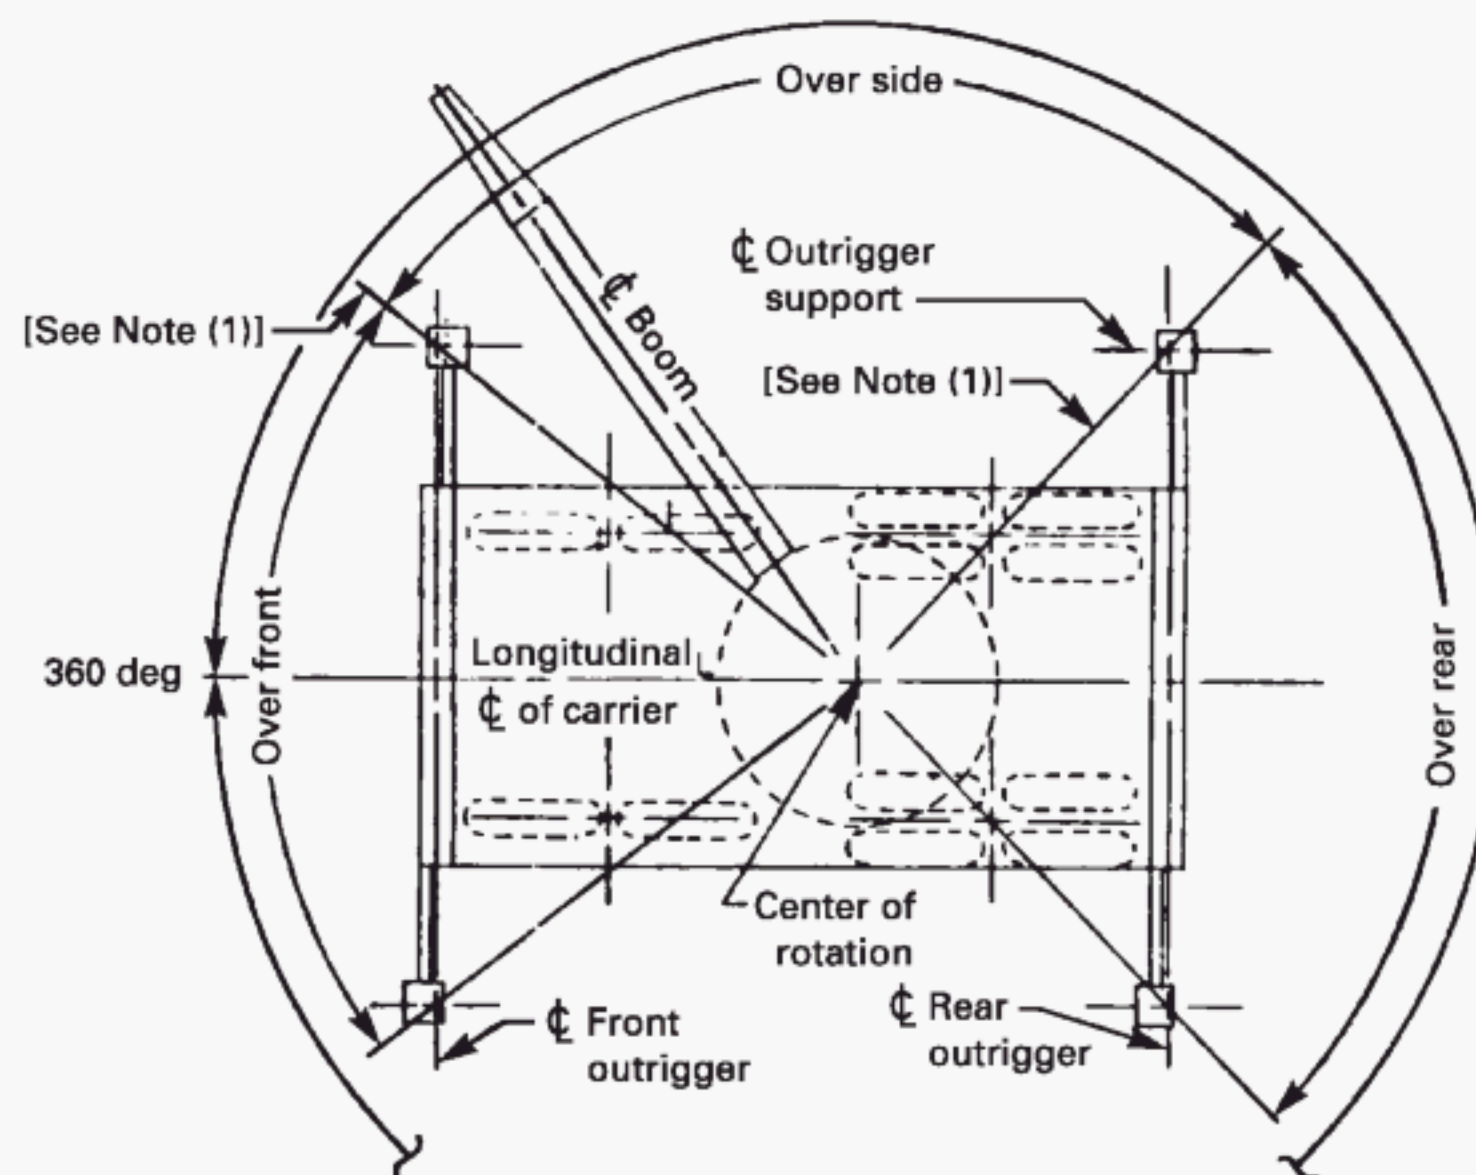


(b) Carrier on Outriggers — Front Outrigger Ahead of Front Wheels [Note (2)]

Fig. 11 Work Areas (Cont'd)

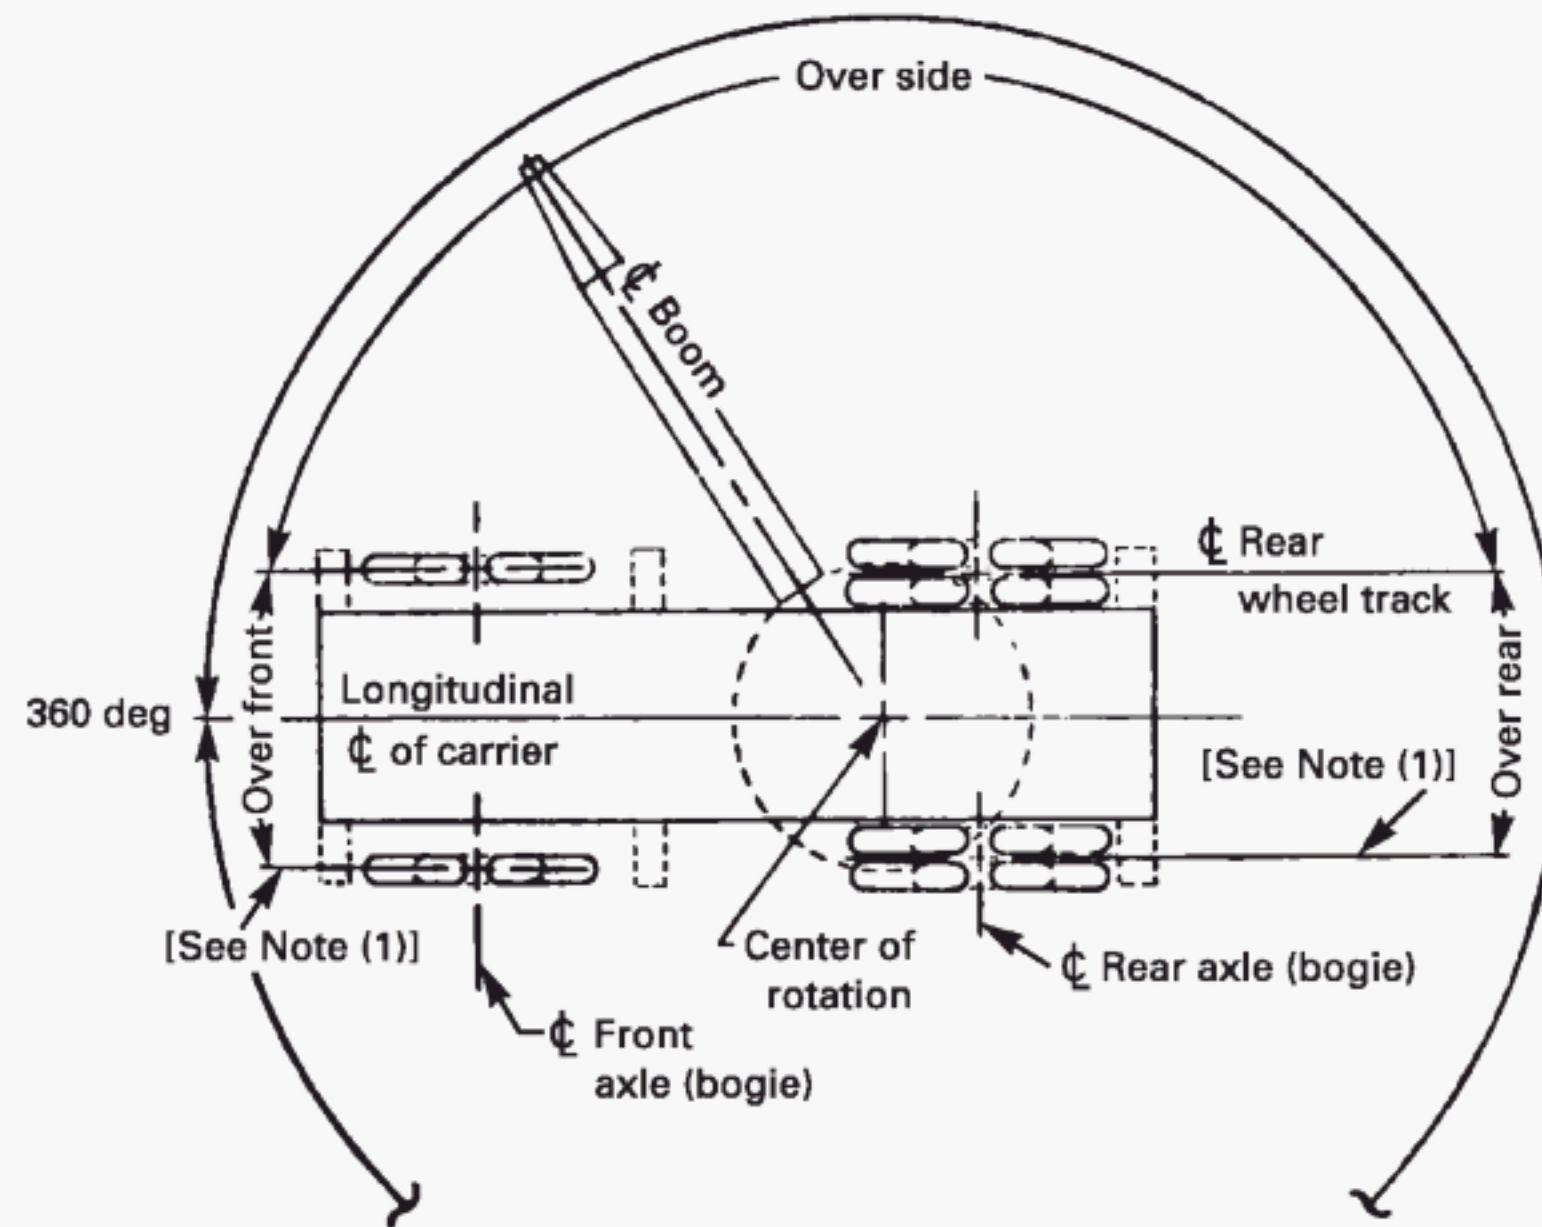


(c) Carrier on Tires [Note (2)]

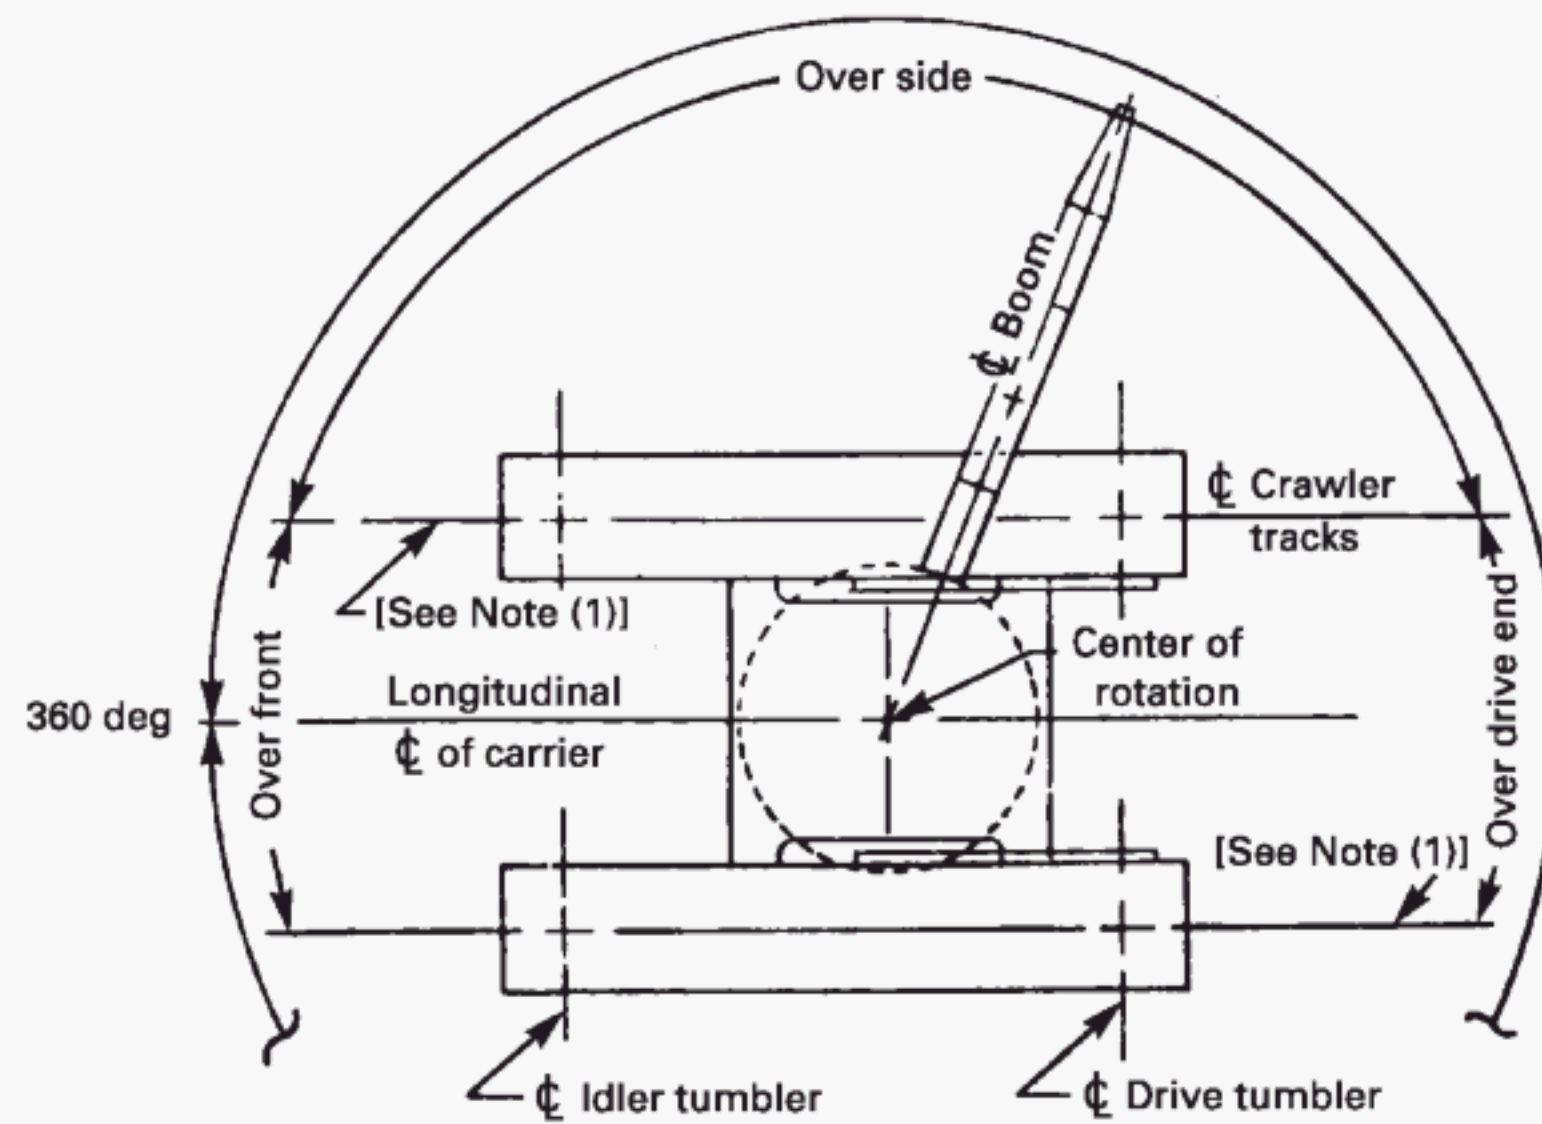


(d) Crawler Type Lower [Note (2)]


Fig. 11 Work Areas (Cont'd)

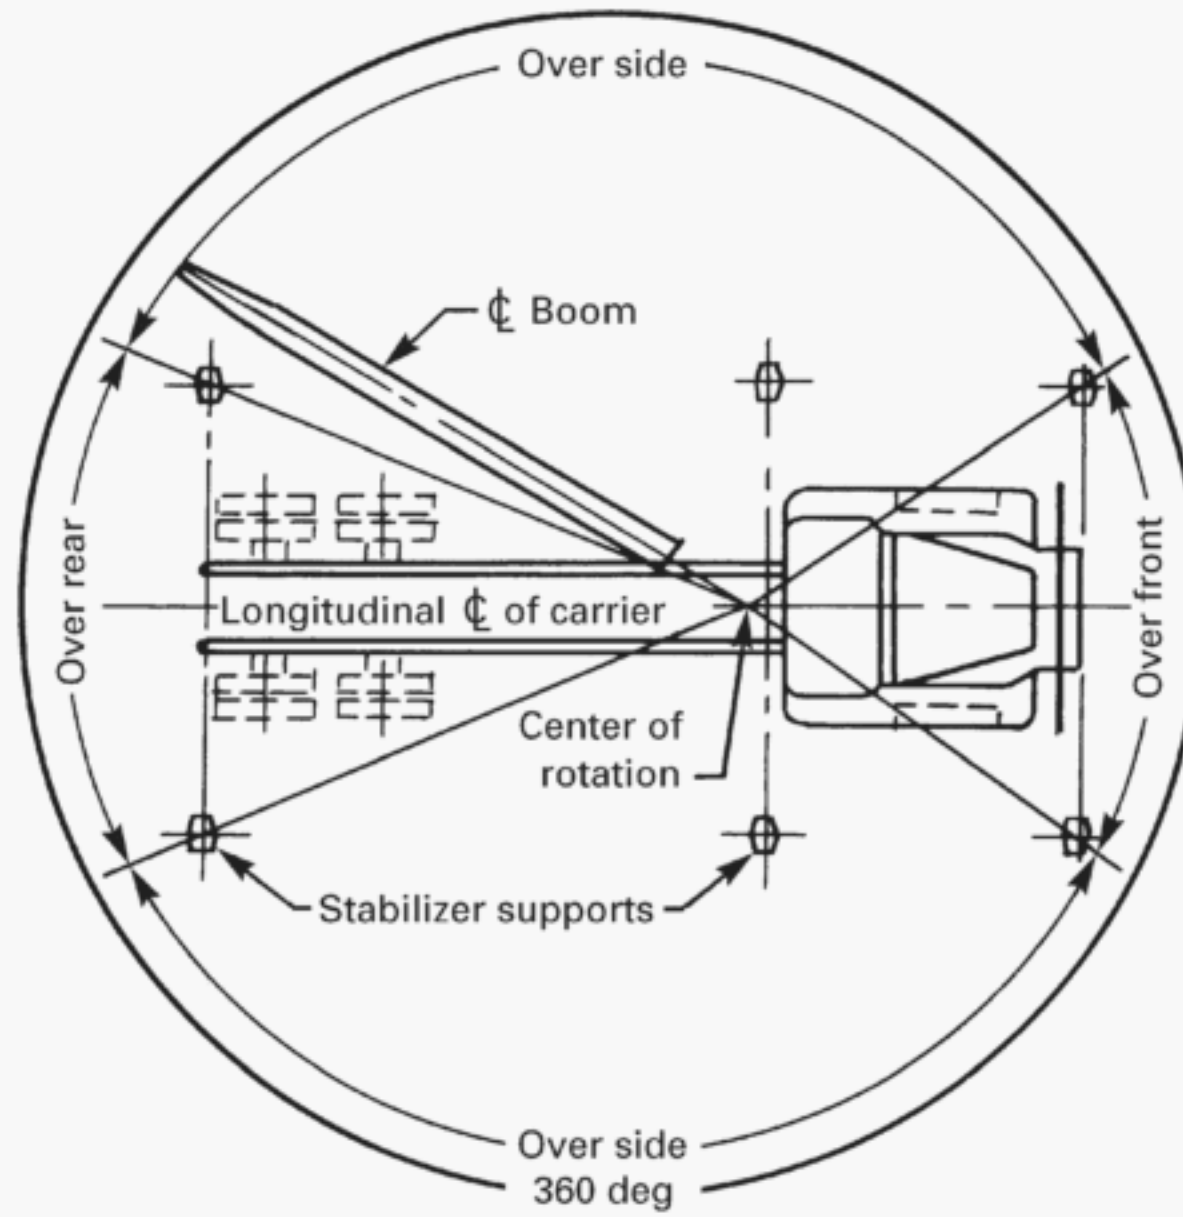

(e) Notes (1) and (2)

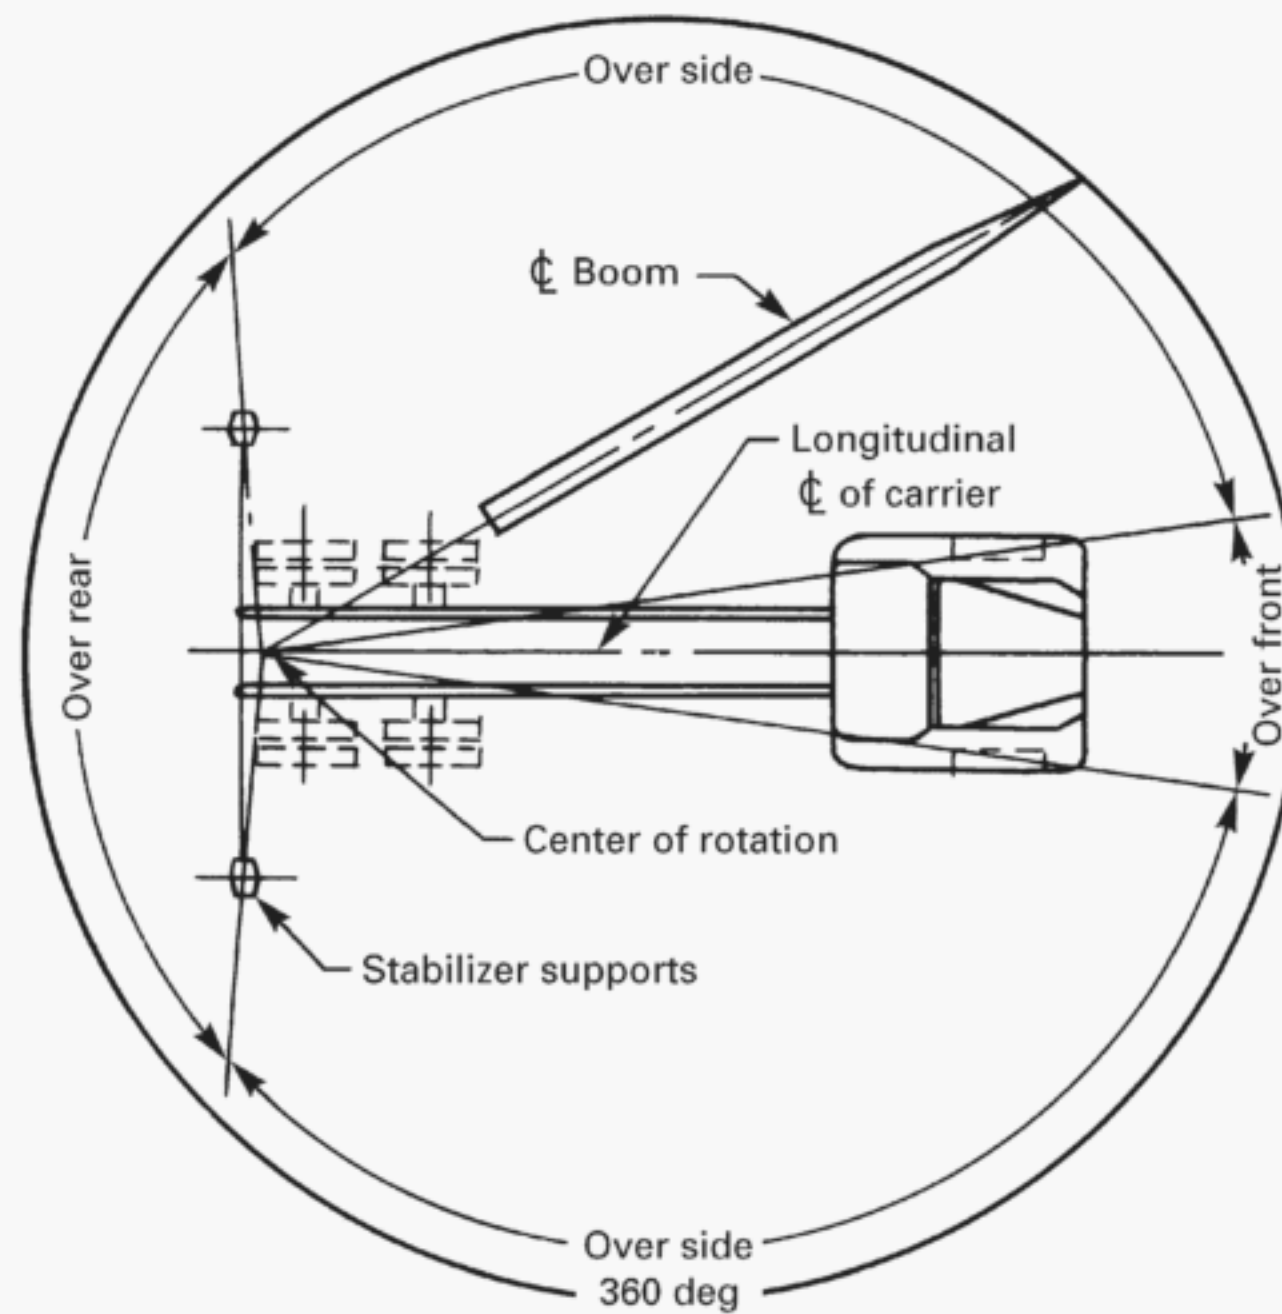

(f) Notes (1) and (2)

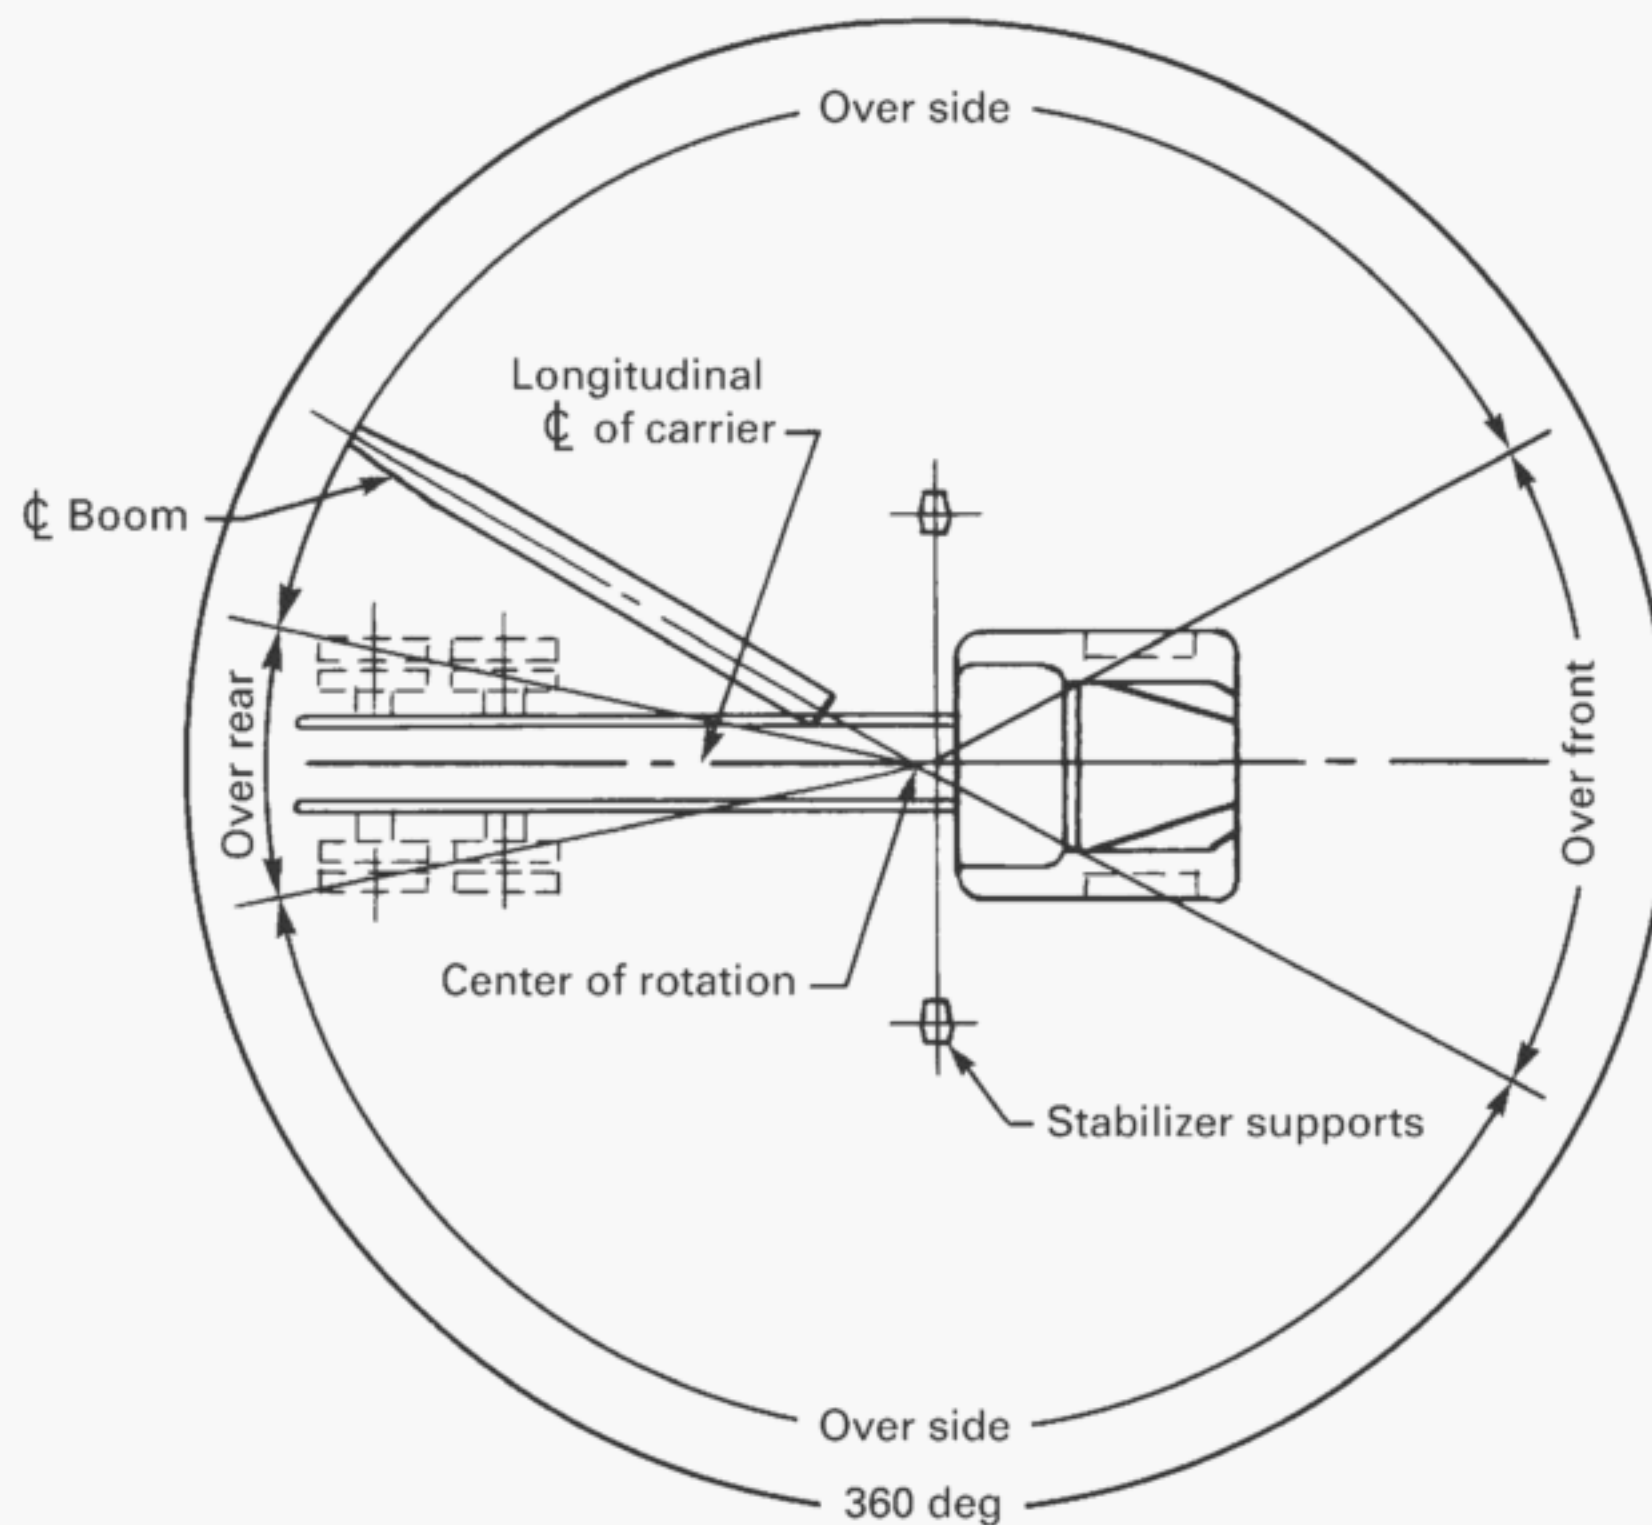Fig. 11 Work Areas (Cont'd)**(g) Notes (1) and (2)****NOTES:**

- (1) These lines determine the limiting position of any load for operation within the working areas indicated.
- (2) Configurations that deviate sufficiently from the work areas shown in Fig. 11 shall have their working areas by appropriate sets of diagrams supplied by the manufacturer.

operation unless specified by the manufacturer for stationary use

(e) crane to be standing on a firm supporting surface, level within 1% grade; locomotive cranes to be standing on a level track

(f) all fuel tanks to be at least half full and all other fluid levels as specified

5-1.2.3 Minimum Backward Stability Conditions

The following are minimum acceptable backward stability conditions:

(a) *Locomotive Cranes.* The horizontal distance between the center of gravity of the crane and the axis of rotation shall not exceed 39% of the track gage.

(b) *Crawler Cranes.* The horizontal distance between the center of gravity of the crane and the axis of rotation shall not exceed 70% of the radial distance from the axis of rotation to the backward tipping fulcrum in the least stable direction.

(c) *Wheel-Mounted Cranes (Counterweighted for "on Tires or on Wheels" Operation)*

(1) With the longitudinal axis of the rotating superstructure of the crane at 90 deg to the longitudinal axis of the carrier, the total load on all wheels on the side of the carrier under the boom shall not be less than 15% of the total weight of the crane.

(2) With the longitudinal axis of the rotating superstructure of the crane in line with the longitudinal axis of the carrier in either direction, the total load on all wheels under the lighter loaded end of the carrier shall not be less than 15% of the total weight of the crane in the manufacturer's specified work area and not be less than 10% of the total weight of the crane in an area not specified as a work area (see Fig. 11).

(d) *Wheel-Mounted Cranes (Counterweighted for "on Outrigger" Operation).* Under the conditions of paras. 5-1.2.2(a), (b), (c), (e), and (f), and with the machine supported level on fully extended outriggers with all tires free of the supporting surface, the resistance to overturning in a backward direction shall be equivalent to those conditions specified in paras. 5-1.2.3(c)(1) and (2).

5-1.2.4 Limitations in Boom Length or Boom Angle

Cranes may not have sufficient forward stability (in the direction of the boom) to handle some boom lengths. Information shall be provided on the load rating chart stating any limitations in boom length or boom angle for specified operating conditions of outriggers, direction of boom, or other requirements.

SECTION 5-1.3: BOOM HOIST, LOAD HOIST, AND TELESCOPING BOOM MECHANISMS

5-1.3.1 Boom Hoist Mechanism

The boom hoist may use a rope drum for its drive or hydraulic cylinder(s), and the supporting structure may be a gantry or the same hydraulic cylinder(s) used to elevate the boom.

(a) The boom hoist shall be capable of elevating and controlling the boom with its rated load (for rope boom hoists when reeved according to the manufacturer's specifications) and shall be capable of supporting the boom and rated load without action by the operator.

(b) In a rope-supporting and -elevating arrangement, boom lowering shall be done only under power control. Free-fall lowering of the boom shall not be permitted.

(1) The boom hoist drum shall have sufficient rope capacity to operate the boom in all positions, from the lowest permissible to the highest recommended, when using the manufacturer's recommended reeving and rope size. No less than two full wraps of rope shall remain on the drum with the boom point lowered to the level of the crane-supporting surface. The drum end of the rope shall be anchored to the drum by an arrangement specified by the crane or rope manufacturer.

(2) The drum shall provide a first layer rope pitch diameter of not less than 15 times the nominal diameter of the rope used.

(c) On rope boom support machines, a braking mechanism and a ratchet and pawl or other locking device shall be provided to prevent inadvertent lowering of the boom.

(d) An integrally mounted holding device (such as a load hold check valve) shall be provided with boom support hydraulic cylinder(s) to prevent uncontrolled lowering of the boom in the event of a hydraulic system failure (e.g., supply hose rupture).

5-1.3.2 Load Hoist Mechanism

The hoist mechanism may consist of a drum or hydraulic cylinder(s) with necessary rope reeving.

(a) *Load Hoist Drums.* The load hoist drum assemblies shall have power and operational characteristics sufficient to perform all load lifting and lowering functions required in crane service when operated under recommended conditions.

(1) Where brakes and clutches are used to control the motion of the load hoist drums, they shall be of a size and thermal capacity sufficient to control all rated crane loads with minimum recommended reeving (where maximum rated loads are being lowered with near maximum boom length or operations involving long lowering distances, power-controlled lowering is usually desirable to reduce demand on the load brake). Brakes and clutches shall be provided with adjustments where necessary to compensate for lining wear and to maintain force in springs, where used.

(2) Load hoist drums shall have rope capacity with the recommended rope size and reeving sufficient to perform crane service within the range of boom lengths, operating radii, and vertical lifts specified by the manufacturer.

(a) No less than two full wraps of rope shall remain on the drum when the hook is in the extreme low position.

(b) The drum end of the rope shall be anchored to the drum by an arrangement specified by the crane or rope manufacturer.

(c) The drum flange shall extend a minimum of $\frac{1}{2}$ in. (13 mm) over the top layer of rope at all times.

(3) The load hoist drums shall provide a first layer rope pitch diameter of not less than 18 times the nominal diameter of the rope used.

(4) A means controllable from the operator's station shall be provided to hold the drum from rotating in the lowering direction and be capable of holding the rated load without further action by the operator. Foot-operated brakes having a continuous mechanical linkage between the actuating and braking means, capable of transmitting full braking force, and equipped with a positive mechanical means to hold the linkage in the applied position, meet this requirement.

(5) Drum rotation indicators should be provided and located to afford sensing by the operator.

(b) Load Hoist Brakes

(1) When power-operated brakes having no continuous mechanical linkage between the actuating and braking means are used for controlling loads, an automatic means shall be provided to set the brake to prevent the load from falling in the event of loss of brake control power.

(2) Foot-operated brake pedals shall be constructed so that the operator's feet, when in proper position, will not slip off, and a means shall be provided for holding the brakes in the applied position without further action by the operator.

(c) *Power-Controlled Lowering.* When provided, a power-controlled lowering system shall be capable of handling rated loads and speeds as specified by the manufacturer. Such a system is recommended to assist in precision lowering and to reduce demand on the load brake.

(d) *Cylinders With Rope Reeving.* Cranes using a load hoist mechanism with hydraulic cylinder(s) and rope reeving shall have power and operational characteristics sufficient to perform all load lifting and lowering functions required in crane service when operated under recommended conditions. Sheaves used in multiple rope reeving shall have a pitch diameter not less than 16 times the nominal diameter of the rope and shall comply with para. 5-1.7.4.

5-1.3.3 Telescoping Boom

(a) Extension and retraction of boom sections may be accomplished through hydraulic, mechanical, or manual means.

(b) The powered retract function shall be capable of controlling any rated load that can be retracted.

(c) An integrally mounted holding device (such as a load hold check valve) shall be provided with the telescopic hydraulic cylinder(s) to prevent uncontrolled retraction of the boom in the event of a hydraulic system failure (e.g., supply hose rupture).

SECTION 5-1.4: SWING MECHANISM

5-1.4.1 Swing Control

The swing mechanism shall start and stop with controlled acceleration and deceleration.

5-1.4.2 Swing Braking Means and Locking Device

(a) A braking means with holding power in both directions shall be provided to restrict movement of the rotating superstructure, when desired during normal operation. The braking means shall be capable of being set in the holding position and remaining so without further action by the operator.

(b) A device or boom support shall be provided to prevent the boom and superstructure from rotating when in transit. It shall be constructed to minimize inadvertent engagement or disengagement.

SECTION 5-1.5: CRANE TRAVEL

5-1.5.1 Travel Controls

(a) On all crane types with a single control station, the controls for the travel function shall be located at the operator's station.

(b) On all wheel-mounted multiple control station cranes, the travel controls shall be located in the carrier cab. Auxiliary travel controls may also be provided in the crane cab. If there is an operator in the crane cab when the crane is traveling, communication shall be provided between the cabs. Use of audible signalling devices will meet this requirement.

5-1.5.2 Travel Mechanism

(a) On locomotive cranes, when the travel mechanism must be temporarily deactivated in the normal course of the requirements of the user, provision shall be made to disengage the travel mechanism from the cab or outside the crane body.

(b) On a crawler crane, the travel and steering mechanism shall be arranged so that it is not possible for both crawlers to freewheel without operator control. Control shall be effected from the operator's position on the revolving superstructure.

5-1.5.3 Travel Brakes and Locks

(a) On crawler cranes, brakes or other locking means shall be provided to hold the machine stationary during working cycles on a level grade or while the machine is standing on the maximum grade recommended for travel. Such brakes or locks shall be arranged to remain in engagement in the event of loss of operating pressure or power.

(b) On locomotive cranes, brakes shall be provided to bring the crane to a stop while descending the maximum grade recommended for travel. Also, manual brake engagement means shall be provided to hold the machine stationary on the maximum grade recommended for travel. Such means shall be arranged to remain in engagement in the event of loss of operating air pressure.

(c) On wheel-mounted cranes, means shall be provided to control completely the crane carrier travel when descending maximum grades specified by the manufacturer under maximum loading conditions. Brakes shall be provided to bring the machine to a stop on level ground within a distance of 32 ft (10 m) from a speed of 15 mph (6.7 m/s). Where long or steep grades are to be negotiated, a retarder or similar device should be provided. Means shall be provided to hold the machine stationary on the maximum grade for travel recommended by the manufacturer. Where travel brakes are operated by air pressure, means shall be provided for manually or automatically stopping the vehicle when the operating pressure falls below the specified minimum level.

(d) Vehicle-mounted cranes on commercial trucks shall meet the requirements of the U.S. Department of Transportation Standards.


SECTION 5-1.6: CONTROLS

5-1.6.1 General

(a) Basic controls (see Figs. 12 and 13) used during the crane operating cycle shall be located within reach of the operator while at the operator's station.

(b) Controls for load hoist, boom hoist, swing, and boom telescope (when applicable) shall be provided

Fig. 12 Telescopic Boom Crane Control Diagram
(Suggested Mobile Telescopic Boom Crane Basic Operating Control Arrangement for New Cranes)

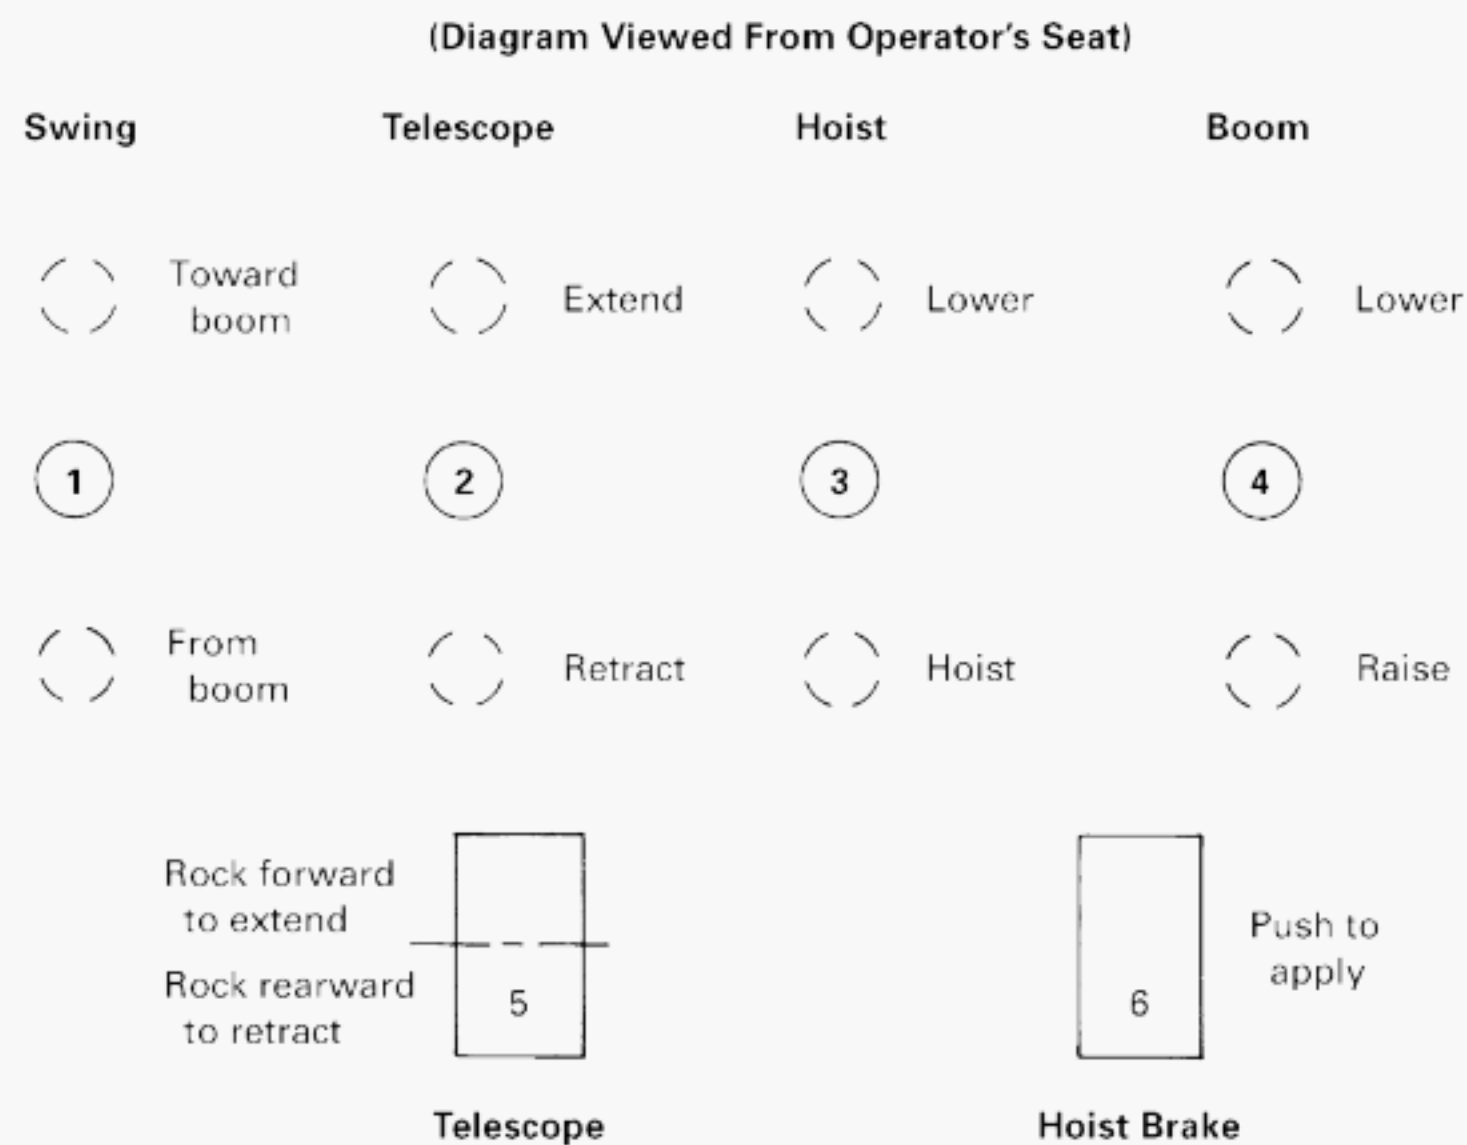


Control	Operation
1 Swing Control	Push forward to swing toward boom, swinging left for right side operator position and right for left side operator position. For centrally located operator, same as left side operator position. Pull rearward to reverse action.
2 Telescope Control (If Applicable)	Push forward to extend telescopic boom. Center position to hold. Pull rearward to retract telescopic boom.
3 Mobile Control	Pull rearward to hoist. Center position may be held. Push forward to lower by power.
4 Boom Control	Pull rearward to raise boom. Center position to hold. Push forward to lower boom.
5 Telescope Pedal (If Applicable)	Rock pedal forward to extend telescopic boom. Center position to hold. Rock pedal rearward to retract telescopic boom.
6 Hoist Brake (If Applicable)	Push to stop or hold lowering load. Release to lower load.

GENERAL NOTES:

- The control arrangement of Fig. 12 applies to mobile telescopic boom crane hand and foot controls.
- The arrangement of the basic controls should be shown in the control diagram. Controls 1, 2, 3, and 4 are levers for hand operation; controls 5 and 6 are pedals for foot operation, if applicable.
- Controls for auxiliary functions, such as telescope and hoist, should be located adjacent to the main controls. Controls for all other functions should be positioned to avoid operator confusion and physical interference. Nothing in this recommended practice precludes the use of additional controls subject to the recommendations herein.
- All basic controls should operate as specified in the control diagram. It is not the intent to limit the use thereof, or to apply to combination, automatic, or other special operating control requirements.

Fig. 13 Nontelescopic Boom Crane Control Diagram
(Suggested Mobile Nontelescopic Boom Crane Basic Operating Control Arrangement for New Cranes)

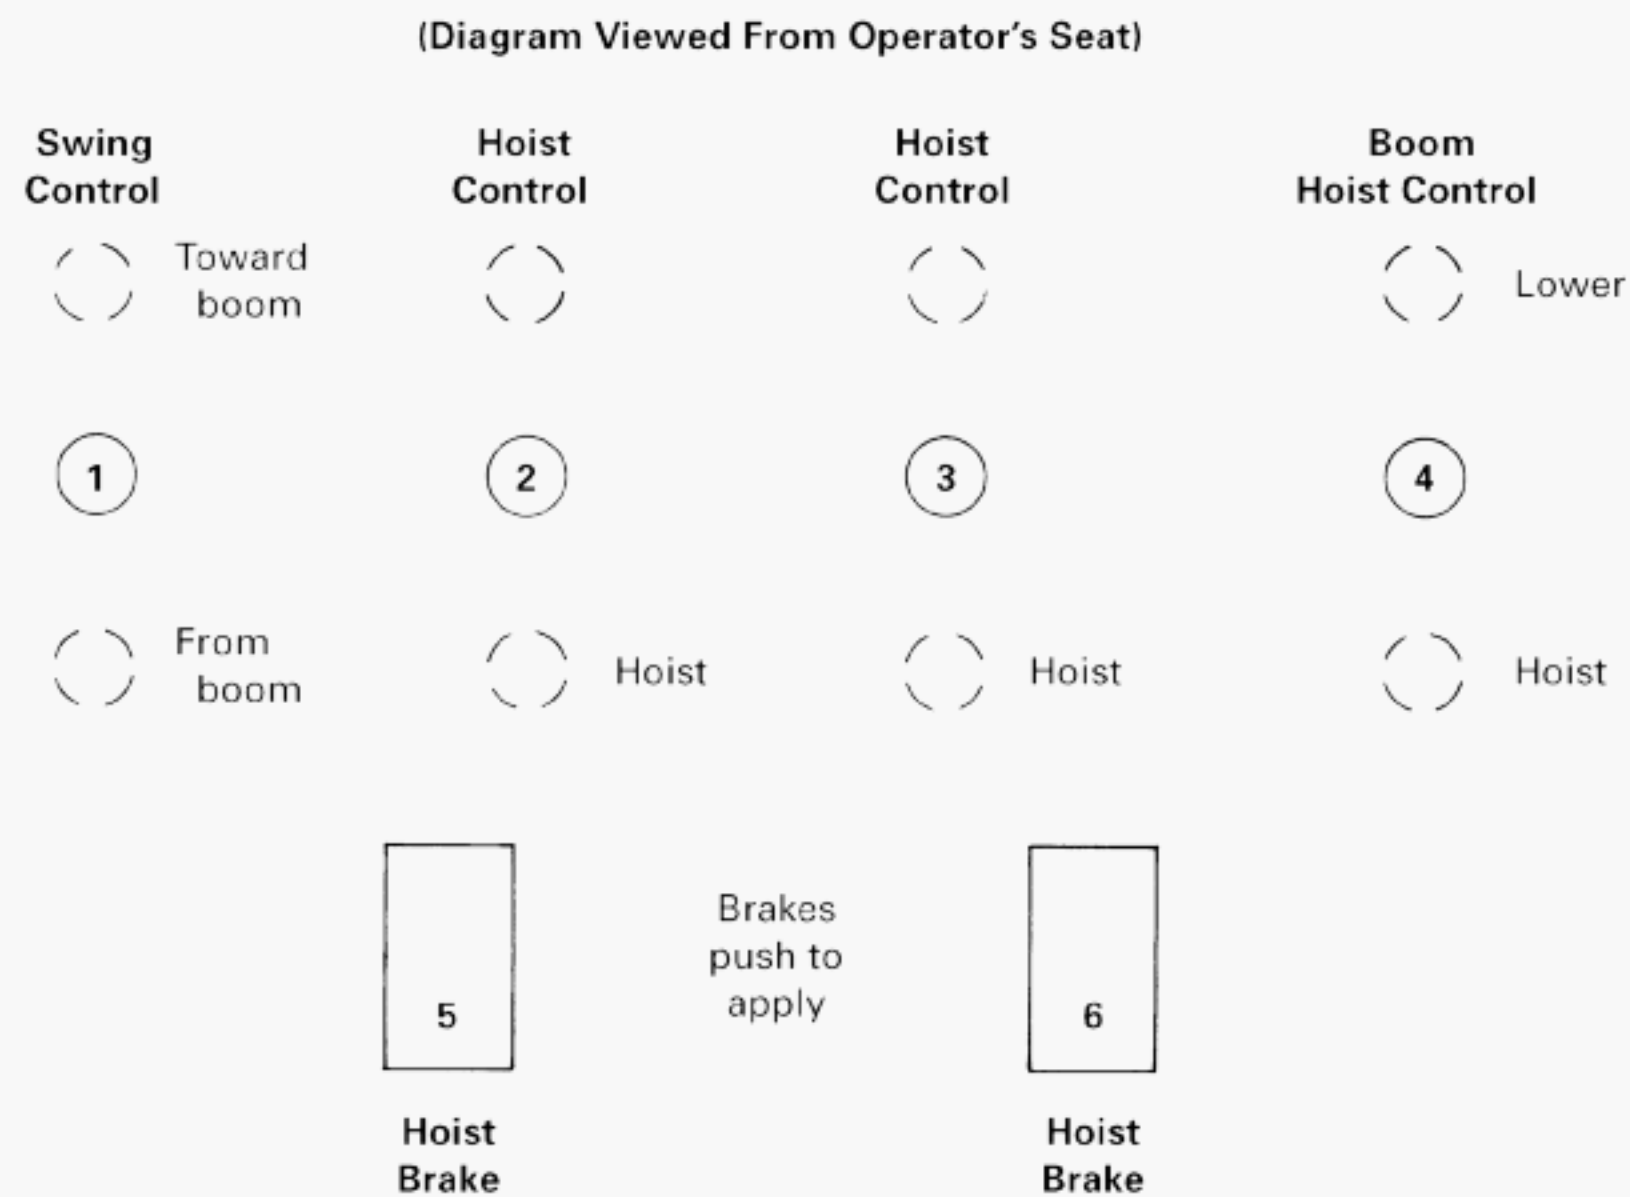

Control	Operation
1 Swing Control	Push forward to swing toward boom, swining left for right side operator position or swinging right for lest side operator position. Pull back to reverse these actions.
2 Hoist Control	Pull back to hoist. Center (release) to lower by brake 5. Push forward to lower, if provided with powered load lowering on this drum.
3 Hoist Control	Pull back to hoist. Center (release) to lower by brake 6. Push forward to lower, if provided with powered load lowering on this drum.
4 Boom Hoist control	Pull back to raise boom. Push forward to lower boom. Center (released) position must hold boom stationary even with boom safety pawl released.
5 Hoist Brake	Push to hold or to stop lowering load. Release to lower load.
6 Hoist Brake	Push to hold or to stop lowering load. Release to lower load.

GENERAL NOTES:

- The control arrangement of Fig. 13 applies to mobile nontelescopic boom crane hand and foot controls.
- The arrangement of the basic controls should be shown in the control diagram. Controls 1, 2, 3, and 4 are levers for hand operation; controls 5 and 6 are pedals for foot operation, if applicable.
- Controls for auxiliary functions, such as telescope and hoist, should be located adjacent to the main controls. Controls for all other functions should be positioned to avoid operator confusion and physical interference. Nothing in this recommended practice precludes the use of additional controls subject to the recommendations herein.
- All basic controls should operate as specified in the control diagram. It is not the intent to limit the use thereof, or to apply to combination, automatic, or other special operating control requirements.

with means for holding in the neutral position, without the use of positive latches.

(c) On machines equipped with telescoping-type booms, the arrangements of controls should be as shown in Fig. 12. On machines not equipped with telescoping-type booms, the arrangements of controls should be as shown in Fig. 13.

(d) Remote-operated cranes shall function so that if the control signal for any crane motion becomes ineffective, the crane motion shall stop.

(e) Provisions shall be made for emergency stop in the event of a device malfunction for remote-operated cranes.

5-1.6.2 Control Forces and Movements

(a) Forces shall not be greater than 35 lb (156 N) on hand levers and not greater than 50 lb (222 N) on foot pedals.

(b) Travel distance on hand levers shall not be greater than 14 in. (356 mm) from neutral position on two-way levers and not greater than 24 in. (610 mm) on one-way levers. Travel distance on foot pedals shall not be greater than 10 in. (254 mm).

5-1.6.3 Power Plant Controls

Controls for operating a superstructure mounted power plant shall be within reach of the operator and shall include the means to

- (a) start and stop
- (b) control the speed of internal combustion engines
- (c) stop two-cycle diesel engines under emergency conditions
- (d) shift selective transmissions

5-1.6.4 Engine Clutch

All cranes with a direct mechanical or hydrodynamic (such as torque converter or fluid coupling) drive to any crane function shall be provided with a clutch or other means for disengaging power. The controls shall be within reach of the operator's station.

SECTION 5-1.7: ROPES AND REEVING ACCESSORIES

5-1.7.1 Rope Design Factors

(a) For supporting rated loads and for supporting the boom and working attachments at recommended travel or transit positions and boom lengths

(1) the design factor for live or running ropes that wind on drums or travel over sheaves shall not be less than 3.5

(2) the design factor for boom pendants or standing ropes shall not be less than 3.0

(b) For supporting the boom under recommended boom erection conditions

(1) the design factor for live or running ropes shall not be less than 3.0

(2) the design factor for boom pendants or standing ropes shall not be less than 2.5

(c) Rotation-resistant ropes shall have a design factor of 5 or greater. [The design factor of 5 or greater for rotation-resistant ropes may be modified by the crane user by complying with the provisions of para. 5-3.2.1.1(d).]

(d) The design factor specified in paras. 5-1.7.1(a) through (c) shall be the total minimum breaking strength of all ropes in the system divided by the load imposed on the rope system when supporting the static weights of structure and crane rated load.

NOTE: Minimum breaking strength was formerly referred to as *nominal breaking strength*.

5-1.7.2 Ropes

(a) The ropes shall be of a construction recommended by the rope or crane manufacturer or a qualified person.

(b) Fiber core ropes shall not be used for boom hoist or luffing attachment reeving.

(c) Rotation-resistant ropes shall not be used for boom hoist reeving as normally defined in Section 5-1.3.

(d) Rotation-resistant ropes may be used as boom hoist reeving when load hoists are used as boom hoists for attachments such as luffing attachments or boom and mast attachment systems. Under these conditions, the following requirements shall be met:

(1) All the requirements of the boom hoist mechanism (see para. 5-1.3.1), with the exception of the drum, shall provide a first-layer rope pitch diameter of not less than 18 times the nominal diameter of the rope used.

(2) All the requirements of the load hoist mechanism (see para. 5-1.3.2).

(3) All sheaves used in the boom hoist reeving system shall have a rope pitch diameter of not less than 18 times the nominal diameter of the rope used.

(4) The design factor for the boom hoist reeving system shall not be less than 5.

(5) The design factor specified in para. 5-1.7.2(d)(4) shall be the total minimum breaking force of all parts of ropes in the system divided by the load imposed on the rope system when supporting the static weights of the structure and the crane rated load.

(6) The frequency of inspection of the wire rope shall be increased when using rotation-resistant rope in boom hoist or luffing attachment service.

(e) Rotation-resistant rope shall be given special care during installation as it is easily damaged.

(f) Socketing shall be done in the manner specified by the manufacturer of the wire rope or fitting.

(g) If a load is supported by more than one part of rope, the tension in the parts shall be equalized.

(h) Wherever exposed to ambient temperatures at the rope in excess of 180°F (82°C), rope having an independent wire-rope or wire-strand core, or other temperature damage-resistant core, shall be used.

5-1.7.3 Reeving Accessories

(a) Eye splices shall be made in a manner recommended by the rope or crane manufacturer, and rope thimbles should be used in the eye.

(b) Wire rope clips shall be drop-forged steel of the single-saddle- (U-bolt) or double-saddle-type clip. Malleable cast iron clips shall not be used. For spacing, number of clips, and torque values, refer to the clip manufacturer's recommendation. Wire rope clips attached with U-bolts shall have the U-bolt over the dead end of the rope and the live rope resting in the clip saddle. Clips shall be tightened evenly to the recommended torque. After the initial load is applied to the rope, the clip nuts shall be retightened to the recommended torque to compensate for any decrease in rope diameter caused by the load. Rope clip nuts should be retightened periodically to compensate for any further decrease in rope diameter during usage.

(c) Swaged, compressed, or wedge socket fittings shall be applied as recommended by the rope, crane, or fitting manufacturer. Any new poured socket or swaged socket assembly used as a boom pendant shall be proof tested to the crane or fitting manufacturer's recommendation, but in no case greater than 50% of the nominal strength of the component wire rope or structural strand.

(d) Wire rope clips used in conjunction with wedge sockets shall be attached to the unloaded dead end of the rope only (see Fig. 14). This does not preclude the use of devices specially designed for dead ending rope in a wedge socket.

5-1.7.4 Sheaves


(a) Sheave grooves shall be free from surface defects that could cause rope damage. The cross-sectional radius at the bottom of the groove should be such as to form a close-fitting saddle for the size of rope used. The sides of the groove shall be tapered outward and rounded at the rim to facilitate entrance of the rope into the groove. Flange rims shall run true about the axis of rotation.

(b) Sheaves carrying ropes that can be momentarily unloaded shall be provided with close-fitting guards or other devices to guide the rope back into the groove when the load is reapplied.

(c) The sheaves in the lower load block shall be equipped with close-fitting guards that will prevent ropes from becoming fouled when the block is lying on the ground with loose ropes.

(d) All sheave bearings, except for permanently lubricated bearings, shall be provided with means for lubrication.

Fig. 14 Dead Ending Rope in a Socket

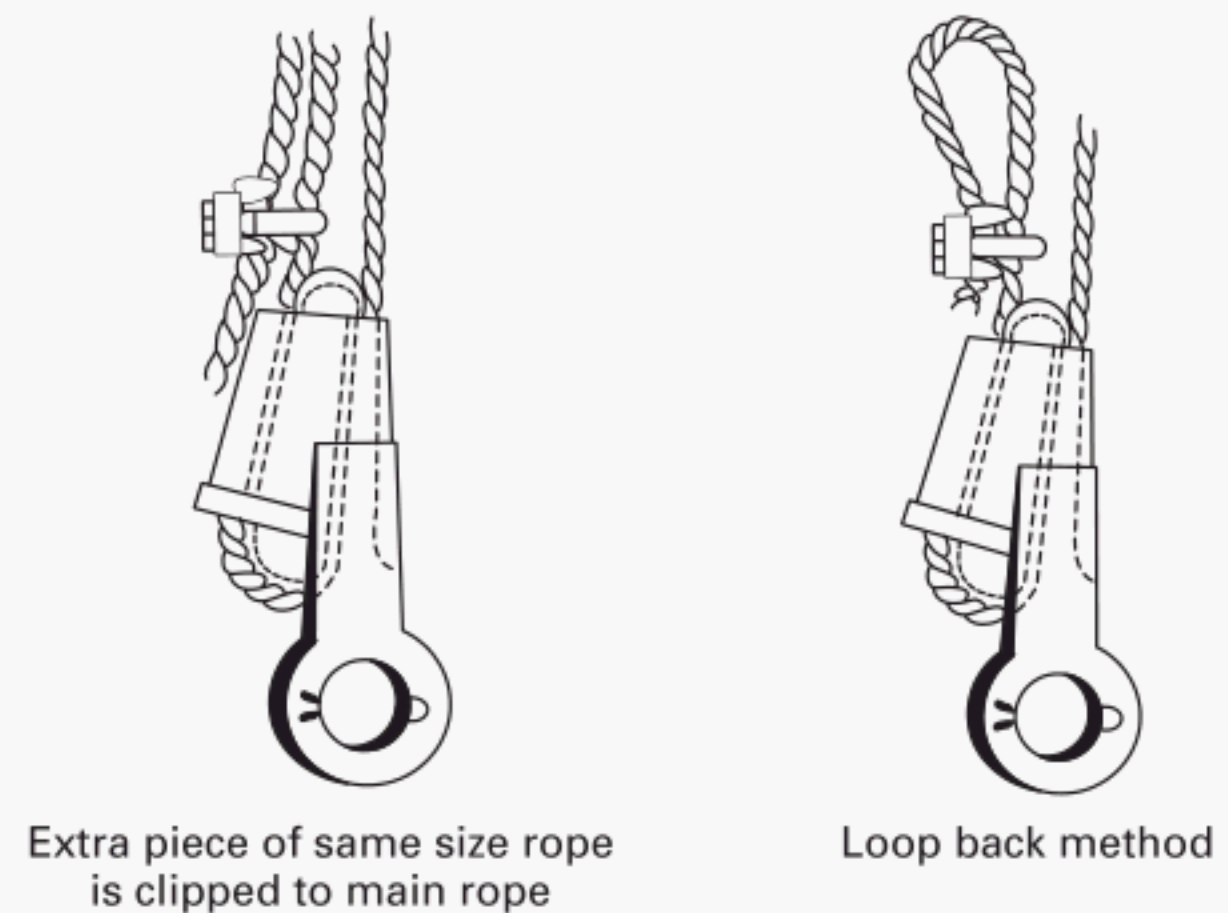

5-1.7.5 Sheave Sizes

(a) Boom-hoisting sheaves shall have pitch diameters of not less than 15 times the nominal diameter of the rope used.

(b) Load-hoisting sheaves shall have pitch diameters not less than 18 times the nominal diameter of the rope used.

(c) Load block (lower) sheaves shall have pitch diameters not less than 16 times the nominal diameter of the rope used.

5-1.7.6 Load Hook, Ball Assemblies, and Load Blocks

Load hooks, ball assemblies, and load blocks shall be of sufficient weight to overhaul the line from the highest hook position for boom or boom and jib lengths, and the number of parts of line in use. All hook and ball assemblies and load blocks shall be labeled with their rated capacity and weight. Hooks shall be equipped with latches unless the application makes the use of a latch impractical. When provided, the latch shall bridge the throat opening of the hook for the purpose of retaining slings or other lifting devices under slack conditions (refer to ASME B30.10).

SECTION 5-1.8: CABS

5-1.8.1 Construction

(a) Insofar as is practical, all cabs and enclosures shall be constructed to protect the superstructure machinery, brakes, clutches, and operator's station from the weather.

(b) All cab glazing shall be safety glazing material as defined in ANSI Z26.1. Windows shall be provided in the front and on both sides of the cab or operator's compartment with visibility forward and to either side. Visibility forward shall include a vertical range adequate

to cover the boom point at all times. The front window may have a section that can be readily removed or held open, if desired. If the section is of the type held in the open position, it shall be secured to prevent inadvertent closure. A windshield wiper should be provided on the front window.

(c) All cab doors, whether of the sliding or swinging type, shall be restrained from inadvertent opening or closing while traveling or operating the machine. The door adjacent to the operator, if of the swinging type, should open outward and, if of the sliding type, should slide rearward to open.

(d) A clear passageway shall be provided from the operator's station to an exit door on the operator's side.

(e) A seat belt shall be provided in all single-control-station, wheel-mounted cranes for use during transit and travel.

5-1.8.2 Platforms to Cab

(a) Principal walking surfaces shall be of a skid-resistant type.

(b) Outside platforms, if furnished, shall be provided with guardrails in accordance with ANSI/SAE J185. Where platforms are too narrow to use guardrails, handholds shall be provided at convenient points above the platform.

5-1.8.3 Access to Cab

(a) On locomotive cranes, handholds and steps shall be provided for access to the car and cab. Their construction shall conform to the requirements of the Safety Appliance Standards and Power Brakes Requirements of the Federal Railroad Administration.

(b) On all crawler and wheel-mounted cranes, handholds, steps, or both shall be provided, as needed, to facilitate entrance to and exit from the operator's cab and the carrier cab.

(c) Principal walking surfaces shall be of a skid-resistant type.

5-1.8.4 Cab Roof

Where necessary for rigging or service requirements, a ladder or steps shall be provided to give access to the cab roof. The ladder or steps shall conform to the requirements of ANSI/SAE J185. Where necessary, areas of the cab roof shall be capable of supporting, without permanent distortion, the weight of a 200 lb (90 kg) person.

SECTION 5-1.9: GENERAL REQUIREMENTS

5-1.9.1 Booms

(a) *Boom Stops.* Stops shall be provided to resist the boom falling backwards. Boom stops should be of one of the following types:

- (1) a fixed or telescoping bumper

- (2) a shock-absorbing bumper

- (3) hydraulic boom elevation cylinder(s)

(b) Jibs shall be restrained from backward over-turning.

(c) A boom angle or radius indicator readable from the operator's station shall be provided.

(d) A boom hoist disconnect, shutoff, or hydraulic relief shall be provided to automatically stop the boom hoist when the boom reaches a predetermined high angle.

(e) A boom length indicator readable from the operator's station shall be provided for telescoping booms unless the load rating is independent of the boom length.

(f) Booms, boom sections, and jibs shall be identified and shall be used only for the purposes recommended by the manufacturer.

5-1.9.2 Exhaust Gases

Engine exhaust gases shall be piped to the outside of the cab and discharged in a direction away from the operator. All exhaust pipes shall be guarded or insulated to prevent contact with personnel when performing normal duties.

5-1.9.3 Outriggers

(a) Means shall be provided to hold all outriggers in the retracted position while traveling and in the extended position when set for operating.

(b) Power-actuated jacks, where used, shall be provided with the means (such as integral load hold check valves on hydraulic cylinders, mechanical locks, etc.) to prevent loss of support under load.

(c) Means shall be provided for fastening outrigger floats to outriggers when in use.

(d) *Partially Extended Outrigger Beams, Outrigger Beam Position*

(1) A device or system shall be provided that accurately locates the outrigger beam(s) to coincide with the partially extended outrigger position(s) on the load capacity chart.

(2) Visible indication of the manufacturer's specified outrigger positions shall be provided by means such as stripes painted on the outrigger beams or an electronic display.

5-1.9.4 Locomotive Crane Equipment

(a) *Truck Wedges or Jacks.* Locomotive crane cars shall be provided with removable wedges or jacks for transmitting loads from the crane body directly to the wheels without permitting the truck springs to function when handling heavy loads. These wedges shall be removable, or the jacks releasable, in a manner positive for transit.

(b) *Truck Center Pins.* Each truck center pin shall be provided with a connecting means, such as a king bolt, to permit truck weight to contribute to crane stability.

5-1.9.5 Welded Construction

All welding procedures and welding operator qualifications shall be in accordance with ANSI/AWS D14.3 when welding is to be performed on load-sustaining members. Where special steels or other materials are used, the manufacturer shall provide welding procedures.

5-1.9.6 Guards for Moving Parts

(a) Exposed moving parts (such as gears, set screws, projecting keys, chains, chain sprockets, and reciprocating or rotating parts) that might constitute a hazard under normal operating conditions shall be guarded.

(b) Guards shall be fastened and shall be capable of supporting, without permanent distortion, the weight of a 200 lb (90 kg) person unless the guard is located where it is impossible for a person to step on it.

5-1.9.7 Clutch and Brake Protection

Dry friction brakes and clutches shall be protected against rain and other liquids such as oil and lubricants.

5-1.9.8 Hydraulic and Pneumatic Line Protection

Exposed lines subject to damage shall be protected in so far as it is practical.

5-1.9.9 Operational Aids

The crane and/or device manufacturer's instructions shall describe the purpose of the device. The crane and/or device manufacturer shall provide recommendations for continued operation or shutdown of the crane if operational aids are inoperative or malfunctioning. Without such recommendations and any prohibitions from the manufacturer against further operation, the requirements of para. 5-3.2.1.2(b) shall apply.

5-1.9.9.1 Two-Blocking Features

(a) Telescopic boom cranes shall be equipped with an anti-two-block device or a two-block damage prevention feature for all points of two-blocking (i.e., jibs, extensions; see Introduction, Section V, Effective Date).

(b) Lattice boom cranes shall be equipped with an anti-two-block device or a two-block warning feature that functions for all points of two-blocking (see Introduction, Section V, Effective Date).

5-1.9.9.2 Load Indicators, Rated Capacity Indicators, and Rated Capacity Limiters. All cranes with a maximum rated load capacity of 3 tons or more shall have a load indicator, rated capacity indicator, or rated capacity (load) limiter (see Introduction, Section V, Effective Date).

5-1.9.9.3 Boom Angle or Radius Indicator. See para. 5-1.9.1(c).

5-1.9.9.4 Boom Hoist Disconnect, Shutoff, or Hydraulic Relief. See para. 5-1.9.1(d).

5-1.9.9.5 Boom Length Indicator. See para. 5-1.9.1(e).

5-1.9.9.6 Crane Level Indicator. See para. 5-1.9.11(d).

5-1.9.9.7 Drum Rotation Indicator. See para. 5-1.3.2(a)(5).

5-1.9.10 Lubricating Points

Lubricating points should be accessible without the necessity of removing guards or other parts.

5-1.9.11 Miscellaneous Equipment

(a) The fuel tank filler pipe shall be located or protected so as not to allow spill or overflow to run onto the engine, exhaust, or electrical equipment of the machine being fueled.

(b) *Toolbox.* A metal receptacle should be secured to the crane for storing tools and lubricating equipment.

(c) An audible signal device shall be provided. The control for the device shall be within reach of the operator (refer to para. 5-3.3.4).

(d) Means shall be provided for the operator to visually determine the levelness of the crane.

(e) Hydraulic relief valves used to limit maximum pressure developed within the hydraulic system shall have pressure settings to permit operation under rated loading conditions and also to meet the requirements of para. 5-1.3.1(a).

(f) Means shall be provided for checking the manufacturer's specified pressure settings in each hydraulic circuit.

(g) A sign shall be installed, visible from the operator's station, warning that electrocution or serious bodily injury may occur, unless a minimum clearance of 10 ft (3 m) is maintained between the crane or load for energized power lines up to 50 kV, and that greater clearances are required for higher voltages [refer to para. 5-3.4.5(a)(1)].

SECTION 5-1.10: STRUCTURAL PERFORMANCE

(a) Prototype booms, jibs, gantries, masts, outriggers, carrier frames, and upper frames of production models of rope-supported lattice boom cranes shall meet the performance requirements of ANSI/SAE J987. On special designs (not production models) or specific lift situations, calculations that verify the equipment's ability to meet the performance requirements of ANSI/SAE J987, done by the crane manufacturer or a qualified person, are acceptable.

(b) Prototype booms, jibs, masts, lattice extensions (jibs), outriggers, carrier frames, and upper frames of production models of telescopic cantilever boom cranes shall meet the performance requirements of ANSI/SAE J1063. On special designs (not production models) or

specific lift situations, calculations that verify the equipment's ability to meet the performance requirements of ANSI/SAE J1063, done by the crane manufacturer or a qualified person, are acceptable.

SECTION 5-1.11: CRANES USED FOR OTHER THAN LIFTING SERVICE

(a) When cranes within the scope of this volume are used for service other than lifting service, the manufacturer or (when not available from the manufacturer) a

qualified person shall establish the ratings, operating limitations, maintenance, testing, and inspection requirements that apply during that use. The manufacturer or qualified person shall consider, as minimum requirements, the maintenance, testing, and inspection requirements in Chapter 5-2 and the conduct of operators provisions in Section 5-3.1.

(b) Documentation supporting the ratings, operating limitations, maintenance, testing, and inspection requirements of para. 5-1.11(a) shall be maintained.

Chapter 5-2

Inspection, Testing, and Maintenance

SECTION 5-2.1: INSPECTION — GENERAL

The manufacturer shall furnish required field assembly, operation, and maintenance information.

5-2.1.1 Inspection Classification

(a) *Initial Inspection.* Prior to initial use, all new and altered cranes shall be inspected by a qualified person to verify compliance with the provisions of this volume.

(b) *Regular Inspection.* Inspection procedure for cranes in regular service is divided into two general classifications based on the intervals at which inspection should be performed. The intervals depend on the nature of the critical components of the crane and the degree of their exposure to wear, deterioration, or malfunction. The two general classifications are herein designated as *frequent* and *periodic*, with respective intervals between inspections as defined.

(1) *Frequent Inspection.* Daily to monthly intervals by a designated person.

(2) *Periodic Inspection.* One- to 12-month intervals, or as specifically recommended by the manufacturer or a qualified person.

5-2.1.2 Frequent Inspection

Items such as the following shall be inspected by a designated person for defects at intervals as defined in para. 5-2.1.1(b)(1) or as specifically indicated by the manufacturer, including observation during operation for any deficiencies that might appear between regular inspections. Any deficiencies shall be carefully examined and a determination made as to whether they constitute a hazard.

(a) all control mechanisms for maladjustment interfering with proper operation: daily, when used

(b) all control mechanisms for excessive wear of components and contamination by lubricants or other foreign matter

(c) operational aids for malfunction: daily, when used

(d) all hydraulic hoses, particularly those that flex in normal operation of crane functions, should be visually inspected once every working day, when used

(e) hooks and latches for deformation, chemical damage, cracks, and wear (refer to ASME B30.10)

(f) rope reeving for compliance with crane manufacturer's specifications

(g) electrical apparatus for malfunctioning, signs of excessive deterioration, dirt, and moisture accumulation

(h) hydraulic system for proper oil level: daily, when used

(i) tires for recommended inflation pressure

5-2.1.3 Periodic Inspection

Complete inspections of the crane shall be performed by a qualified person at intervals as generally defined in para. 5-2.1.1(b)(2), depending on the crane's activity, severity of service, and environment, or as specifically indicated below. These inspections shall include the requirements of para. 5-2.1.2 and items such as the following. Any deficiencies shall be examined and determination made as to whether they constitute a hazard.

(a) deformed, cracked, or corroded members in the crane structure and entire boom

(b) loose bolts or rivets

(c) cracked or worn sheaves and drums

(d) worn, cracked, or distorted parts such as pins, bearings, shafts, gears, rollers, and locking devices

(e) excessive wear on brake and clutch system parts, linings, pawls, and ratchets

(f) any significant inaccuracies of operational aids [refer to para. 5-2.1.6(b)]

(g) lack of performance and compliance with safety requirements of gasoline, diesel, electric, or other power plants

(h) excessive wear of chain drive sprockets and excessive chain stretch

(i) cracked crane hooks

(j) malfunctioning travel steering, braking, and locking devices

(k) excessively worn or damaged tires

(l) hydraulic and pneumatic hose, fittings, and tubing

(1) evidence of leakage at the surface of the flexible hose or its junction with the metal and couplings.

(2) blistering or abnormal deformation of the outer covering of the hydraulic or pneumatic hose.

(3) leakage at threaded or clamped joints that cannot be eliminated by normal tightening or recommended procedures.

(4) evidence of excessive abrasion or scrubbing on the outer surface of a hose, rigid tube, or fitting. Means shall be taken to eliminate the interference of elements in contact or otherwise protect the components.

- (m) hydraulic and pneumatic pumps and motors
 - (1) loose bolts or fasteners
 - (2) leaks at joints between sections
 - (3) shaft seal leaks
 - (4) unusual noises or vibration
 - (5) loss of operating speed
 - (6) excessive heating of the fluid
 - (7) loss of pressure
- (n) hydraulic and pneumatic valves
 - (1) cracks in valve housing
 - (2) improper return of spool to neutral position
 - (3) leaks at spools or joints
 - (4) sticking spools
 - (5) failure of relief valves to attain correct pressure setting
 - (6) relief valve pressures as specified by the manufacturer
- (o) hydraulic and pneumatic cylinders
 - (1) drifting caused by fluid leaking across the piston
 - (2) rod seals leakage
 - (3) leaks at welded joints
 - (4) scored, nicked, or dented cylinder rods
 - (5) dented case (barrel)
 - (6) loose or deformed rod eyes or connecting joints
- (p) hydraulic filters
 - (1) evidence of rubber particles on the filter element, which may indicate hose, "O" ring, or other rubber component deterioration. Metal chips or pieces on the filter may denote failure in pumps, motors, or cylinders. Further checking will be necessary to determine the origin of the problem before corrective action can be taken.

5-2.1.4 Cranes Not in Regular Use

- (a) A crane that has been idle for a period of 1 month or more, but less than 6 months, shall be given an inspection by a qualified person conforming with the requirements of paras. 5-2.1.2 and 5-2.4.2(a) before being placed in service.
- (b) A crane that has been idle for a period of over 6 months shall be given a complete inspection by a qualified person conforming with the requirements of paras. 5-2.1.2, 5-2.1.3, and 5-2.4.2 before being placed in service.
- (c) Standby cranes shall be inspected by a qualified person at least semiannually in accordance with the requirements of paras. 5-2.1.2 and 5-2.4.2(a). Cranes that are exposed to adverse environmental conditions should be inspected more frequently.

5-2.1.5 Inspection Records

Dated records for periodic inspections shall be made on critical items such as brakes, crane hooks, ropes, hydraulic and pneumatic cylinders, and hydraulic and pneumatic relief pressure valves. Records should be kept where they are available to appointed personnel.

5-2.1.6 Operational Aids

- (a) Prior to daily operation, operational aids shall be checked in accordance with the device/crane manufacturer's recommended procedures to determine if they are functioning properly.
- (b) Operational aids shall be inspected and tested by a qualified person in accordance with the device/crane manufacturer's recommended procedures as part of the periodic inspection of para. 5-2.1.3.
- (c) When operational aids are inoperative or malfunctioning, the crane and/or device manufacturer's recommendations for continued operation or shutdown of the crane shall be followed until the problems are corrected [refer to para. 5-3.2.1.2(b)(1)]. Without such recommendations and any prohibitions from the manufacturer against further operation, the requirements of para. 5-3.2.1.2(b) shall apply.

SECTION 5-2.2: TESTING

5-2.2.1 Operational Tests

- (a) Each new production crane shall be tested by the manufacturer to the extent necessary to ensure compliance with the operational requirements of this Section. Testing shall include, but is not limited to, the following:
 - (1) load lifting and lowering mechanisms
 - (2) boom lifting and lowering mechanisms
 - (3) boom extension and retraction mechanism
 - (4) swinging mechanism
 - (5) travel mechanism
 - (6) safety devices
 - (7) operational aids
- (b) Where the complete production crane is not supplied by one manufacturer, such tests shall be conducted at final assembly.
- (c) Operational crane test results shall be made available.

5-2.2.2 Rated Load Test

- (a) Prior to initial use, all cranes in which load-sustaining parts have been altered, replaced, or repaired should be load tested by, or under the direction of, a qualified person. The replacement of the rope is specifically excluded from this requirement. However, a functional test of the crane under a normal operating load should be made prior to putting the crane back in service.
 - (1) Test loads shall not exceed 110% of the manufacturer's load rating.
 - (2) Written reports that show test procedures and confirm the adequacy of repairs or alterations shall be furnished by an appointed or authorized person.
 - (3) Operational aids that function to restrict the capacity of the crane may be temporarily overridden during the performance of the rated load test, if required, to handle the test load.

(b) Where rerating is necessary

(1) crawler and wheel-mounted cranes shall be tested in accordance with paras. 5-1.1.1(a) and 5-1.1.1(c) for load ratings where stability governs. Ratings governed by structural competence shall be established by the manufacturer or a qualified person and tested to 110% of the rating.

(2) locomotive cranes shall be tested in accordance with paras. 5-1.1.1(a) and 5-1.1.1(b) of this Volume.

(3) the rerating test report shall be made available.

(4) no crane shall be rerated in excess of the original load ratings unless such rating changes are approved by the crane manufacturer or a qualified person.

(c) If a Rated Load Test is required by an administrative or regulatory authority, the crane shall be tested in accordance with paras. 5-2.2.2(a) and (b).

SECTION 5-2.3: MAINTENANCE

5-2.3.1 Preventive Maintenance

(a) A preventive maintenance program shall be established and should be based on the recommendations outlined in the crane manufacturer's manual. If a qualified person determines it is appropriate, the program should also include that individual's additional recommendations based on a review of the crane application and operations. Dated records should be placed on file.

(b) It is recommended that replacement parts be obtained from the original equipment manufacturer.

5-2.3.2 Maintenance Procedure

(a) Before adjustments and repairs are started on a crane, the following precautions shall be taken as applicable:

(1) Place crane where it will cause the least interference with other equipment or operations in the area.

(2) Set all controls in the off position and ensure all operating features are secured from inadvertent motion by brakes, pawls, or other means.

(3) Render starting means inoperative.

(4) Stop power plant or disconnect at power takeoff.

(5) Lower the boom to the ground, if possible, or otherwise secure against dropping.

(6) Lower the lower load block to the ground or otherwise secure against dropping.

(7) Relieve hydraulic oil pressure from all hydraulic circuits before loosening or removing hydraulic components.

(b) "Warning" or "Out of Order" signs shall be placed on the crane controls. For locomotive cranes, blue flag protection shall be employed. Signs or flags shall be removed only by authorized personnel.

(c) After adjustments and repairs have been made, the crane shall not be returned to service until all guards have been reinstalled, trapped air removed from the

hydraulic system, safety devices reactivated, and maintenance equipment removed.

5-2.3.3 Adjustments and Repairs

(a) Any hazardous conditions disclosed by the inspection requirements of Section 5-2.1 shall be corrected before operation of the crane is resumed. Adjustments and repairs shall be done only by designated personnel.

(b) Adjustments shall be made within the manufacturer's specified tolerances to maintain correct functioning of components. The following are examples:

(1) functional operating mechanisms

(2) operational aids

(3) pneumatic, electronic, hydraulic, and mechanical control systems

(4) power plants

(5) braking systems

(c) Repairs or replacements shall be provided as needed for operation. The following are examples:

(1) critical parts of functional operating mechanisms that are cracked, broken, corroded, bent, or excessively worn.

(2) critical parts of the crane structure that are cracked, bent, broken, or excessively corroded.

(3) damaged or worn hooks as described under Maintenance in ASME B30.10. Repairs by welding or reshaping are not recommended.

(d) Replacement parts or repairs shall have at least the original design factor.

(e) Instructions shall be provided by the manufacturer for the removal of air from hydraulic circuits.

5-2.3.4 Lubrication

(a) All moving parts of the crane for which lubrication is specified should be regularly lubricated. Lubricating systems should be checked for proper delivery of lubricant. Care should be taken to follow the manufacturer's recommendations as to the points and frequency of lubrication, maintenance of lubricant levels, and types of lubricant to be used.


(b) Machinery shall be stationary while lubricants are being applied and protection provided as called for in paras. 5-2.3.2(a)(2) through (5), unless equipped for automatic or remote lubrication.

SECTION 5-2.4: ROPE INSPECTION, REPLACEMENT, AND MAINTENANCE

5-2.4.1 General

Due to crane design configuration to maintain mobility, sheave diameters, drum diameters, and rope design factors are limited. Because of these limited design parameters, inspection to detect deterioration in accordance with para. 5-2.4.2 and timely replacement in accordance with para. 5-2.4.3 are essential.

Fig. 15 Core Failure in 19×7 Rotation-Resistant Rope
(Note the lengthening of lay and reduction of diameter)

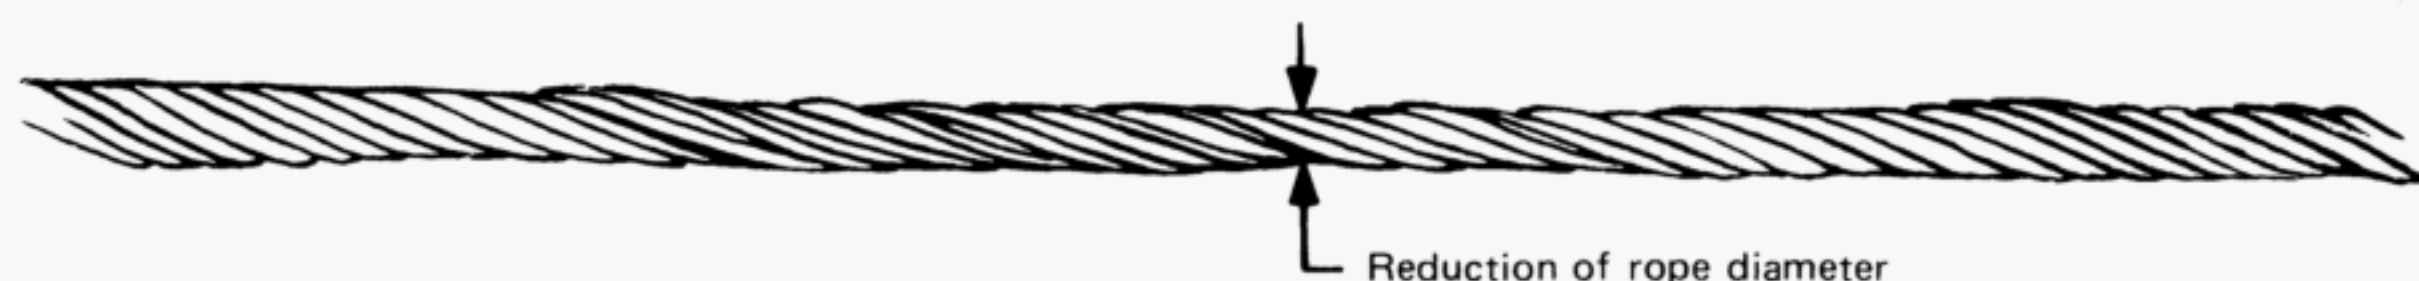

5-2.4.2 Inspection

(a) Frequent Inspection

(1) All running ropes in service should be visually inspected once each working day. A visual inspection shall consist of observation of all rope that can reasonably be expected to be in use during the day's operations. These visual observations should be concerned with discovering gross damage that may be an immediate hazard, including the following:

(a) distortion of the rope such as kinking, crushing, unstranding, birdcaging, main strand displacement, or core protrusion. Loss of rope diameter in a short rope length or unevenness of outer strands should provide evidence that the rope or ropes must be replaced.

(b) general corrosion.

(c) broken or cut strands.

(d) number, distribution, and type of visible broken wires [see paras. 5-2.4.3(b)(1), (2), and (7) for further guidance].

(e) core failure in rotation-resistant ropes (see Fig. 15). When such damage is discovered, the rope shall be either removed from service or given an inspection as detailed in para. 5-2.4.2(b).

(2) Care shall be taken when inspecting sections of rapid deterioration such as flange points, crossover points, and repetitive pickup points on drums.

(3) Care shall be taken when inspecting certain ropes such as the following:

(a) rotation-resistant ropes, because of their higher susceptibility to damage and increased deterioration when working on equipment with limited design parameters. The internal deterioration of rotation-resistant ropes may not be readily observable.

(b) boom hoist ropes, because of the difficulties of inspection and the important nature of these ropes.

(b) Periodic Inspection

(1) The inspection frequency shall be determined by a qualified person and shall be based on such factors as expected rope life as determined by experience on the particular installation or similar installations, severity of environment, percentage of capacity lifts, frequency rates of operation, and exposure to shock loads. Inspections need not be at equal calendar intervals and should be more frequent as the rope approaches the end of its useful life. This inspection shall be performed at least annually.

(2) Periodic inspections shall be performed by a qualified person. This inspection shall cover the entire length of the rope. Only the surface wires of the rope need be inspected. No attempt should be made to open the rope. Any deterioration resulting in an appreciable loss of original strength, such as the conditions described below, shall be noted and determination made as to whether further use of the rope would constitute a hazard.

(a) points listed in para. 5-2.4.2(a)

(b) reduction of rope diameter below nominal diameter due to loss of core support, internal or external corrosion, or wear of outside wires

(c) severely corroded or broken wires at end connections

(d) severely corroded, cracked, bent, worn, or improperly applied end connections

(3) Care shall be taken when inspecting sections of rapid deterioration, such as the following:

(a) sections in contact with saddles, equalizer sheaves, or other sheaves where rope travel is limited

(b) sections of the rope at or near terminal ends where corroded or broken wires may protrude

5-2.4.3 Rope Replacement

(07)

(a) No precise rules can be given for determination of the exact time for rope replacement since many variable factors are involved. Once a rope reaches any one of the specified removal criteria, it may be allowed to operate to the end of the work shift, based on the judgment of a qualified person. The rope shall be replaced after that work shift, at the end of the day, or at the latest time prior to the equipment being used by the next work shift.

(b) Removal criteria for rope replacement shall be as follows:

(1) Broken Wires

(a) in running ropes, six randomly distributed broken wires in one lay or three broken wires in one strand in one lay.

(b) in rotation-resistant ropes, two randomly distributed broken wires in six rope diameters or four randomly distributed broken wires in 30 rope diameters. For special conditions relating to rotation-resistant rope, refer to para. 5-3.2.1.1(d)(1)(b).

(2) one outer wire broken at the point of contact with the core of the rope that has worked its way out

of the rope structure and protrudes or loops out from the rope structure. Additional inspection of this section is required.

(3) independent wire rope core (IWRC) or strand core protrusion between the outer strands.

(4) kinking, crushing, birdcaging, or any other damage resulting in distortion of the rope structure.

(5) apparent damage from any heat source, including, but not limited to, welding, power line strikes, or lightning.

(6) reduction from nominal diameter of more than 5%.

(7) in standing ropes, more than two broken wires in one lay in sections beyond end connections or more than one broken wire at an end connection.

(8) severe corrosion as evidenced by pitting.

(9) deviation shall be allowed from the removal criteria listed in paras. 5-2.4.3(b)(1) through (8) only with written approval of the manufacturer of the specific wire rope.

(c) Broken wire removal criteria cited in this volume apply to wire rope operating on steel sheaves and drums. The user shall contact the sheave, drum, or crane manufacturer, or a qualified person, for broken wire removal criteria for wire ropes operating on sheaves and drums made of material other than steel.

(d) Replacement rope shall have the same or higher minimum breaking force as the original rope furnished or recommended by the crane manufacturer. Any deviation from the original size, grade, or construction shall be specified by a rope manufacturer, the crane manufacturer, or a qualified person.

(e) *Ropes Not in Regular Use.* All rope that has been idle for a period of a month or more due to shutdown or storage of a crane on which it is installed shall be given an inspection in accordance with para. 5-2.4.2(b) before it is placed in service. This inspection shall be for all types of deterioration and shall be performed by an appointed or authorized person.

(f) *Inspection Records*

(1) *Frequent Inspection.* No records required.

(2) *Periodic Inspection.* To establish data as a basis for judging the proper time for replacement, a dated report of rope condition at each periodic inspection shall

be kept on file. This report shall cover points of deterioration listed in para. 5-2.4.2(b)(2). If the rope is replaced, only that part need be recorded.

(g) A long-range inspection program should be established and should include records on the examination of ropes removed from service so that a relationship can be established between visual observation and actual condition of the internal structure.

5-2.4.4 Rope Maintenance

(a) Rope should be stored to prevent damage or deterioration.

(b) Unreeling or uncoiling of rope shall be done as recommended by the rope manufacturer and with care to avoid kinking or inducing a twist.

(c) Prior to cutting a wire rope, seizings shall be placed on each side of the point to be cut. The minimum length of each seizing shall be equal to or exceed the nominal diameter of the wire rope to which it is being applied. Seizing may consist of wire, strand, tape, or other material as long as the seizing holds the wires and strands firmly in place during the rope's cutting and handling. The required number of seizings is as follows: (07)

(1) on preformed wire rope, one seizing on each side of the point to be cut

(2) on nonpreformed wire rope, at least three seizings on each side of the wire rope to be cut

(d) During installation, care should be exercised to avoid dragging of the rope in dirt or around objects that will scrape, nick, crush, or induce sharp bends in it.

(e) Rope should be maintained in a well-lubricated condition. It is important that lubricant applied as part of a maintenance program shall be compatible with the original lubricant, and to this end, the rope manufacturer should be consulted; lubricant applied shall be of the type that does not hinder visual inspection. Those sections of rope that are located over sheaves or otherwise hidden during inspection and maintenance procedures require special attention when lubricating rope. The object of rope lubrication is to reduce internal friction and to prevent corrosion.

(f) When an operating rope shows greater wear at well-defined localized areas than on the remainder of the rope, rope life can be extended (in cases where a reduced rope length is adequate) by cutting off a section at the worn end, and thus shifting the wear to different areas of the rope.

Chapter 5-3

Operation

(07) SECTION 5-3.1: QUALIFICATIONS AND RESPONSIBILITIES

5-3.1.1 Operators

(a) Cranes shall be operated only by the following personnel:

(07) (1) those who have met the requirements of paras. 5-3.1.2(a) through (c) and (f).

(2) those who have met the requirements of para. 5-3.1.2(d) and who are training for the type of crane being operated. While operating the crane, the trainee must be under the direct supervision of a designated, qualified operator.

(3) maintenance personnel who have completed all operator trainee qualification requirements. Operation by these persons shall be limited to those crane functions necessary to perform maintenance on the crane or to verify the performance of the crane after maintenance has been performed.

(4) inspectors who have completed all operator trainee qualification requirements. Operation by these persons shall be limited to those crane functions necessary to accomplish the inspection.

(b) Only the personnel specified in para. 5-3.1.1(a), oilers, supervisors, and those specific persons authorized by supervisors shall enter a crane cab. Persons shall only enter the cab when their duties require them to do so, and then only with the knowledge of the operator or other appointed persons.

5-3.1.2 Qualifications for Operators

Operators shall be required to successfully meet the qualifications for the specific type of crane (see Figs. 1 through 10) that they are operating.

(a) Operator and operator trainees shall meet the following physical qualifications unless it can be shown that failure to meet the qualifications will not affect the operation of the crane. In such cases, specialized clinical or medical judgments and tests may be required.

(1) vision of at least 20/30 Snellen in one eye and 20/50 in the other, with or without corrective lenses.

(2) ability to distinguish colors, regardless of position, if color differentiation is required.

(3) adequate hearing to meet operational demands, with or without hearing aid.

(4) sufficient strength, endurance, agility, coordination, and speed of reaction to meet the operation demands.

(5) normal depth perception, field of vision, reaction time, manual dexterity, coordination, and no tendencies to dizziness or similar undesirable characteristics.

(6) a negative result for a substance abuse test. The level of testing will be determined by the standard practice for the industry where the crane is employed and this test shall be confirmed by a recognized laboratory service.

(7) no evidence of having physical defects or emotional instability that could render a hazard to the operator or others, or that in the opinion of the examiner could interfere with the operator's performance. If evidence of this nature is found, it may be sufficient cause for disqualification.

(8) no evidence of being subject to seizures or loss of physical control; such evidence shall be sufficient reason for disqualification. Specialized medical tests may be required to determine these conditions.

(b) Operator requirements shall include, but not be limited to, the following:

(1) evidence of successfully passing a physical examination as defined in para. 5-3.1.2(a).

(2) satisfactory completion of a written examination covering operational characteristics, controls, and emergency control skills, such as response to fire, power line contact, loss of stability, or control malfunction, as well as characteristic and performance questions appropriate to the crane type for which qualification is being sought.

(3) demonstrated ability to read, write, comprehend, and use arithmetic and a load/capacity chart, in the language of the crane manufacturer's operation and maintenance instruction materials.

(4) satisfactory completion of a combination written and verbal test on load/capacity chart usage that covers a selection of the configurations (the crane may be equipped to handle) for the crane type for which qualification is being sought.

(5) satisfactory completion of an operation test demonstrating proficiency in performing lifting, lowering, booming, telescoping, and swinging functions at various radii as well as shutdown. Testing shall also include proficiency in prestart and poststart inspection, securing procedures, and traveling by appropriate written, oral, or practical methods. (07)

(6) demonstrated understanding of the applicable sections of the B30 Standard and federal, state, and local requirements.

(c) Operators who have successfully qualified for a specific crane type shall be required to be requalified if supervision deems it necessary. Requalification shall include, but not be limited to, the following:

(1) evidence of successfully passing a current physical examination as defined in para. 5-3.1.2(a)

(2) satisfactory completion of a written examination covering operational characteristics, controls, and emergency control skills, such as response to fire, power line contact, loss of stability, or control malfunction, as well as characteristic and performance stability questions appropriate to the crane type for which requalification is being sought

(3) demonstrated ability to read, write, comprehend, and use arithmetic and a load/capacity chart, in the language of the crane manufacturer's operation and maintenance instruction materials

(4) satisfactory completion of a combination written and verbal test on load/capacity chart usage that covers a selection of the configurations (the crane may be equipped to handle) for the crane type for which requalification is being sought

(5) satisfactory completion of an operation test demonstrating proficiency in handling the specific crane type for which requalification is being sought, including both prestart and poststart inspections, maneuvering skills, shutdown, and securing procedures

(6) demonstrated understanding of the applicable sections of the B30 Standard and federal, state, and local safety requirements

(d) Trainee qualification requirements shall include, but not be limited to, the following:

(1) evidence of successfully passing a current physical examination as defined in para. 5-3.1.2(a)

(2) satisfactory completion of a written examination covering safety, operational characteristics and limitations, and controls of the crane type for which qualification is being sought

(3) demonstrated ability to read, write, comprehend, and use arithmetic and a load/capacity chart, in the language of the crane manufacturer's operations and maintenance instruction materials

(4) satisfactory completion of a combination written and verbal test on load/capacity chart usage covering various crane configurations

(e) Trainee qualification, operator qualification, and operator requalification shall be performed by a designated person who, by experience and training, fulfills the requirements of a qualified person.

(f) Operator physical examinations shall be required every 3 years as defined in para. 5-3.1.2(a), or more frequently if supervision deems it necessary.

(07) 5-3.1.3 Responsibilities

While the organizational structure of various projects may differ, the following roles are described here for

purposes of delineating responsibilities. All responsibilities listed below shall be assigned in the work site organization. (A single individual may perform one or more of these roles.)

crane operator: directly controls the crane's functions.

crane owner: has custodial control of a crane by virtue of lease or ownership.

crane user: arranges the crane's presence on a worksite and controls its use there.

lift director: directly oversees the work being performed by a crane and the associated rigging crew.

site supervisor: exercises supervisory control over the work site on which a crane is being used and over the work that is being performed on that site.

5-3.1.3.1 Responsibilities of the Crane Owner and Crane User.

In some situations the owner and the user may be the same entity and is therefore accountable for all of the following responsibilities. In other cases, the user may lease or rent a crane from the owner without supervisory, operational, maintenance, support personnel, or services from the owner. In these situations, paras. 5-3.1.3.1.1 and 5-3.1.3.1.2 shall apply:

5-3.1.3.1.1 The crane owner's responsibilities shall include the following:

(a) providing a crane that meets the requirements of Chapters 5-1 and 5-2 of the applicable volume as well as specific job requirements defined by the user

(b) providing a crane and all necessary components, specified by the manufacturer, that meets the user's requested configuration and capacity

(c) providing all applicable load/capacity chart(s) and diagrams

(d) providing additional technical information pertaining to the crane, necessary for crane operation, when requested by the crane user

(e) providing field assembly, disassembly, operation, maintenance information, and warning decals and placards installed as prescribed by the crane manufacturer

(f) establishing an inspection, testing, and maintenance program in accordance with Chapter 5-2 and informing the crane user of the requirements of this program

(g) using personnel that meet the requirements for a designated person as defined in para. 5-0.2.2 for the purposes of maintenance, repair, transport, assembly, and disassembly

(h) using personnel that meet the requirements for a qualified or designated person as defined in para. 5-0.2.2, for inspections as required in Section 5-2.1

5-3.1.3.1.2 The crane user's responsibilities shall include the following:

(a) complying with the requirements of this Volume, manufacturer's requirements, and those regulations applicable at the worksite

(b) using supervisors for crane activities that meet the requirements for a qualified person as defined in para. 5-0.2.2

(c) ensuring that the crane is in proper operating condition prior to initial use at the worksite by

(1) verifying that the crane owner has provided documentation that the crane meets the requirements of para. 5-2.1.5

(2) verifying that a frequent inspection has been performed as defined in para. 5-2.1.2

(d) verifying that the crane has the necessary lifting capacity to perform the proposed lifting operations in the planned configuration

(e) using crane operators that meet the requirements of paras. 5-3.1.1 and 5-3.1.2(f) and are qualified to perform the tasks that will be required with the crane to which they are assigned to operate

(f) ensuring the assigned operator(s) has been notified of adjustments or repairs that have not yet been completed, prior to commencing crane operations

(g) using personnel that meet the requirements for a qualified or designated person as defined in para. 5-0.2.2 for inspections as required in Section 5-2.1

(h) using personnel that meet the requirements for a designated person as defined in para. 5-0.2.2 for the purposes of maintenance, repair, transport, assembly, and disassembly

(i) ensuring that all personnel involved in maintenance, repair, transport, assembly, disassembly, and inspection are aware of their responsibilities, assigned duties, and the associated hazards

(j) ensuring that the inspection, testing, and maintenance programs specified by the crane owner are followed

5-3.1.3.2 Responsibilities of Site Supervisor and Lift Director. In some situations, the site supervisor and the lift director may be the same person.

5-3.1.3.2.1 The site supervisor's responsibilities shall include the following:

(a) ensuring that the crane meets the requirements of Chapter 5-2 prior to initial site usage.

(b) determining if additional regulations are applicable to crane operations.

(c) ensuring that a qualified person is designated as the lift director.

(d) ensuring that crane operations are coordinated with other jobsite activities that will be affected by or will affect lift operations.

(e) ensuring that the area for the crane is adequately prepared. The preparation includes, but is not limited to, the following:

(1) access roads for the crane and associated equipment

(2) sufficient room to assemble and disassemble the crane

(3) an operating area that is suitable for the crane with respect to levelness, surface conditions, support capability, proximity to power lines, excavations, slopes, underground utilities, subsurface construction, and obstructions to crane operation

(4) traffic control as necessary to restrict unauthorized access to the crane's working area

(f) ensuring that work involving the assembly and disassembly of a crane is supervised by a qualified person.

(g) ensuring that crane operators meet the requirements of para. 5-3.1.2.

(h) ensuring that conditions that may adversely affect crane operations are addressed. Such conditions include, but are not limited to, the following:

(1) poor soil conditions

(2) wind velocity or gusting winds

(3) heavy rain

(4) fog

(5) extreme cold

(6) artificial lighting

(i) allowing crane operation near electric power lines only when the requirements of para. 5-3.4.5 have been met.

(j) permitting special lifting operations only when equipment and procedures required by this Volume, the crane manufacturer, or a qualified person are employed. Such operations include, but are not limited to, the following:

(1) multiple crane lifts

(2) lifting personnel

(3) pick and carry operations

(k) ensuring that work performed by the rigging crew is supervised by a qualified person.

(l) ensuring that crane maintenance is performed by a designated person.

5-3.1.3.2.2 The lift director's responsibilities shall include the following:

(a) being present at the jobsite during lifting operations.

(b) stopping crane operations if alerted to an unsafe condition affecting those operations.

(c) ensuring that the preparation of the area needed to support crane operations has been completed before crane operations commence.

(d) ensuring necessary traffic controls are in place to restrict unauthorized access to the crane's work area.

(e) ensuring that personnel involved in crane operations understand their responsibilities, assigned duties, and the associated hazards.

(f) addressing safety concerns raised by the operator or other personnel and being responsible if he decides to overrule those concerns and directs crane operations to continue. (In all cases, the manufacturer's criteria for

safe operation and the requirements of this Volume shall be adhered to.)

(g) appointing the signalperson(s) and conveying that information to the crane operator.

(h) ensuring that signalperson(s) appointed meet the requirements of Section 5-3.3.

(i) allowing crane operation near electric power lines only when the requirements of para. 5-3.4.5 and any additional requirements determined by the site supervisor have been met.

(j) ensuring precautions are implemented when hazards associated with special lifting operations are present. Such operations include, but are not limited to, the following:

- (1) multiple crane lifts
- (2) lifting personnel
- (3) pick and carry operations
- (4) mobile cranes operating on barges

(k) ensuring that the applicable requirements of ASME B30.23 are met when lifting personnel.

(l) informing the crane operator of the weight of loads to be lifted, as well as the lifting, moving, and placing locations for these loads.

(m) obtaining the crane operator's verification that this weight does not exceed the crane's rated capacity.

(n) ensuring that a crane's load rigging is performed by designated personnel as defined in para. 5-0.2.2.

(o) ensuring that the load is properly rigged and balanced before it is lifted more than a few inches.

5-3.1.3.3 Responsibilities of Crane Operators. The operator shall be responsible for the following listed items. The operator shall not be responsible for hazards or conditions that are not under his direct control and that adversely affect the lift operations. Whenever the operator has doubt as to the safety of crane operations, the operator shall stop the crane's functions in a controlled manner. Lift operations shall resume only after safety concerns have been addressed or the continuation of crane operations is directed by the lift director.

5-3.1.3.3.1 The operator's responsibilities shall include the following:

(a) reviewing the requirements for the crane with the lift director before operations.

(b) knowing what types of site conditions could adversely affect the operation of the crane and consulting with the lift director concerning the possible presence of those conditions.

(c) understanding and applying the information contained in the crane manufacturer's operating manual.

(d) understanding the crane's functions and limitations as well as its particular operating characteristics.

(e) using the crane's load/capacity chart(s) and diagrams and applying all notes and warnings related to the charts to confirm the correct crane configuration to suit the load, site, and lift conditions.

(f) refusing to operate the crane when any portion of the load or crane would enter the prohibited zone of energized power lines except as defined in para. 5-3.4.5.4.

(g) performing a daily inspection as specified in paras. 5-2.1.2(a), (c), (d), (h), and 5-2.4.2(a)(1).

(h) promptly reporting the need for any adjustments or repairs to a designated person.

(i) following applicable lock out/tag out procedures.

(j) not operating the crane when physically or mentally unfit.

(k) ensuring that all controls are in the off or neutral position and that all personnel are in the clear before energizing the crane or starting the engine.

(l) not engaging in any practice that will divert his attention while actually operating the crane controls.

(m) testing the crane function controls that will be used and operating the crane only if those function controls respond properly.

(n) operating the crane's functions, under normal operating conditions, in a smooth and controlled manner.

(o) knowing and following the procedures specified by the manufacturer or approved by a qualified person, for assembly, disassembly, setting up, and reeving the crane.

(p) knowing how to travel the crane.

(q) observing each outrigger during extension, setting, and retraction or using a signalperson to observe each outrigger during extension, setting, or retraction.

(r) ensuring that the load and rigging weight(s) have been provided.

(s) calculating or determining the net capacity for all configurations that will be used and verifying, using the load/capacity chart(s), that the crane has sufficient net capacity for the proposed lift.

(t) considering all factors known that might affect the crane capacity and informing the lift director of the need to make appropriate adjustments.

(u) knowing the standard and special signals as specified in Section 5-3.3 and responding to such signals from the person who is directing the lift or an appointed signalperson. (When a signalperson is not required as part of the lift operation, the operator is then responsible for the movement of the crane. However, the operator shall obey a stop signal at all times, no matter who gives it.)

(v) understanding basic load rigging procedures. For responsibility of rigging the load and ensuring that the load is rigged properly see paras. 5-3.1.3.2.2(n) and (o).

(w) if power fails during operations

(1) setting all brakes and locking devices

(2) moving all clutches or other power controls to the off or neutral position

(3) landing any load suspended below the hook under brake control if practical

(x) before leaving the crane unattended

(1) landing any load suspended below the hook, unless the requirements of para. 5-3.2.1.4(d) are met.

(2) disengaging the master clutch.

(3) setting travel, swing, boom brakes, and other locking devices.

(4) putting controls in the off or neutral position.

(5) stopping the engine. An exception to this may exist when crane operation is frequently interrupted during a shift and the operator must leave the crane. Under these circumstances, the engine may remain running and paras. 5-3.1.3.3.1(x)(1) through (4) shall apply. The operator shall be situated where any entry to the crane can be observed.

(6) considering the recommendations of the manufacturer for securing the crane, when a local weather storm warning exists.

SECTION 5-3.2: OPERATING PRACTICES

5-3.2.1 Handling the Load

5-3.2.1.1 Size of Load

(a) No crane shall be loaded beyond the specifications of the load rating chart, except for test purposes as provided in Section 5-2.2.

(b) The load to be lifted shall be within the rated capacity of the crane in its existing configuration [refer to para. 5-1.1.1(d)].

(c) When loads that are not accurately known are to be lifted, the designated person responsible for supervising the lifting operations shall ascertain that the weight of the load does not exceed the crane ratings at the maximum radius at which the load is to be handled.

(d) When rotation-resistant ropes are used for load hoisting with an operating design factor less than 5, but in no case less than 3.5, the following special provisions shall apply:

(1) For each such lifting assignment

(a) an appointed person shall direct each lift

(b) a qualified person shall ascertain that the rope is in satisfactory condition [paras. 5-2.4.2(a)(1)(a) through (e)] both before and after lifting; more than one broken wire in any one lay shall be sufficient reason to consider not using the rope for such lifts

(c) operations shall be conducted in such a manner and at such speeds as to minimize dynamic effects

(2) Each lift under these provisions shall be recorded in the crane inspection record and such prior uses shall be considered before permitting another such lift.

(3) These provisions are not intended to permit duty cycle or repetitive lifts to be made with operating design factors less than 5.

5-3.2.1.2 Operational Aids

(a) In all cases, verified weights, measured radii, and manufacturer's load/capacity chart capacities and

instructions shall take precedence over operational aids when handling a load. If it is necessary to temporarily override an operational aid to handle a rated capacity load within the limits established by the manufacturer's load capacity chart and instructions, the user shall comply with paras. 5-3.2.1.1(a) through (c).

(b) When operational aids are inoperative or malfunctioning, the crane and/or device manufacturer's recommendations for continued operation or shutdown of the crane shall be followed until the problems are corrected. Without such recommendations and any prohibitions from the manufacturer against further operation, the following requirements shall apply:

(1) Recalibration or repair of the operational aid shall be accomplished as soon as is reasonably possible, as determined by a qualified person.

(2) When a load indicator, rated capacity indicator, or rated capacity limiter is inoperative or malfunctioning, the designated person responsible for supervising the lifting operations shall establish procedures for determining load weights and for conducting the lifts in accordance with paras. 5-3.2.1.1(a) through (c).

(3) When a boom angle or radius indicator is inoperative or malfunctioning, radii or boom angle shall be determined by measurement.

(4) When an anti-two-block device, two-block damage prevention device, or two-block warning device is inoperative or malfunctioning, the designated person responsible for supervising the lifting operations shall establish procedures, such as assigning an additional signalperson, to furnish equivalent protection. This does not apply when lifting personnel. Personnel shall not be lifted when two-block devices are not functioning properly.

(5) When a boom length indicator is inoperative or malfunctioning, the designated person responsible for supervising the lifting operations shall establish procedures for conducting the lifts in accordance with paras. 5-3.2.2.1(a) through (c).

(6) When a level indicator is inoperative or malfunctioning, other means shall be used to level the crane within the level requirements specified by the manufacturer.

5-3.2.1.3 Attaching the Load

(a) The hoist rope shall not be wrapped around the load.

(b) The load shall be attached to the hook by means of slings or other devices of sufficient capacity.

5-3.2.1.4 Holding the Load

(a) The operator shall not leave the controls while the load is suspended, except as permitted in para. 5-3.2.1.4(d). (07)

(b) No person should be permitted to stand or pass under a suspended load.

(c) If the load hoist mechanism is not equipped with an automatic brake and the load must remain suspended for any considerable length of time, the operator shall hold the drum from rotating in the lowering direction by activating the device specified in para. 5-1.3.2(a)(4). The boom hoist brakes shall be set and the device specified in para. 5-1.3.1(c) shall be engaged.

(d) As an exception to para. 5-3.2.1.4(a), under those circumstances requiring a load to be held suspended for a period of time exceeding normal lifting operations, the operator may leave the controls provided that, prior to that time, the appointed individual and operator shall establish the requirements for restraining the boom hoist, telescoping, load, swing, and outrigger functions, and provide notices, barricades, or whatever other precautions may be necessary.

5-3.2.1.5 Moving the Load

(a) The person directing the lift shall see that

(1) the crane is level and, where necessary, blocked
(2) the load is well secured and balanced in the sling or lifting device before it is lifted more than a few inches

(3) the lift and swing path is clear of obstructions

(4) all persons are clear of the swing radius of the crane counterweight

(b) Before starting to lift, the following conditions should be noted:

(1) The hoist rope shall not be kinked.

(2) Multiple-part lines shall not be twisted around each other.

(3) The hook shall be brought over the load in such a manner as to minimize swinging.

(4) If there is a slack rope condition, it shall be determined that the rope is seated on the drum and in the sheaves as the slack is removed.

(5) The effect of ambient wind on the load and on crane stability.

(c) During lifting operations, care shall be taken that

(1) there is no sudden acceleration or deceleration of the moving load

(2) load, boom, or other parts of the machine do not contact any obstruction

(d) Side loading of booms shall be limited to freely suspended loads. Cranes shall not be used for dragging loads sideways.

(e) The operator should avoid carrying loads over people.

(f) On wheel-mounted cranes, no loads shall be lifted over the front area, except as specified by the crane manufacturer.

(g) The operator shall test the brakes each time a load approaching the rated load is handled by lifting it a few inches and applying the brakes.

(h) Any time outriggers are used, the outriggers shall be extended or deployed per the crane manufacturer's

load/capacity chart specifications and set to remove the machine weight from the wheels, except for locomotive cranes. [For locomotive cranes, refer to para. 5-3.2.1.5(j).] When partially extended outriggers are used, the following requirements, when applicable, shall be met:

(1) Crane operation with partially extended outriggers shall only be undertaken if approved by the crane manufacturer.

(2) Outriggers shall be set at equal positions that correspond to the load/capacity charts supplied by the manufacturer for those positions. Only the load chart(s) corresponding to the outrigger positions shall be used for operation.

(3) When situations arise where outriggers must be set at unequal positions that correspond to the load/capacity charts supplied by the manufacturer (see Fig. 16), the load/capacity charts corresponding with the individual quadrants of operation shall be used. The manufacturer or qualified person shall be consulted to determine if any capacity reductions, special operating procedures, or limitations are required.

(a) The crane operator shall approve the setup of the crane. If a crane operator has a supervisor involved in crane setup, the operator and the supervisor shall discuss and agree upon any required limitations.

(b) A means shall be provided to limit crane movement or to warn the operator of proximity to prohibited operational ranges or areas.

(4) When situations arise that will not permit outriggers to be set at positions that correspond to the locations established by the manufacturer's load/capacity chart(s), the crane manufacturer shall be consulted to determine if any capacity reductions, special operating procedures, or limitations are required. If required information is not available from the manufacturer, a qualified person shall be consulted.


(i) Neither the load nor the boom shall be lowered below the point where less than two full wraps of rope remain on their respective drums.

(j) When lifting loads with locomotive cranes without using outriggers, the manufacturer's instructions shall be followed regarding truck wedges or screws. When using outriggers to handle loads, the manufacturer's instructions shall be followed.

(k) When two or more cranes are used to lift one load, one designated person shall be responsible for the operation. That person shall analyze the operation and instruct all personnel involved in the proper positioning, rigging of the load, and the movements to be made. Decisions such as the necessity to reduce crane ratings, load position, boom location, ground support, and speed of movement shall be in accordance with this analysis.

(l) While in transit, the following additional precautions shall be exercised:

(1) The boom should be carried in line with the direction of motion.

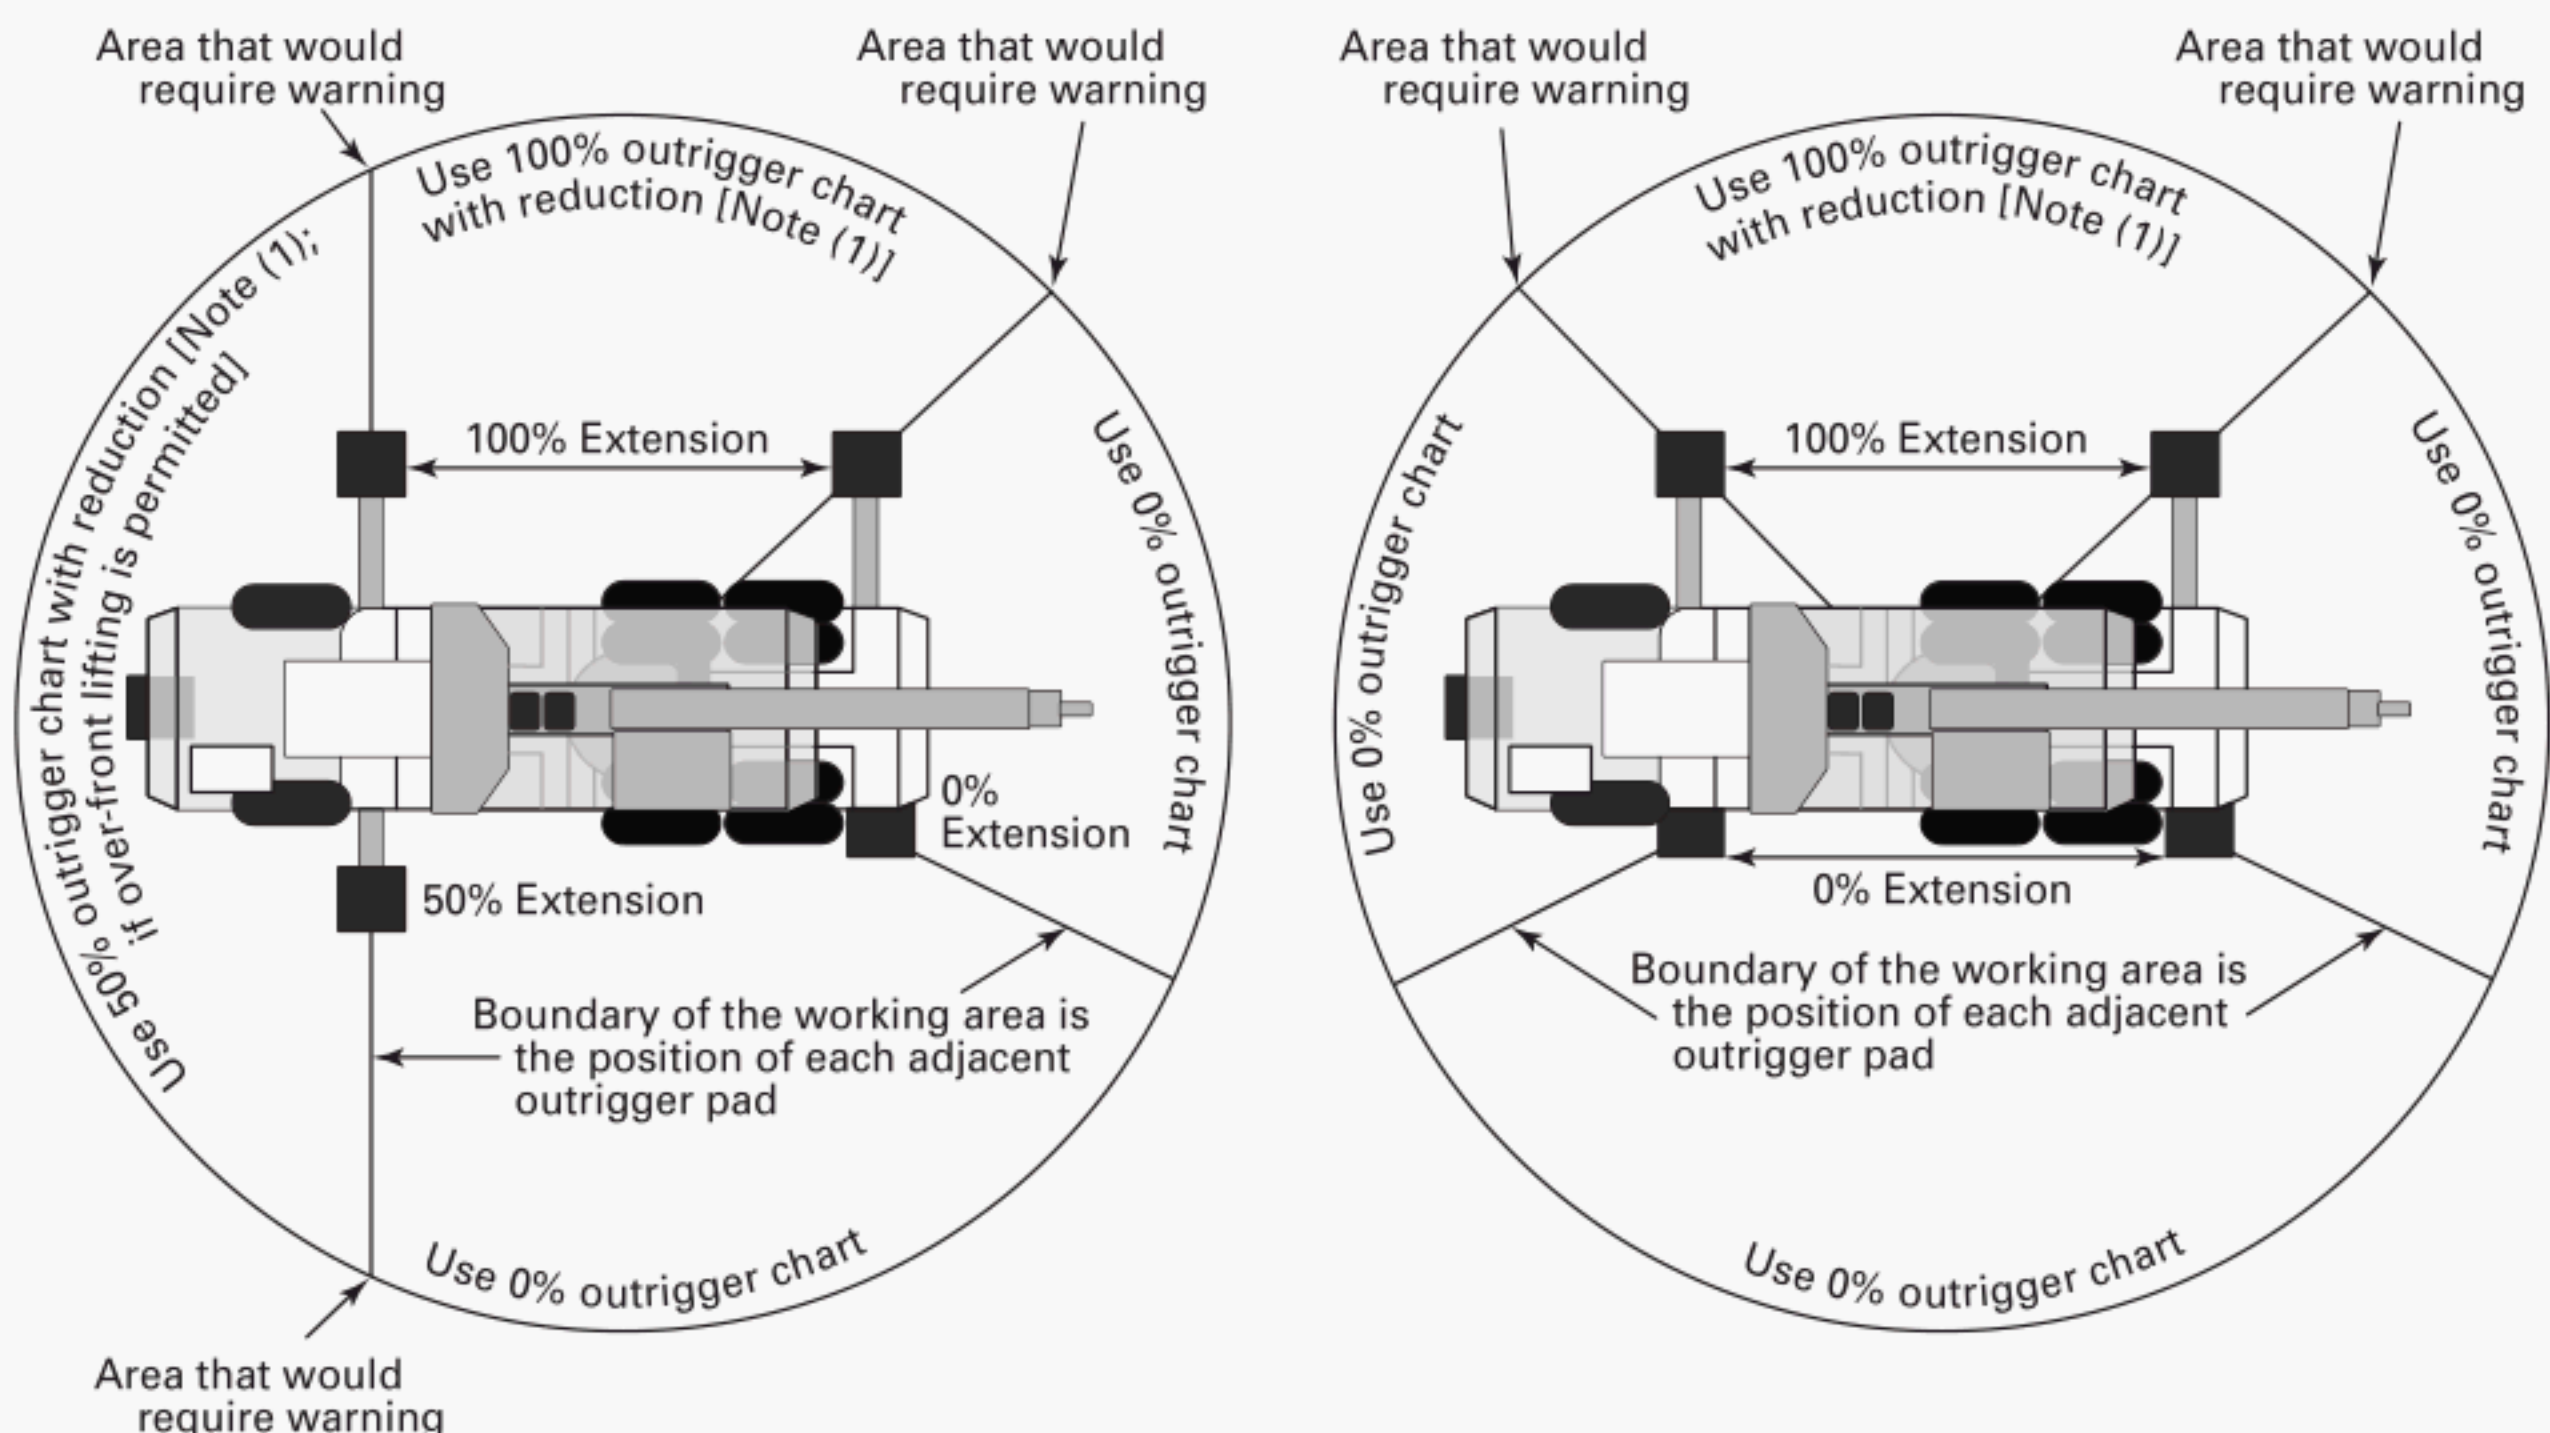Fig. 16 Examples of Typical Unequal Outrigger Extension Positions

GENERAL NOTE: These examples are not recommendations of load/capacity charts to be used for any specific outrigger configuration. These examples are only for clarification of para. 5-3.2.1.5(h)(3).

NOTE:

(1) If any outrigger on a side opposite the lifting area is not fully extended, the manufacturer's load/capacity chart being used shall be appropriately reduced and consideration shall be given to possible backward stability limitations.

(2) The superstructure shall be secured against rotation (or the boom placed in a boom rack mounted on the carrier), except when negotiating turns when there is an operator in the cab or the boom is supported on a dolly.

(3) The empty hook shall be lashed or otherwise restrained so that it cannot swing freely.

(m) Before traveling a crane with a load, it shall be determined that this practice is not prohibited by the manufacturer. If not, a designated person shall be responsible for the operation. Decisions such as the necessity to reduce crane ratings, load position, boom location, ground support, travel route, and speed of movement shall be in accordance with that person's determination. Specified tire pressure shall be maintained. The boom should be carried in line with the direction of travel. Sudden starts and stops should be avoided. Tag or restraint lines should be used to control swinging of the load.

(n) A crane with or without a load shall not be traveled with the boom so high that it may bounce back over the cab.

(o) When rotating the crane, sudden starts and stops shall be avoided. Rotational speed shall be such that the

load does not swing out beyond the radius at which it can be controlled. A tag or restraint line shall be used when rotation of the load is hazardous.

(p) When a crane is to be operated with the boom at a fixed angle, the boom-hoist pawl or other positive holding device shall be engaged.

(q) *Use of Winch Heads*

(1) Fiber and wire rope shall not be handled on a winch head without the knowledge of the operator.

(2) While a winch head is being used, the operator shall be within convenient reach of the power unit control lever.

(r) Personnel shall not be permitted to ride the bare hook or a load of material suspended from the hook.

5-3.2.2 Personnel Lifting

This volume recognizes that mobile and locomotive cranes are designed and intended for handling materials and not personnel. Personnel are only permitted to ride in a personnel platform supported by the crane load line attachment or boom-mounted platform when used in accordance with the requirements of ASME B30.23 and the crane manufacturer's instructions. The crane

shall not be used for other purposes while handling personnel. (Refer to ASME B30.23.)

SECTION 5-3.3: SIGNALS

5-3.3.1 General

(a) Communication between the crane operator and the signalperson shall be maintained continuously during all crane movements. If at any time communication is disrupted, the operator shall stop all crane movements until communication is restored and a proper signal is given and understood.

(b) If the operator has any concerns regarding the requested movement of the crane or needs to communicate with the signalperson, the operator shall stop all crane movement. Crane movement shall not resume until the operator and the signalperson agree the issue at hand has been resolved.

(c) If it is desired to give instructions to the operator, other than those provided by the established signal system, the crane movements shall be stopped.

5-3.3.2 Standard Signals

Standard signals to the operator shall be in accordance with the standards prescribed in para. 5-3.3.4 or 5-3.3.5. Signals shall be discernible or audible at all times. No response shall be made unless signals are clearly understood.

5-3.3.3 Signalperson Qualifications

Prior to signaling crane operations, all signalpersons shall be tested by a designated person and demonstrate their qualifications in the following areas:

- (a) basic understanding of crane operation and limitations
- (b) standard hand signals described in para. 5-3.3.4 whenever hand signals are used
- (c) standard voice signals described in para. 5-3.3.5 whenever voice signals are used

5-3.3.4 Standard Hand Signals

Hand signals shall be as shown in Fig. 17 and shall be posted conspicuously at the job site.

5-3.3.5 Standard Voice Signals

Prior to beginning lifting operations using voice signals, the signals shall be discussed and agreed upon by the person directing lifting operations, the crane operator, and the appointed signalperson.

(a) Telephones, radios, or equivalent, if used, shall be tested before lifting operations begin. If the system is battery powered, extra batteries should be available at the job site.

(b) Prior to commencing a lift, the operator and signalperson shall contact and identify each other.

(c) All directions given to the crane operator by the signalperson shall be given from the operator's direction perspective (e.g., swing right).

(d) Each series of voice signals shall contain three elements stated in the following order:

- (1) function and direction
- (2) distance and/or speed
- (3) function stop

NOTE: These are some examples of signals.

- (a) swing right 50 ft, 25 ft, 15 ft, 10 ft, 5 ft, 2 ft, swing stop
- (b) load down 100 ft, 50 ft, 40 ft, 30 ft, . . . 2 ft, load stop
- (c) load up slow, slow, slow, load stop

(e) For lifting operations using voice signals, the person directing lifting operations shall consider the complexity of the lift, the capabilities of the particular crane, the experience and skill of the operator and signalperson, and the ability to communicate the necessary signals before permitting multiple simultaneous crane function signals.

5-3.3.6 Special Signals

For operations or crane attachments not covered by para. 5-3.3.4, 5-3.3.5, or 5-3.3.7, additions to or modifications of the standard signal procedures may be required. In all such cases, the required special signals shall be agreed upon in advance by the person directing lifting operations, the crane operator, and the signalperson. These special signals should not be in conflict with the standard signals.

5-3.3.7 Audible Travel Signals

When moving the vehicle, the following signals shall be used:

- (a) STOP: one short audible signal
- (b) GO AHEAD: two short audible signals
- (c) BACK UP: three short audible signals

5-3.3.8 Audible Emergency Signal

Emergency signals can be given by anyone. The signal used shall be agreed upon for each job site location and it shall meet the requirements of para. 5-3.3.6 (e.g., multiple short audible signals or a continuous audible signal).

SECTION 5-3.4: MISCELLANEOUS

5-3.4.1 Rail Clamps

Rail clamps, if used, should have some slack between the point of attachment to the rail and the end fastened to the crane. Rail clamps shall not be used as a means of restraining tipping of a locomotive crane.

5-3.4.2 Ballast or Counterweight

Cranes shall not be operated without the ballast or counterweight being in place as specified by the crane

Fig. 17 Standard Hand Signals for Controlling Crane Operations









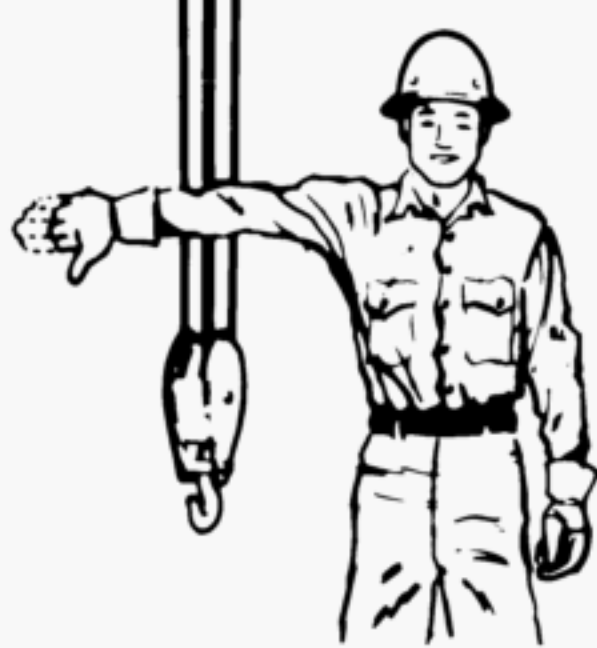
 <p>HOIST. With forearm vertical, forefinger pointing up, move hand in small horizontal circle.</p>	 <p>LOWER. With arm extended downward, forefinger pointing down, move hand in small horizontal circle.</p>	 <p>USE MAIN HOIST. Tap fist on head; then use regular signals.</p>
 <p>USE WHIPLINE (Auxiliary Hoist). Tap elbow with one hand; then use regular signals.</p>	 <p>RAISE BOOM. Arm extended, fingers closed, thumb pointing upward.</p>	 <p>LOWER BOOM. Arm extended, fingers closed, thumb pointing downward.</p>
 <p>MOVE SLOWLY. Use one hand to give any motion signal and place other hand motionless in front of hand giving the motion signal. (Hoist slowly shown as example.)</p>	 <p>RAISE THE BOOM AND LOWER THE LOAD. With arm extended, thumb pointing up, flex fingers in and out as long as load movement is desired.</p>	 <p>LOWER THE BOOM AND RAISE THE LOAD. With arm extended, thumb pointing down, flex fingers in and out as long as load movement is desired.</p>

Fig. 17 Standard Hand Signals for Controlling Crane Operations (Cont'd)




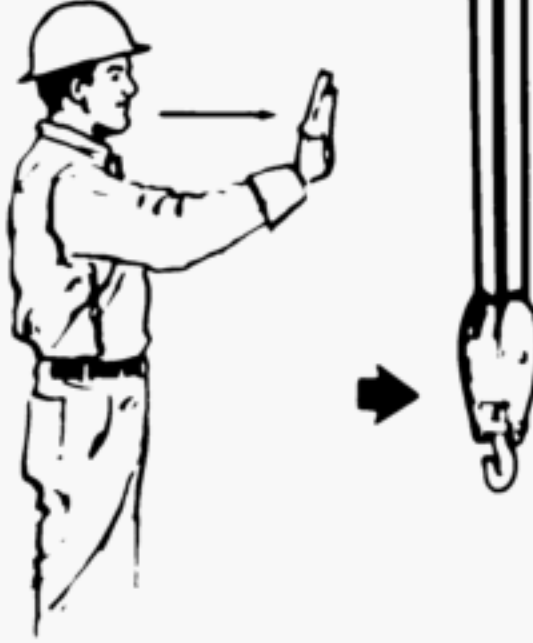


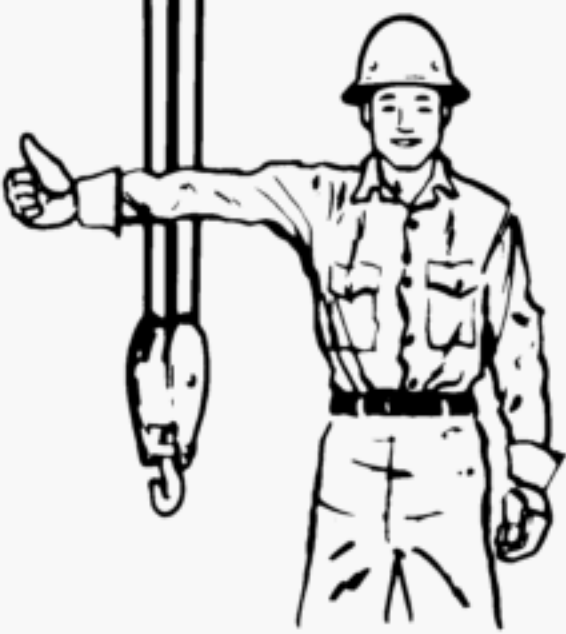


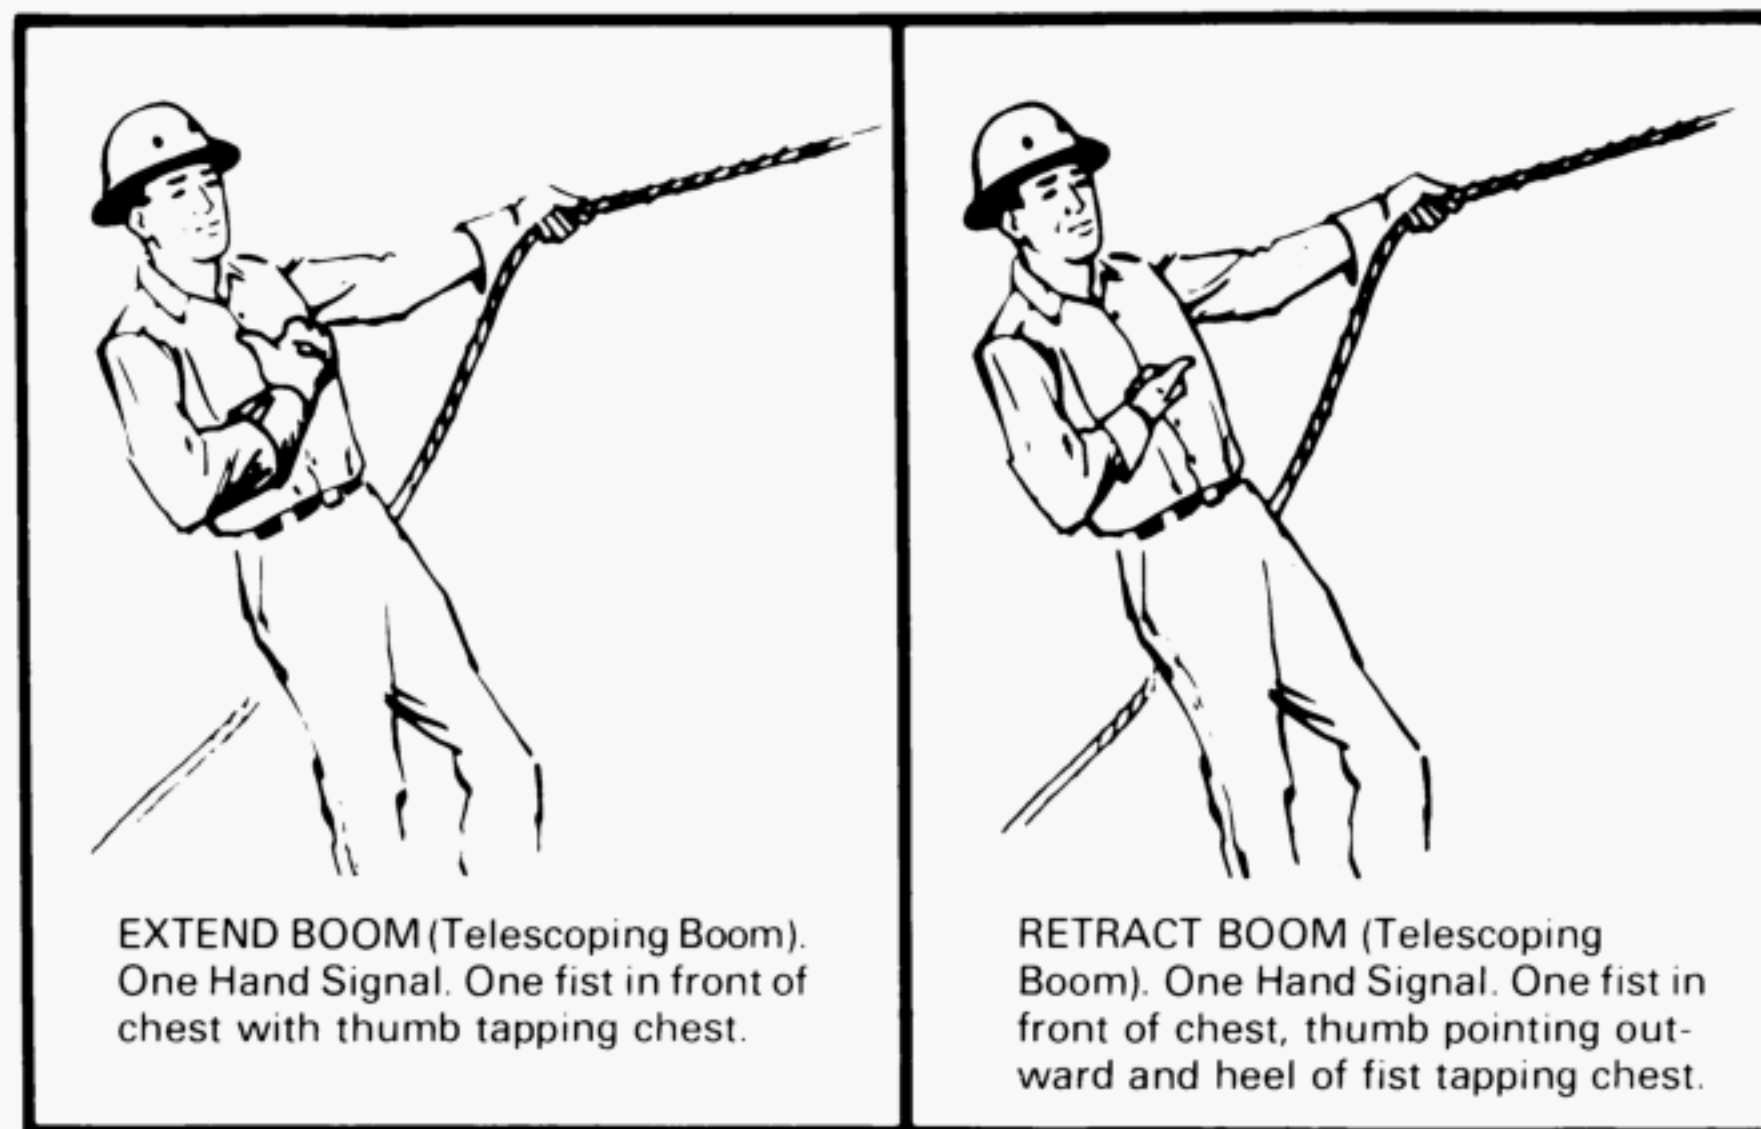
 <p>SWING. Arm extended, point with finger in direction of swing of boom.</p>	 <p>STOP. Arm extended, palm down, move arm back and forth horizontally.</p>	 <p>EMERGENCY STOP. Both arms extended, palms down, move arms back and forth horizontally.</p>
 <p>TRAVEL. Arm extended forward, hand open and slightly raised, make pushing motion in direction of travel.</p>	 <p>DOG EVERYTHING. Clasp hands in front of body.</p>	 <p>TRAVEL (Both Tracks). Use both fists in front of body, making a circular motion about each other, indicating direction of travel, forward or backward. (For land cranes only.)</p>
 <p>TRAVEL. (One Track) Lock the track on side indicated by raised fist. Travel opposite track in direction indicated by circular motion of other fist, rotated vertically in front of body. (For land cranes only.)</p>	 <p>EXTEND BOOM (Telescoping Booms). Both fists in front of body with thumbs pointing outward.</p>	 <p>RETRACT BOOM (Telescoping Booms). Both fists in front of body with thumbs pointing toward each other.</p>

Fig. 17 Standard Hand Signals for Controlling Crane Operations (Cont'd)

manufacturer. Under specific conditions, such as during crane assembly or unusual boom configurations, the crane manufacturer's recommendations for the amount of ballast or counterweight shall be adhered to. The maximum ballast or counterweight approved by the manufacturer for use on a given machine shall not be exceeded. Unauthorized addition of ballast or counterweight constitutes a hazard in two ways.

(a) The structural competence of the various parts of the machine may be exceeded, causing failure.

(b) The manufacturer's margin of backward stability may be exceeded and the crane may turn over backwards or damage various parts of the machine.

5-3.4.3 Rerailing Locomotive Cranes

If a locomotive crane has been derailed, a wrecking frog or car replacer (or its equivalent) should be used and the crane should be hauled back onto the track by external power.

5-3.4.4 Swinging Locomotive Cranes

A locomotive crane shall not be swung into a position where railway cars on an adjacent track might strike it, until it has been ascertained that cars are not being moved on the adjacent track and that proper flag protection has been established.

5-3.4.5 Operating Near Electric Power Lines

5-3.4.5.1 General. This volume recognizes that operating mobile cranes where they can become electrified from electric power lines is an extremely hazardous practice. It is advisable to perform the work so there is no possibility of the crane, load line, or load becoming

a conductive path. [See Fig. 18, illustrations (a) and (b).] Cranes shall not be used to handle materials stored under electric power lines unless any combination of boom, load, load line, or machine component cannot enter the prohibited zone. Operating mobile cranes where they can become electrified with electric power lines is not recommended unless there is no less hazardous way to perform the job.

Any overhead wire shall be considered to be an energized line unless and until the person owning such line or the electrical utility authorities indicate that it is not an energized line. Crane operators shall not rely on the coverings of wires for their protection. Four conditions to consider when operating a mobile crane near electric power lines are the following:

(a) power lines de-energized and grounded as in para. 5-3.4.5.2

(b) power lines energized, crane operating less than the erected/fully extended boom length away as in para. 5-3.4.5.3 [see Fig. 18, illustration (c)]

(c) power lines energized, crane within prohibited zone as in para. 5-3.4.5.4

(d) crane in transit, no load, and boom lowered as in para. 5-3.4.5.5

5-3.4.5.2 Crane Operation Near De-energized and Grounded Electric Power Lines. This is the preferred condition under which the operation can be performed. The hazard of injury or death due to electrocution has been removed. (07)

The following steps shall be taken to ensure de-energization of the power lines:

(a) The power company or owner of the power lines shall de-energize the lines.

Fig. 18 Danger Zone for Cranes and Lifted Loads Operating Near Electrical Transmission Lines




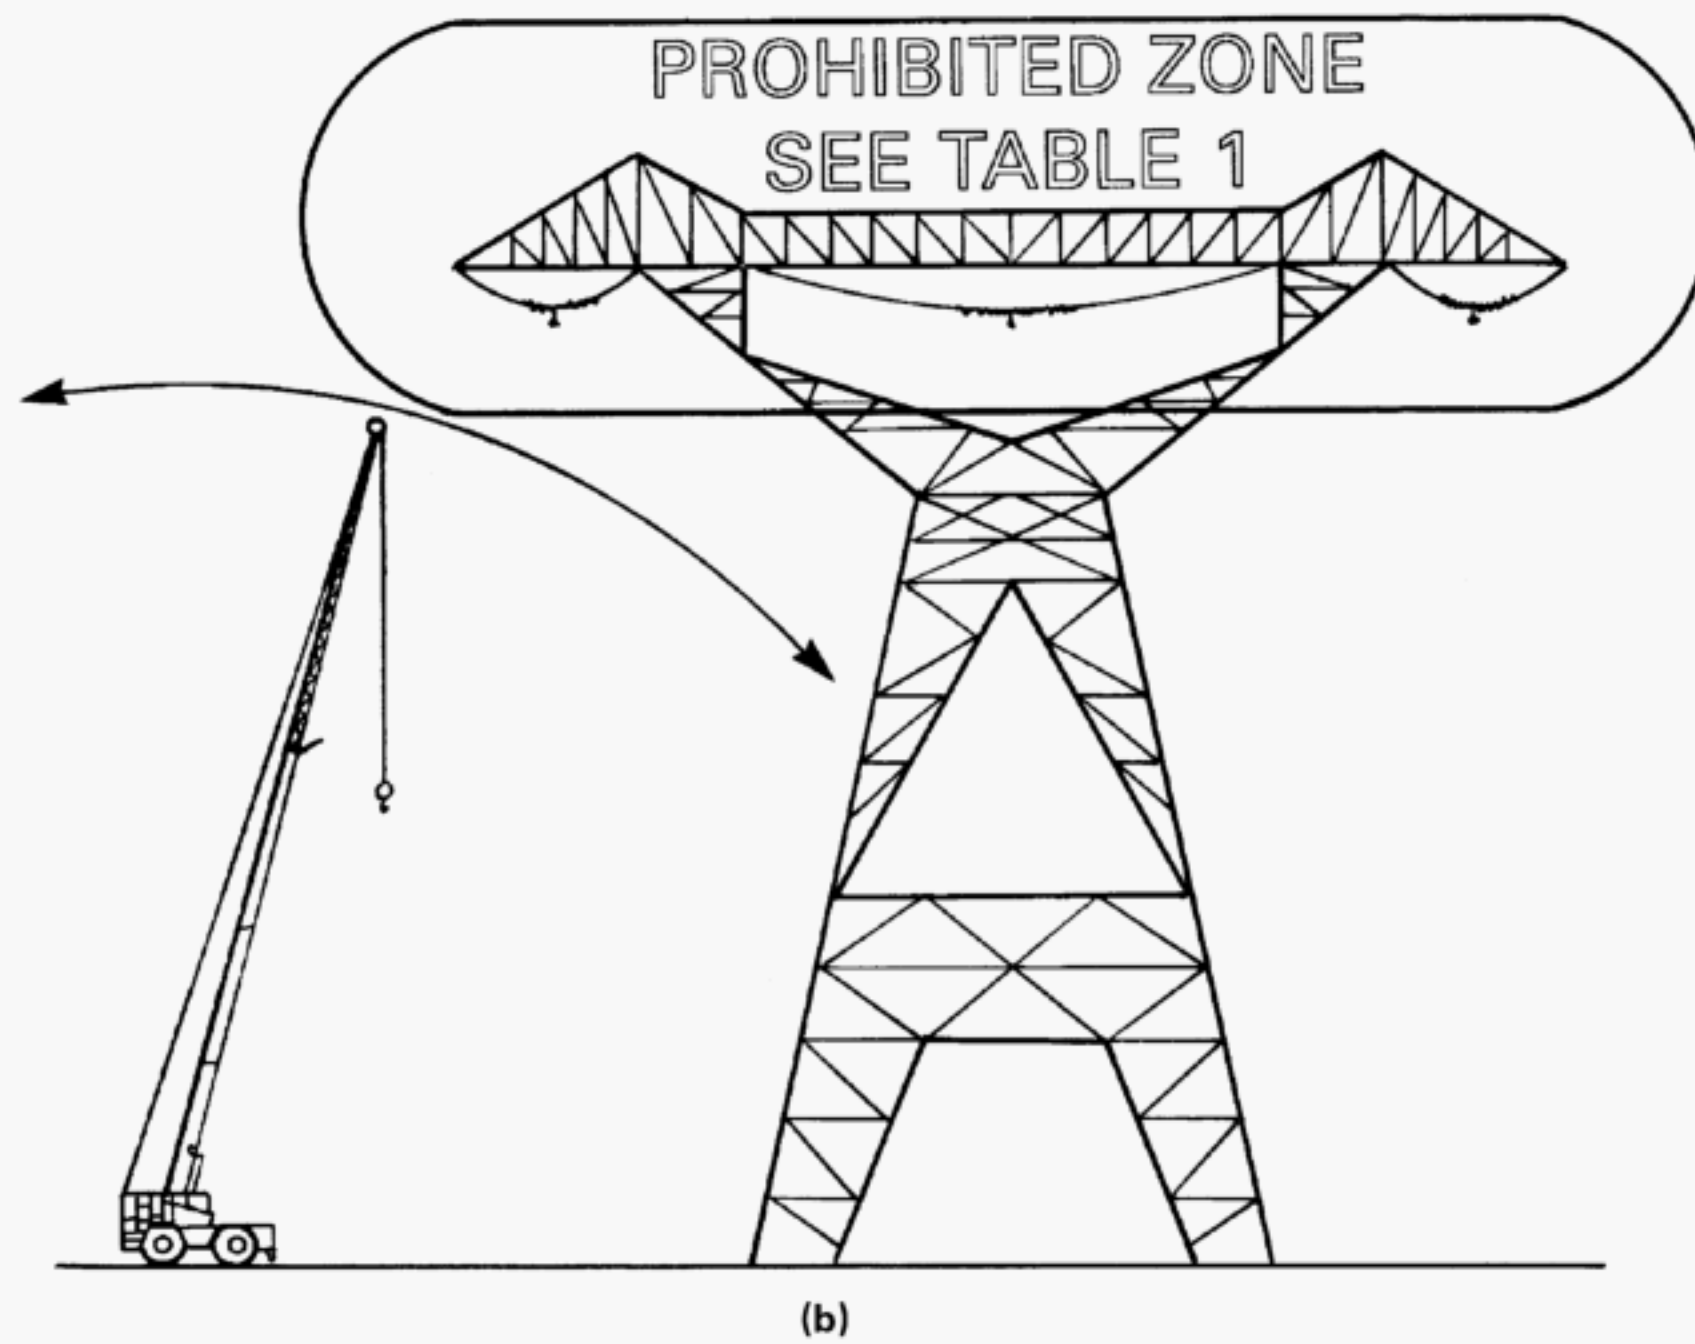


Fig. 18 Danger Zone for Cranes and Lifted Loads Operating Near Electrical Transmission Lines (Cont'd)

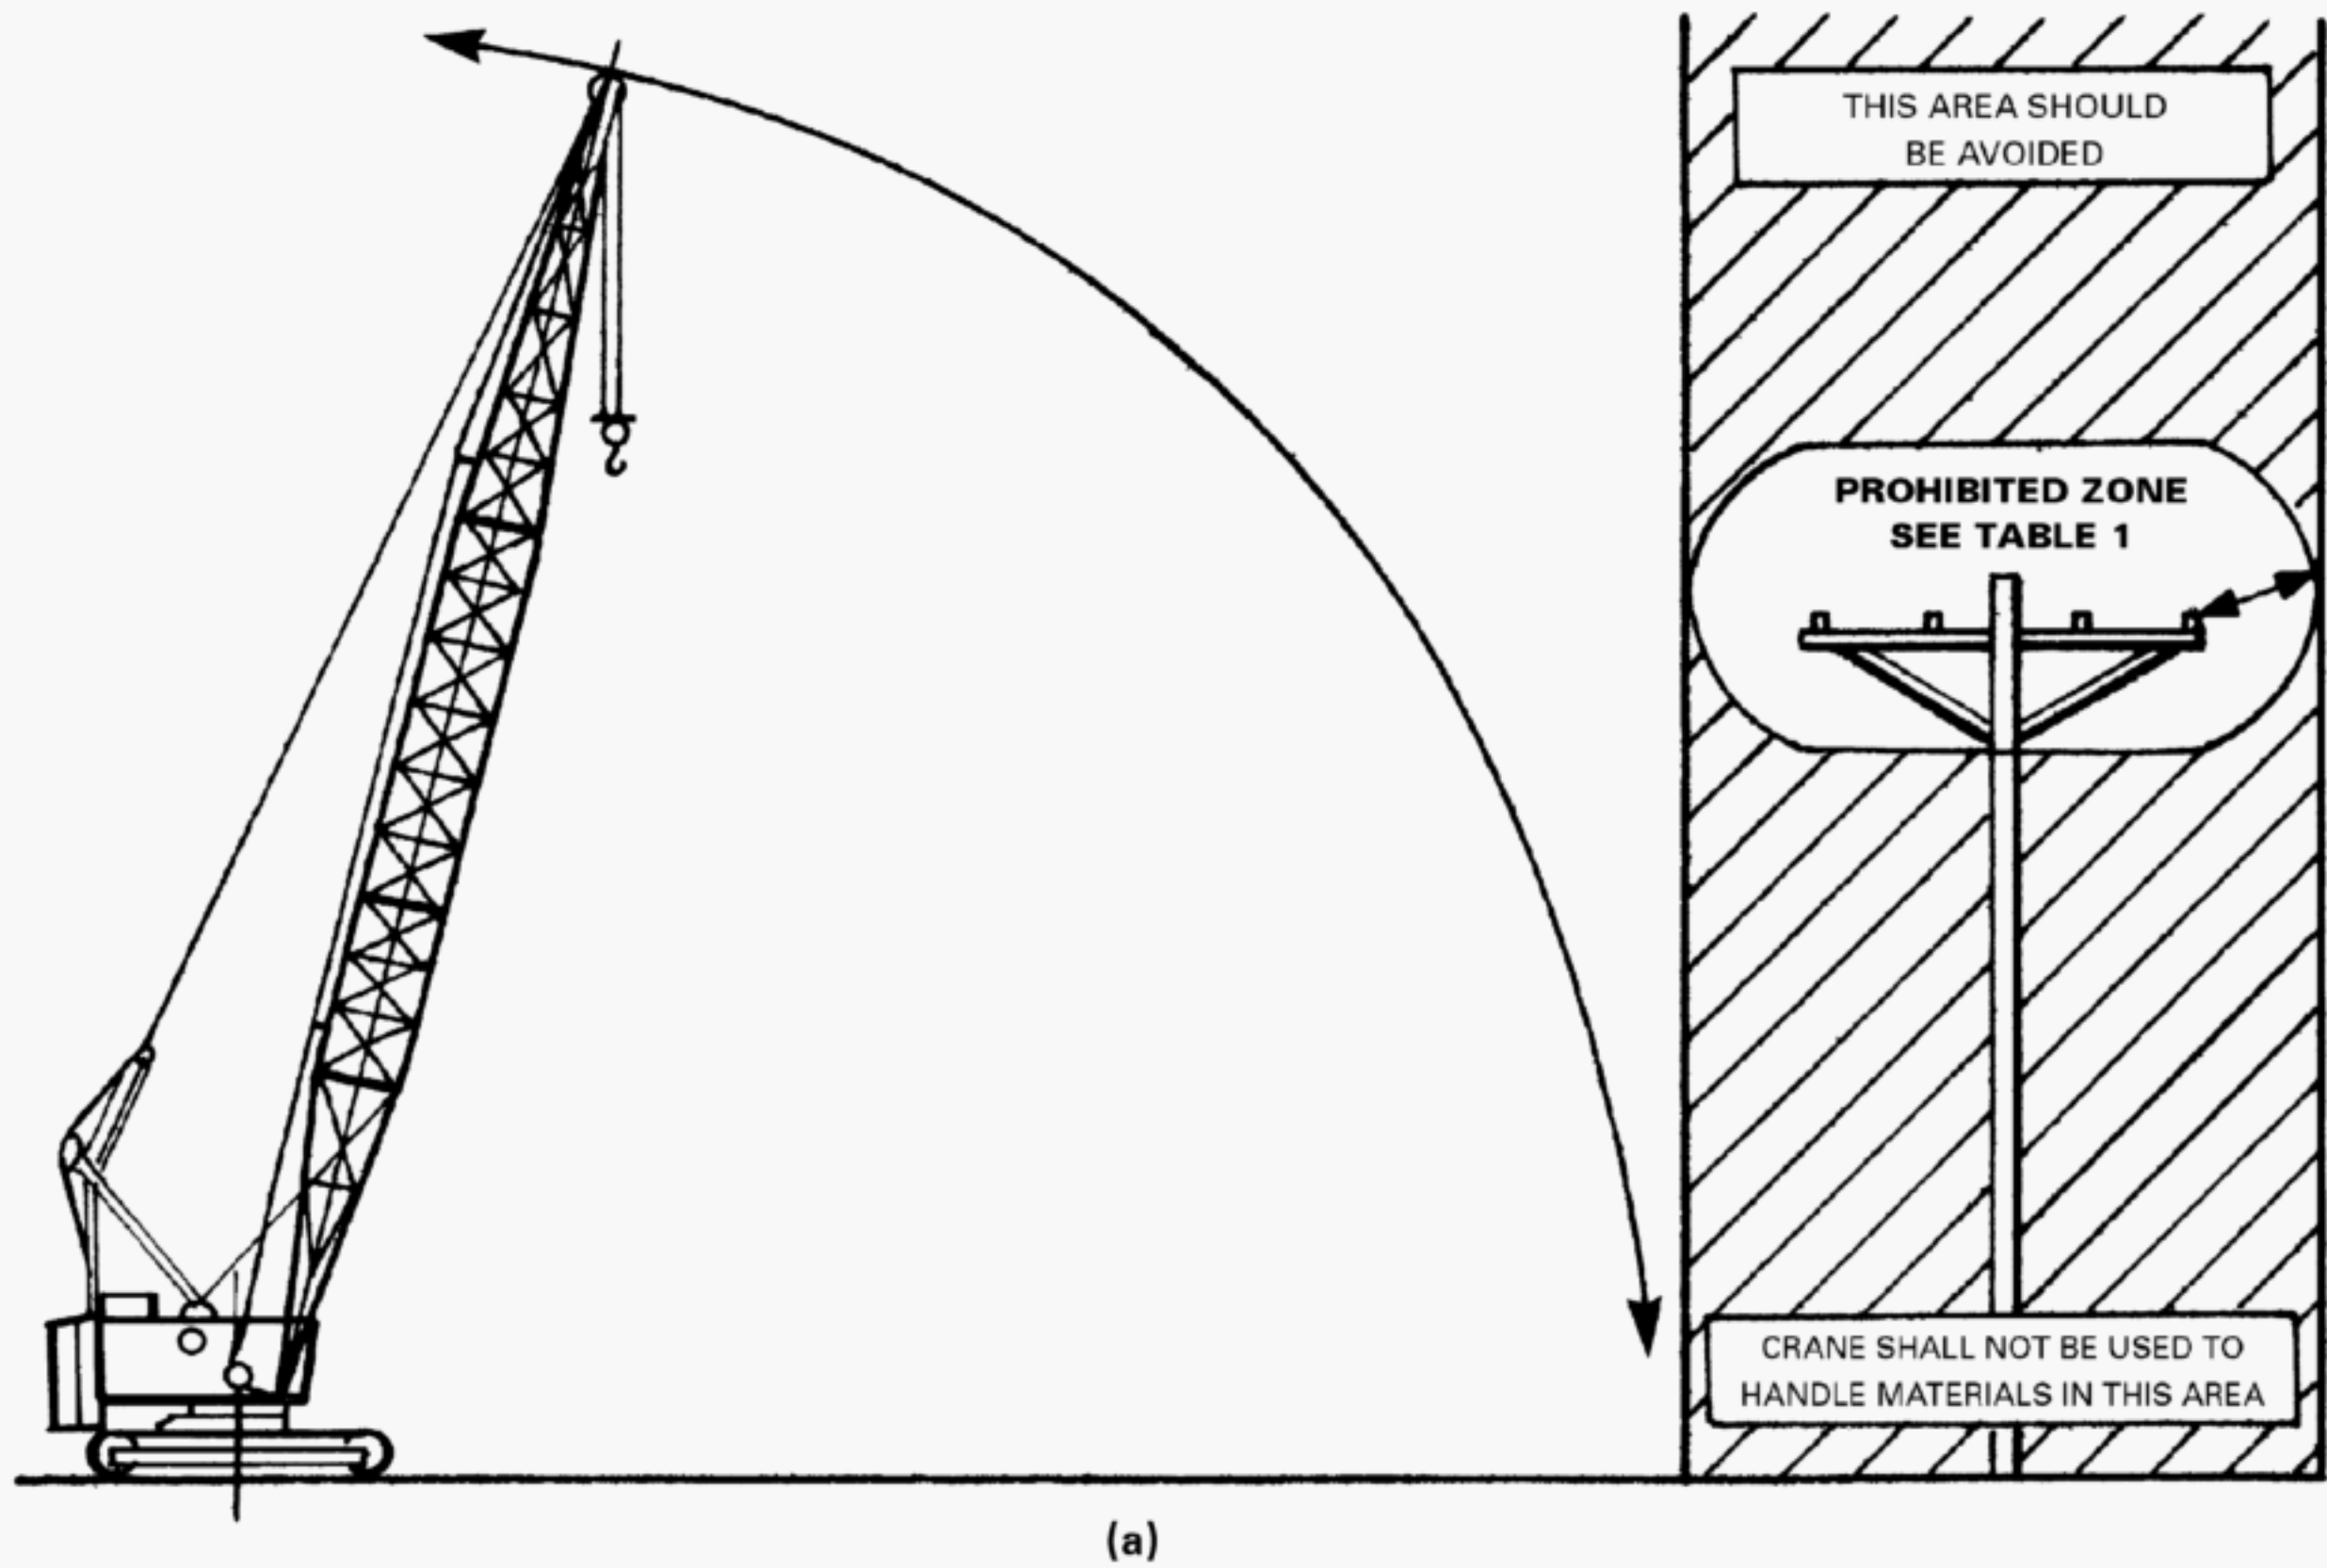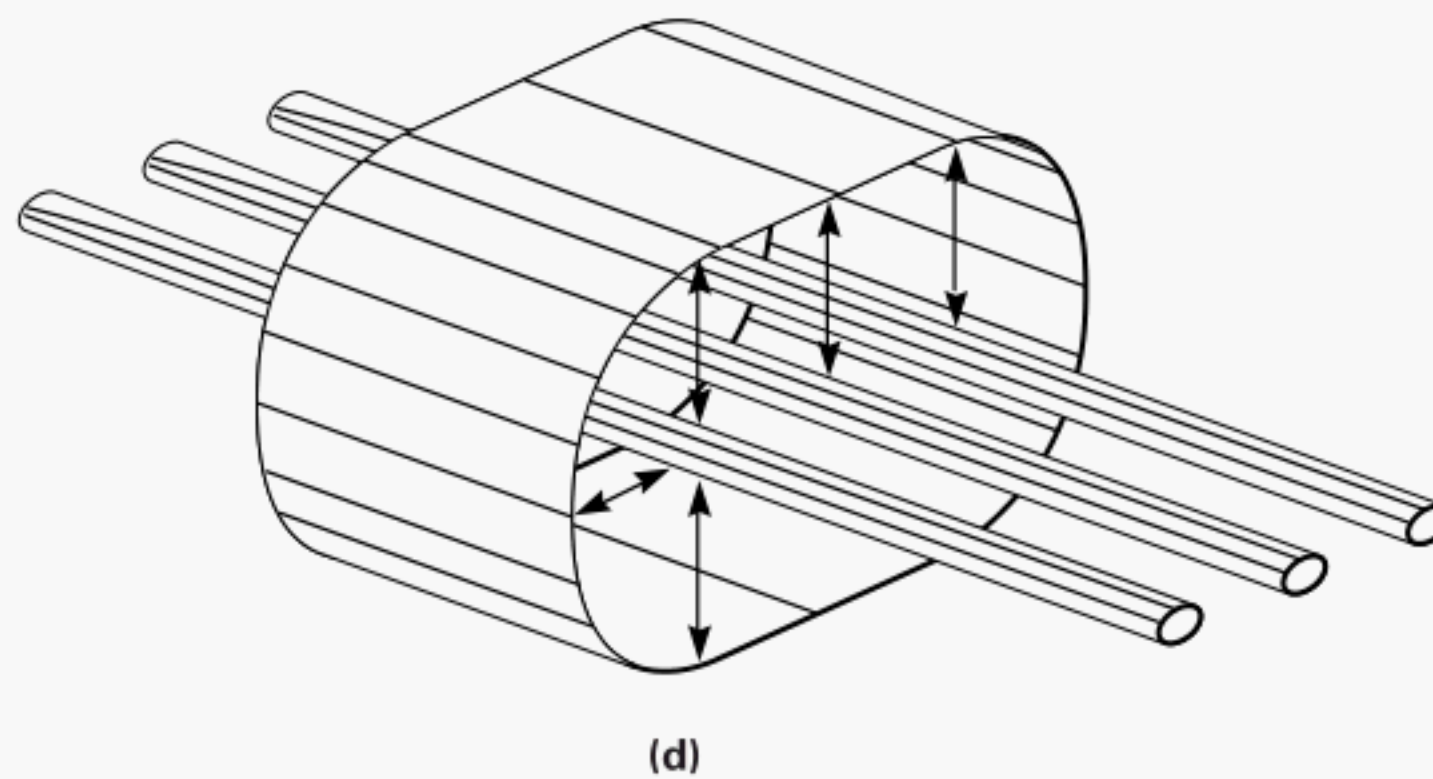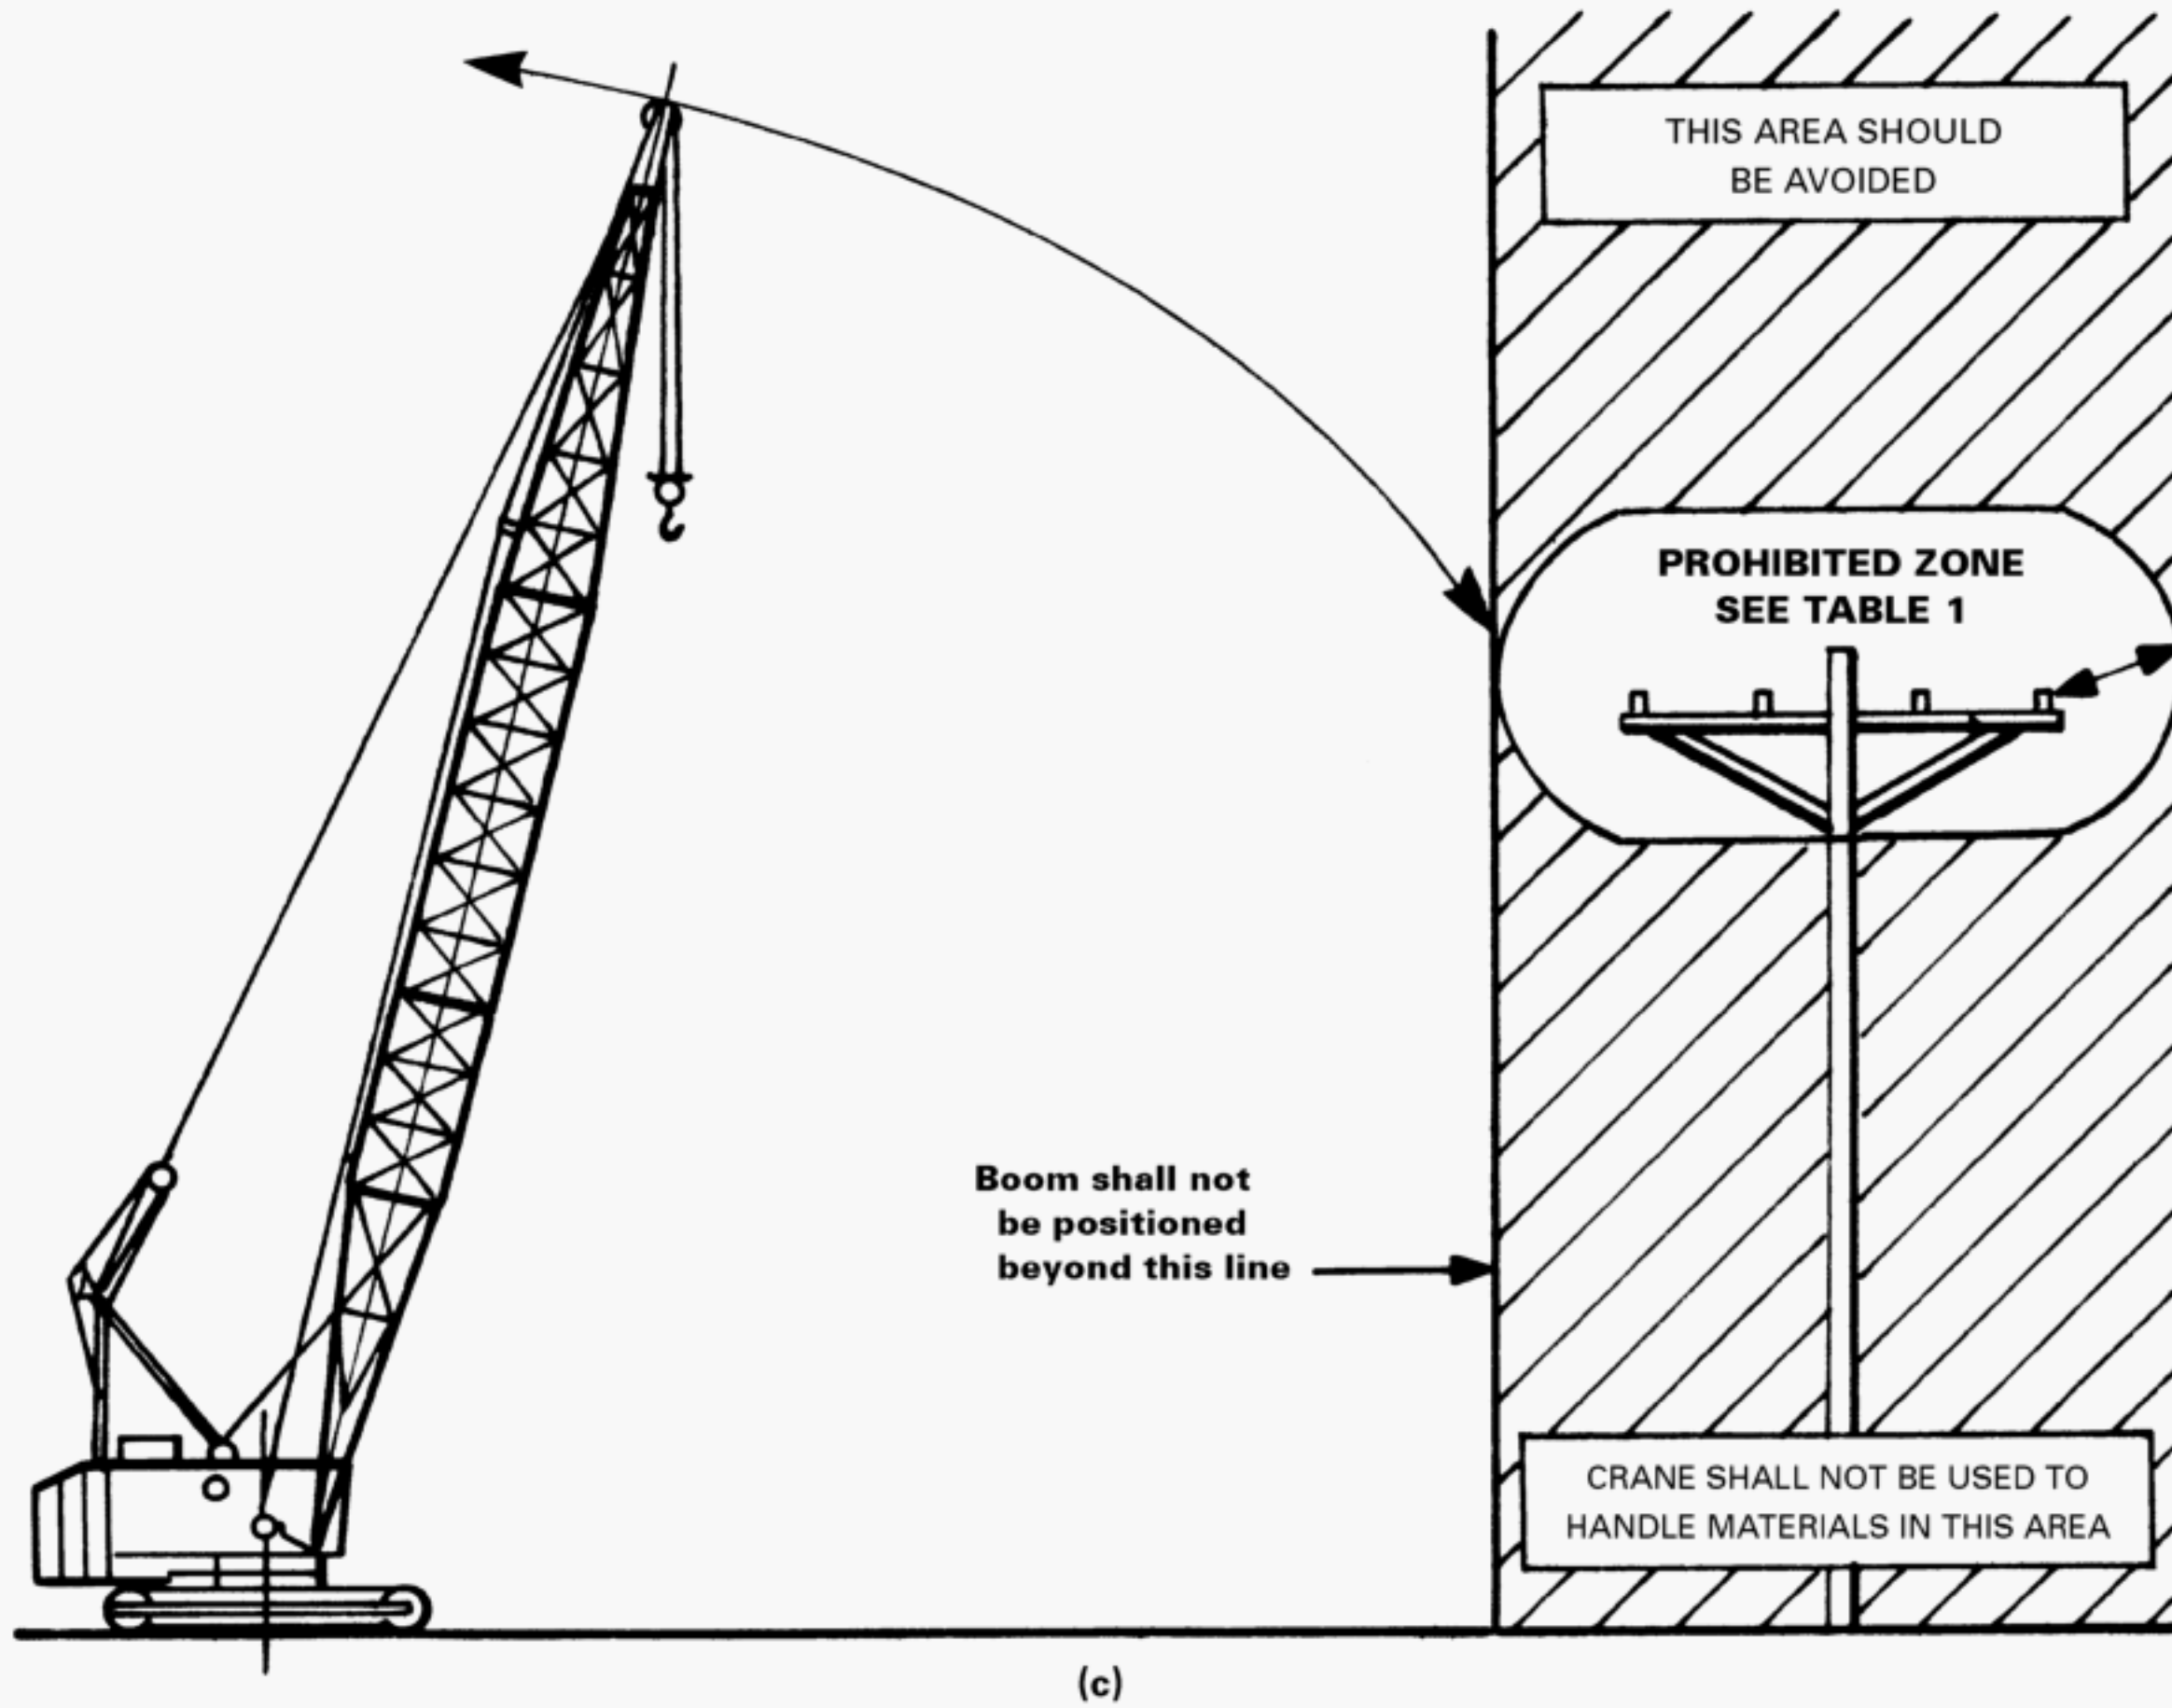

GENERAL NOTE: See Table 1 for minimum radial distance of prohibited zone.

Table 2 Required Clearance for Normal Voltage in Operation Near High-Voltage Power Lines and Operation in Transit With No Load and Boom or Mast Lowered

Normal Voltage, kV (Phase to Phase)	Minimum Required Clearance, ft (m) [Note (1)]
Operation Near High-Voltage Power Lines	
Up to 50	10 (3.05)
Over 50 to 200	15 (4.60)
Over 200 to 350	20 (6.10)
Over 350 to 500	25 (7.62)
Over 500 to 750	35 (10.67)
Over 750 to 1,000	45 (13.72)
Operation in Transit With No Load and Boom or Mast Lowered	
Up to 0.75	4 (1.22)
Over 0.75 to 50	6 (1.83)
Over 50 to 345	10 (3.05)
Over 345 to 750	16 (4.87)
Over 750 to 1,000	20 (6.10)

NOTE:

- (1) Environmental conditions such as fog, smoke, or precipitation may require increased clearances.

(b) The lines shall be visibly grounded to avoid electrical feedback and appropriately marked at jobsite location.

(c) The necessity for grounding of wiring that has a manufacturer's applied coating of insulation and is a 600-V service or less shall be determined by electrical utilities or the owner of the power line.

(d) A qualified representative of the owner of the lines or a designated representative of the electrical utility shall be on the site to verify that the steps of paras. 5-3.4.5.2(a) and (b) have been completed and that the lines are not energized.

(e) Durable signs shall be installed at the operator's station and on the outside of the crane warning that electrocution or serious bodily injury may occur unless minimum clearances, as specified in Table 2 [see Table 2 and Fig. 18, illustration (d)], are maintained between the crane or the load being handled and energized power lines.

(f) If cage-type boom guards, insulating links, or proximity warning devices are used on cranes, such devices shall not be a substitute for the requirements of para. 5-3.4.5, even if such devices are required by law or regulation. In view of the complex, invisible, and lethal nature of the electrical hazard involved and to lessen the potential of false security, instructions on the electrical hazard involved, operating conditions for the devices, limitations of such devices, and testing requirements prescribed by the device manufacturer, if used, shall be understood by the crane operator, crew, and load-handling personnel. The required clearances to

electrical lines, established in Table 2, shall be maintained, regardless of any devices used on the crane.

5-3.4.5.3 Crane Operation Within the Erected/Fully Extended Boom Length of the Prohibited Zone, With the Power Lines Energized. The following steps shall be taken to minimize the hazard of electrocution or serious injury as a result of contact between the energized power lines and the crane, load line, or load [see Fig. 18, illustration (c)].

(a) An on-site meeting between project management and a qualified representative of the owner of the lines or a designated representative of the electrical utility shall take place to establish the procedures to safely complete the operations.

(b) The specified clearance between the power lines and the crane, load line, and load shall be maintained at all times [see Table 2 and Fig. 18, illustration (d)].

(c) Load control, when required, shall use tag lines of a nonconductive type.

(d) A qualified signalperson(s) whose sole responsibility is to verify that the required clearance is maintained shall be in constant contact with the crane operator.

(e) No one shall be permitted to touch the crane or the load unless the signalperson indicates it is safe to do so.

(f) Operation of boom and load over electric power lines is extremely dangerous, due to perception of distance and multiple contact points as viewed from the position of the operator and/or position of the signalperson. The operator should avoid operating the crane, with or without a load, in this area.

(g) The horizontal and vertical distance of movement of long span lines due to the wind shall be added to the minimum clearance distance as specified in Table 2 [see Table 2 and Fig. 18, illustration (d)]. A qualified representative of the owner of the lines or a designated representative of the electrical utility shall be consulted for specific distances.

(h) Devices such as ribbons or balls should be attached by a qualified person to the power lines to improve visibility, or equivalent means employed to aid in location of the prohibited zone.

(i) Durable signs shall be installed at the operator's station and on the outside of the crane warning that electrocution or serious bodily injury may occur unless minimum clearances, as specified in Table 2 [see Table 2 and Fig. 18, illustration (d)], are maintained between the crane or the load being handled and energized power lines.

(j) If cage-type boom guards, insulating links, or proximity warning devices are used on cranes, such devices shall not be a substitute for the requirements of para. 5-3.4.5, even if such devices are required by law or regulation. In view of the complex, invisible, and lethal nature of the electrical hazard involved and to

lessen the potential of false security, instructions on the electrical hazard involved, operating conditions for the devices, limitations of such devices, and testing requirements prescribed by the device manufacturer, if used, shall be understood by the crane operator, crew, and load-handling personnel. The required clearances to electrical lines, established in Table 2, shall be maintained, regardless of any devices used on the crane.

5-3.4.5.4 Crane Operation Within the Prohibited Zone With the Electric Power Lines Energized. Steps shall be taken to minimize the hazard of electrocution or serious injury as a result of contact between the energized power lines and the crane, load line, or load.

(a) Before such operations take place, a qualified person together with a qualified representative of the utility or an engineer qualified in power line transmission shall, after visiting the site, determine if this is the most feasible way to complete the operation and set minimum required clearances and procedures for such operations. These operations shall be under their supervision. The following may be required:

(1) crane/load grounded to line neutral by the utility

(2) electrical system protective devices that automatically reenergize the circuit after a power line contact occurrence should be blocked or disengaged to inhibit this function

(3) insulated barriers that are not a part of nor an attachment to the crane and will not allow contact between the energized electric power lines and the crane, load lines, or load

(4) nonconductive barricades to restrict access to the crane work area

(b) Load control, when required, shall use tag lines of a nonconductive type.

(c) A qualified signalperson(s), whose sole responsibility is to verify that the clearances established in para. 5-3.4.5.4(a) are maintained, shall be in constant contact with the crane operator.

(d) The person(s) responsible for the operation shall alert and warn the crane operator and all persons working around or near the crane about the hazard of electrocution or serious injury and instruct them on how to avoid the hazard.

(e) All nonessential personnel shall be removed from the crane work area.

(f) No one shall be permitted to touch the crane or the load unless the signalperson indicates it is safe to do so.

(g) If cage-type boom guards, insulating links, or proximity warning devices are used on cranes, such devices shall not be a substitute for the requirements of

para. 5-3.4.5, even if such devices are required by law or regulation. In view of the complex, invisible, and lethal nature of the electrical hazard involved and to lessen the potential of false security, instructions on the electrical hazard involved, operating conditions for the devices, limitations of such devices, and testing requirements prescribed by the device manufacturer, if used, shall be understood by the crane operator, crew, and load-handling personnel. The required clearances to electrical lines, established in Table 2, shall be maintained, regardless of any devices used on the crane.

5-3.4.5.5 Operations in Transit With No Load and Boom Lowered

(a) While in transit with no load and boom and boom support system lowered, the clearance shall be as specified in Table 2 [see Table 2 and Fig. 18, illustration (d)].

(b) When planning transit of the crane, the effect of speed and terrain on boom and crane movement shall be considered.

5-3.4.6 Footing

Firm footing under both crawler tracks, all tires, or individual outrigger pads should be level within 1%. Where such a footing is not otherwise supplied, it should be provided by timbers, cribbing, or other structural members to distribute the load so as not to exceed the allowable bearing capacity of the underlying material.

5-3.4.7 Cabs

(a) Necessary clothing and personal belongings shall be stored in such a manner as to not interfere with access or operation.

(b) Tools, oil cans, waste, and other necessary articles shall be stored in the toolbox, and shall not be permitted to lie loose in or about the cab.

5-3.4.8 Refueling

(a) When refueling with gasoline using a portable container, it shall be a safety-type can equipped with an automatic closing cap and a flame arrester.

(b) Machines shall not be refueled while the engine is running.

(c) Smoking or open flames shall be prohibited in the refueling area.

5-3.4.9 Fire Extinguishers

(a) A portable fire extinguisher, with a basic minimum extinguisher rating of 10 BC, shall be installed in the cab or at the machinery housing.

(b) Operating and maintenance personnel shall be familiar with the use and care of the fire extinguishers provided.

ASME B30.5 INTERPRETATIONS

Replies to Technical Inquiries November 2003 Through June 2007

FOREWORD

This publication includes all of the written replies issued between the indicated dates by the Secretary, speaking for the ASME B30 Committee, Safety Standards for Cableways, Cranes, Derricks, Hoists, Hooks, Jacks, and Slings, to inquiries concerning interpretations to technical aspects of ASME B30.5, Mobile and Locomotive Cranes.

These replies are taken verbatim from the original letters, except for any typographical corrections and some minor editorial corrections made for the purpose of improved clarity.

These interpretations were prepared in accordance with the accredited ASME procedures. ASME procedures provide for reconsideration of these interpretations when or if additional information is available which the inquirer believes might affect the interpretation. Further, persons aggrieved by this interpretation may appeal to the cognizant ASME Committee or Subcommittee. ASME does not "approve," "certify," "rate," or "endorse" any item, construction, proprietary device, or activity.

Interpretation: 5-76

Subject: ASME B30.5-2000, Para. 5-3.1.2(b)(5), Operator Testing

Date Issued: October 12, 2004

Question: Reference para. 5-3.1.2(b)(5). Does the operator being tested need to successfully complete an operations test on any one crane in any of the groupings (1 through 10) to qualify him/her to operate any crane in that particular grouping, or must they demonstrate proficiency on every crane (make, model, capacity) to be operated?

Reply: The operator only needs to complete an operation test on a specific type crane. The operator does not need to complete an operation test on each specific crane.

Interpretation: 5-77

Subject: ASME B30.5a-2002, Fig. 17, Hand Signals

Date Issued: October 12, 2004

Question: In which direction is the thumb pointing in the Extend Boom (Telescoping Boom) One Hand Signal?

Reply: The thumb is pointed upward toward the chin, while tapping the chest in a manner clearly visible to the operator.

Interpretation: 5-78

Subject: ASME B30.5-2004, Para. 5-3.2.1.3, Attaching the Load

Date Issued: June 22, 2005

Question: Is attaching the load to the rope using a shackle to secure a sling above the ball and also above the hook prohibited?

Reply: Yes.

Interpretation: 5-79

Subject: ASME B30.5-2004, Para. 5-3.1.2(b)(5), Operator Testing

Date Issued: June 22, 2005

Question (1): Does maneuvering include traveling/steering?

Reply (1): Yes.

Question (2): As a contractor we may hire an operator to operate a specific crane type, set up in a ring configuration, where travel is not possible without major disassembly. Can the operator be qualified to operate without traveling/steering the crane?

Reply (2): Yes, where the crane location or configuration does not permit traveling/steering.

Question (3): Can a certifying agency grant certification of an operator who has otherwise passed all the written and practical exams if he/she has not traveled and steered the crane?

Reply (3): ASME does not "approve," "certify," "rate," or "endorse" any item, construction, proprietary device, or activity (see Introduction, Section IX, Request for Interpretation).

Interpretation: 5-80

Subject: ASME B30.5-2004, Para. 5-3.3.3, Signalperson Qualifications

Date Issued: September 26, 2005

Question (1): Does ASME B30.5-2004 define the specific training and testing requirements for "basic understanding of crane operations and limitations" to determine the qualifications necessary for a signalperson?

Reply (1): No.

Question (2): Does ASME B30.5-2004 require the signalperson to know load chart interpretations?

Reply (2): No.

Question (3): What do you mean by basic function and limitation?

Reply (3): Basic crane operations and limitations are addressed throughout ASME B30.5-2004.

Interpretation: 5-81

Subject: ASME B30.5-2004, Para. 5-2.2.2, Rated Load Test

Date Issued: September 26, 2005

Question (1): Does "altered" pertain to removal and installation of manufacturer specified boom sections?

Reply (1): No.

Question (2): How often does a crawler crane need to be load tested?

Reply (2): There is no requirement in B30.5 for a periodic load test on a crawler crane.

Interpretation: 5-82

Subject: ASME B30.5-2004, Section 5-0.1, Scope

Date Issued: May 22, 2006

Background: There is a school of thought that the existence of physical characteristics in a "Types of Mobile Cranes" definition (Section 5-0.2, Definitions) restricts/precludes a crane without that physical characteristic from being included within the Scope of B30.5 (Section 5-0.1). Specifically, in the definitions of "wheel-mounted crane (multiple control stations)" and "wheel-mounted crane (single control station)," and in all B30.5 volumes from 1982 to the current volume, the phrase "station(s) for driving and operating" is present.

The crane in consideration is "wheel-mounted" but is designed to be "towed" to jobsites so it does not have a "station for driving." When all of the types of mobile and locomotive cranes presented in the volumes are considered, the mobile crane configuration closest to the crane in consideration is the "wheel-mounted" type but it has no "driving station."

Question (1): Does NOT having a "station for driving and operating" on a crane that is mounted on wheels and designed to be towed to a jobsite preclude that crane from being designed by the manufacturer to be within the Scope of the B30.5 volume, as defined in Section 5-0.1?

Reply (1): No. Section 5-0.1 states, "...American National Standard B30.5 applies to crawler cranes, locomotive cranes, wheel-mounted cranes, and any variations thereof that retain the same fundamental characteristics."

Question (2): Do cranes meeting the requirements of the B30.5 Scope, Section 5-0.1, also have to completely meet one of the published "Types of Mobile and Locomotive Cranes" definitions found in Section 5-0.2, Definitions, to be considered a B30.5 Mobile Crane?

Reply (2): No. Section 5-0.1 states, "Special adaptations to the general types of machines covered by this volume, where applicable, fall under this scope."

Interpretation: 5-83

Subject: ASME B30.5-2004, Section 5-0.1, Scope

Date Issued: January 31, 2007

Question (1): Are Mobile Self-Erector Tower Cranes included in the Scope, Section 5-0.1 of the ASME B30.5-2004?

Reply (1): The ASME B30 Standards Committee does not endorse products nor determine if a specific piece of equipment falls within a specific B30 volume. The manufacturer must determine which volume is applicable based on the design of the crane and the criteria included in the scope.

The scopes of the B30 Standard and the individual B30 volumes establish the characteristics to be considered by the manufacturer when deciding the applicability of the B30 Standard and a volume to any particular lifting system.

Question (2): Are Mobile Self-Erector Tower Cranes included in the Definitions, Section 5-0.2 of ASME B30.5-2004?

Reply (2): No. None of the B30 Standard volumes define or use the equipment description/title of "Mobile Self-Erector Tower Cranes."

ASME Services

ASME is committed to developing and delivering technical information. At ASME's Information Central, we make every effort to answer your questions and expedite your orders. Our representatives are ready to assist you in the following areas:

ASME Press
Codes & Standards
Credit Card Orders
IMEchE Publications
Meetings & Conferences
Member Dues Status

Member Services & Benefits
Other ASME Programs
Payment Inquiries
Professional Development
Short Courses
Publications

Public Information
Self-Study Courses
Shipping Information
Subscriptions/Journals/Magazines
Symposia Volumes
Technical Papers

How can you reach us? It's easier than ever!

There are four options for making inquiries* or placing orders. Simply mail, phone, fax, or E-mail us and an Information Central representative will handle your request.

Mail
ASME
22 Law Drive, Box 2900
Fairfield, New Jersey
07007-2900

Call Toll Free
US & Canada: 800-THE-ASME
(800-843-2763)
Mexico: 95-800-THE-ASME
(95-800-843-2763)
Universal: 973-882-1167

Fax—24 hours
973-882-1717
973-882-5155

E-Mail—24 hours
Infocentral@asme.org

* Information Central staff are not permitted to answer inquiries about the technical content of this code or standard. Information as to whether or not technical inquiries are issued to this code or standard is shown on the copyright page. All technical inquiries must be submitted in writing to the staff secretary. Additional procedures for inquiries may be listed within.

ASME B30.5-2007

ISBN-13 : 978-0-7918-3121-2

ISBN-10 : 0-7918-3121-3



9 780791 831212



J08307